

Installation Guide

Gigabit Unmanaged Switch

TL-SG1008/TL-SG1008MP

TL-SG1016/TL-SG1016D

TL-SG1024/TL-SG1024D

TL-SG1048

Related Document

This Installation Guide is also available in PDF on our website. To obtain the latest documentation and product information, please visit the official website:

<http://www.tp-link.com>

About this Installation Guide

This Installation Guide describes the hardware characteristics, installation methods and the points that should be attended to during the installation. This Installation Guide is structured as follows:

Chapter 1 Introduction.

This chapter describes the external components of the switch.

Chapter 2 Installation.

This chapter illustrates how to install the switch.

Chapter 3 Connection.

This chapter illustrates how to do the physical connection of the switch.

Appendix A Troubleshooting.

Appendix B Specifications.

Audience



This Installation Guide is for:

Network Engineer

Network Administrator

Conventions

- Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <http://www.tp-link.com>.
- The figures in Chapter 2 to Chapter 3 are for demonstration purposes only. Your switch may differ in appearance from that depicted.
- This Guide uses the specific formats to highlight special messages. The following table lists the notice icons that are used throughout this guide.

| | |
|---|---|
|  | Remind to be careful. A caution indicates a potential which may result in device damage. |
|  | Remind to take notice. The note contains the helpful information for a better use of the product. |

Contents

| | | |
|------------|----------------------|----|
| Chapter 1 | Introduction | 01 |
| 1.1 | Product Overview | 01 |
| 1.2 | Features | 01 |
| 1.3 | Appearance | 02 |
| Chapter 2 | Installation | 09 |
| 2.1 | Package Contents | 09 |
| 2.2 | Safety Precautions | 09 |
| 2.3 | Installation Tools | 11 |
| 2.4 | Product Installation | 12 |
| Chapter 3 | Connection | 14 |
| 3.1 | Ethernet Port | 14 |
| 3.2 | Verify Installation | 14 |
| 3.3 | Power On | 14 |
| 3.4 | Initialization | 15 |
| Appendix A | Troubleshooting | 16 |
| Appendix B | Specifications | 17 |

Chapter 1 Introduction

1.1 Product Overview

The Gigabit Unmanaged Switch provides you with a high-performance, low-cost, easy-to-use, seamless and standard upgrade to boost your old network to 1000Mbps. By increasing the speed of your network server and backbone connections, the Gigabit Unmanaged Switch makes Gigabit a reality. Power users in the home, office, workgroup, or creative production environment can now move large, bandwidth-intensive files faster. Graphics, CGI, CAD, multimedia files and other large files moved by some applications can be transferred across the network almost instantly.

The Gigabit Unmanaged Switch features a non-blocking switching architecture that forwards and filters packets at full wire-speed for maximum throughput. The switch supports MAC address auto-learning and auto-aging. It is compatible with all 10Mbps, 100Mbps and 1000Mbps Ethernet devices because it is standard-based. It protects your existing network investments while providing you with a straightforward migration path to faster Gigabit speed.

The Gigabit Unmanaged Switch is plug-and-play and no configuration is required. Auto MDI/MDI-X cable detection on all ports eliminates the need for crossover cable or Uplink port. Each port can be used as general port or Uplink port, and any port can be simply plugged into a server, a hub, a router or a switch, using the straight cable or crossover cable. Diagnostic LEDs which display link status and activity, allow you to quickly detect and correct problems on the network.

TL-SG1008MP is a Power Sourcing Equipment (PSE*). The 8 Auto-Negotiation RJ45 ports support Power over Ethernet (PoE*) function, which can automatically detect and supply power with those IEEE802.3af/IEEE802.3at-compliant powered devices (PDs*).

**Note:**

- *PSE is a device (switch or hub for instance) that will provide power in a PoE setup.
 - *PoE is a technology that describes a system to transmit electrical power, along with data, to remote devices over standard twisted-pair cable in an Ethernet network.
 - *PD is a device powered by a PSE and thus consumes energy. Examples include powering IP telephones, wireless LAN access points, network cameras, network hubs, embedded computers etc.
-

1.2 Features

For TL-SG1048/TL-SG1024/TL-SG1024D/TL-SG1016/TL-SG1016D/TL-SG1008:

- Complies with IEEE802.3i, IEEE802.3u, IEEE802.3ab standards
- 8/16/24/48 10/100/1000Mbps Auto-Sense RJ45 ports supporting Auto-MDI/MDIX
- All ports support Full/Half Duplex transfer mode for 10/100Mbps and Full Duplex transfer mode for 1000Mbps

- TL-SG1024/TL-SG1024D/TL-SG1016/TL-SG1016D/TL-SG1008 supports IEEE802.3x flow control for full-duplex mode and backpressure for half-duplex transfer mode
- TL-SG1008 supports IEEE802.1p standard
- Non-blocking switching architecture that forwards and filters packets at full wire-speed for maximum throughput
- Supports MAC address auto-learning and auto-aging
- Desktop and rack-mountable steel case
- Internal power supply

For TL-SG1008MP:


- Complies with IEEE802.3i, IEEE802.3u, IEEE802.3ab, IEEE802.3x, IEEE802.3af, IEEE802.1p and IEEE802.3at standards
- 8 10/100/1000Mbps Auto-Negotiation RJ45 ports all supporting PoE function and Auto-MDI/MDIX
- Supports PoE power up to 126W for all PoE ports
- Supports PoE IEEE802.3af/IEEE802.3at-compliant PDs
- Supports IEEE802.3x flow control for Full-duplex Mode and backpressure for Half-duplex Mode
- 4K MAC address table of the TL-SG1008MP with auto-learning and auto-aging
- Internal power supply

1.3 Appearance

■ Front Panel

The front panel of TL-SG1048 is shown as the following figure.

Figure 1-1 Front Panel of TL-SG1048

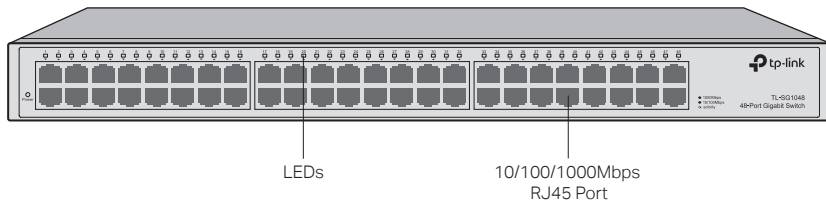

LEDs


| LED | Status | Indication | |
|----------|----------|---|--|
| Power | On | The switch is powered on. | |
| | Off | The switch is powered off or power supply is abnormal. | |
| Link/Act | On | Green | The corresponding port is running at 1000Mbps. |
| | | Yellow | The corresponding port is running at 10/100Mbps. |
| | Flashing | The corresponding port is transmitting or receiving data. | |
| | Off | There is no device linked to the corresponding port. | |

10/100/1000Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10Mbps, 100Mbps or 1000Mbps. Each has a corresponding Link/Act LED.


The front panel of TL-SG1024 is shown as the following figure.

Figure 1-2 Front Panel of TL-SG1024

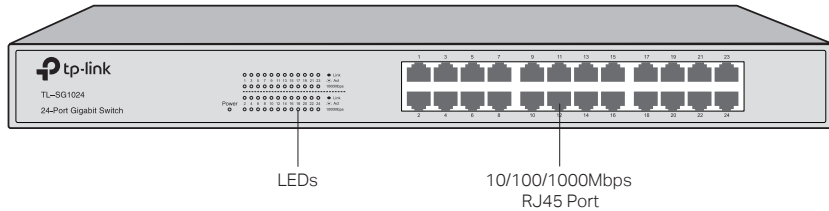


The front panel of TL-SG1016 is shown as the following figure.

Figure 1-3 Front Panel of TL-SG1016

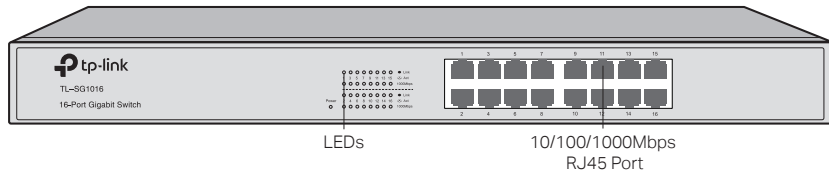


The front panel of TL-SG1024D is shown as the following figure.

Figure 1-4 Front Panel of TL-SG1024D

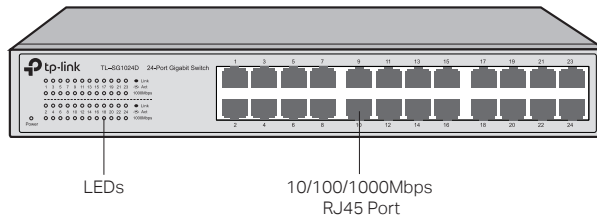


The front panel of TL-SG1016D is shown as the following figure.

Figure 1-5 Front Panel of TL-SG1016D

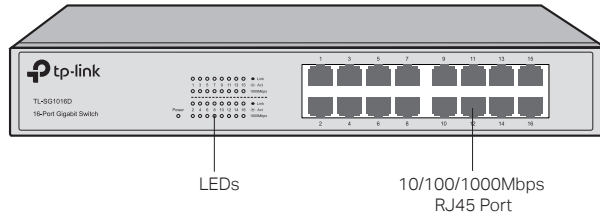

The front panel of TL-SG1008 is shown as the following figure.

Figure 1-6 Front Panel of TL-SG1008

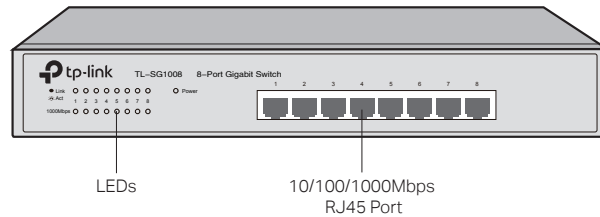

LEDs


| LED | Status | Indication |
|----------|----------|---|
| Power | On | The switch is powered on. |
| | Off | The switch is powered off or power supply is abnormal. |
| Link/Act | On | There is a device linked to the corresponding port but no activity. |
| | Flashing | The corresponding port is transmitting or receiving data. |
| | Off | There is no device linked to the corresponding port. |
| 1000Mbps | On | The corresponding port is running at 1000Mbps. |
| | Off | The corresponding port is not running at 1000Mbps or has no link. |

10/100/1000Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10Mbps, 100Mbps or 1000Mbps. Each has a corresponding Link/Act LED and a 1000Mbps LED.

The front panel of TL-SG1008MP is shown as the following figure.

Figure 1-7 Front Panel of TL-SG1008MP

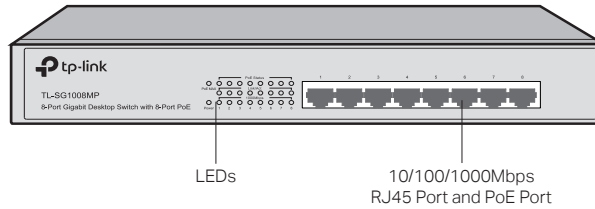

LEDs

| LED | Status | Indication |
|------------|------------------|--|
| Power | On (green) | The switch is powered on. |
| | Flashing (green) | Power supply is abnormal. |
| | Off | The switch is powered off. |
| Link/Act | On (green) | A valid link is established on the port. |
| | Flashing (green) | The corresponding port is transmitting or receiving data. |
| | Off | There is no device linked to the corresponding port. |
| PoE MAX | On (green) | The power of all the connected PoE ports is between 120W and 126W. No power may be supplied if additional PDs are connected. |
| | Flashing (green) | The power of all the connected PoE ports is $\geq 126W$. |
| | Off | The power of all the connected PoE ports is $< 120W$, or there is no PD connected to the corresponding port. |
| 1000Mbps | On (green) | The corresponding port is running at 1000Mbps. |
| | Off | The corresponding port is not running at 1000Mbps or has no link. |
| PoE Status | On (green) | The port is connecting and supplying power to a PD. |
| | Flashing (green) | The PoE power circuit may be in short or the power current may be overloaded. |
| | Off | No PD is connected to the corresponding port, or no power is supplied according to the power limits of the port. |

10/100/1000Mbps RJ45 Port and PoE Port

TL-SG1008MP switch is equipped with 8 10/100/1000Mbps Auto-Negotiation RJ45 ports and all of them support PoE function.

The 8 10/100/1000Mbps RJ45 ports are designed to connect to the device with a bandwidth of 10Mbps, 100Mbps or 1000Mbps. Once the network devices are connected to these 8 ports through the network cable, the switch will make them plug and play according to the Auto-MDI/MDIX detection. The working status can be indicated by the Link/Act LEDs and 1000Mbps LEDs on the front panel.

The 8 ports also support PoE function which integrates power and data onto one Ethernet cable. Once the device you connect to the switch is identified, the switch will supply power through the PoE port, and then you can use it as a 10/100/1000Mbps Auto-Negotiation RJ45 Ethernet port. The working status can be indicated by the PoE MAX LED and PoE Status LEDs on the front panel.




Note:

- Make sure the PDs you connected to the switch are compliant with IEEE802.3af/IEEE802.3at standard.
- If all PoE PDs power consumption is $\geq 126W$, a priority* will be arranged among the PoE ports like port 1 > port 2 > port 3 > port 4 > port 5 > port 6 > port 7 > port 8, then the system will cut off the power of the lowest-priority port.
- *Priority is to protect the system when the system power is overloaded. For example, Port 1, 2, 4 and 7 is using 30; the system power is 120W in total. If there is an additional PD inserted to Port 3 with 25W, and then the system will cut off the power of Port 7 because of the overloaded power, this means Port 1, 2 and 4 will use 30W, and Port 3 will use 25W, no power will be supplied to Port 7.

■ **Rear Panel**


The rear panel of TL-SG1048 is shown as the following figure.

Figure 1-8 Rear Panel of TL-SG1048

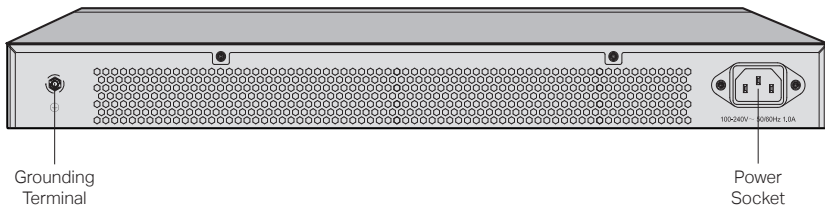


The rear panel of TL-SG1024 is shown as the following figure.

Figure 1-9 Rear Panel of TL-SG1024

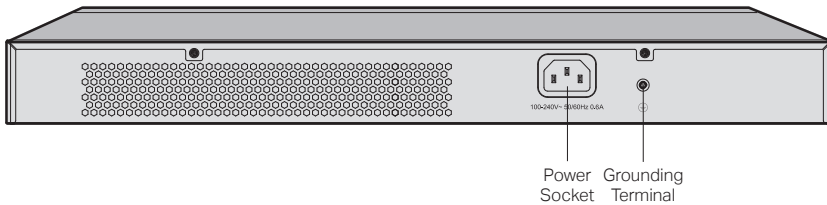


The rear panel of TL-SG1016 is shown as the following figure.

Figure 1-10 Rear Panel of TL-SG1016

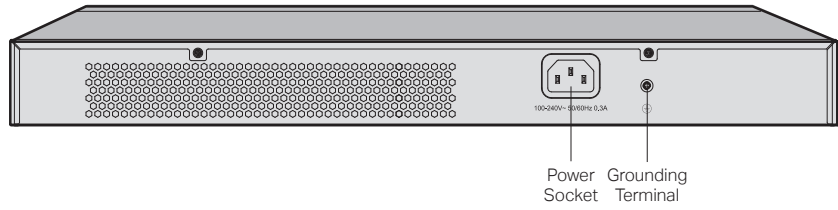


The rear panel of TL-SG1024D is shown as the following figure.

Figure 1-11 Rear Panel of TL-SG1024D

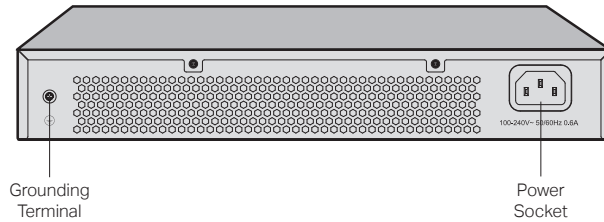


The rear panel of TL-SG1016D is shown as the following figure.

Figure 1-12 Rear Panel of TL-SG1016D

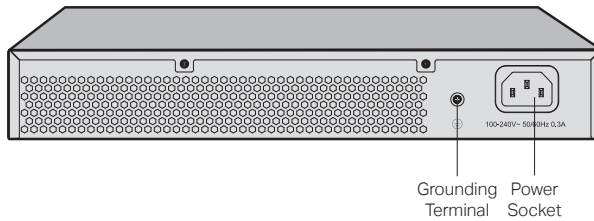


The rear panel of TL-SG1008 is shown as the following figure.

Figure 1-13 Rear Panel of TL-SG1008

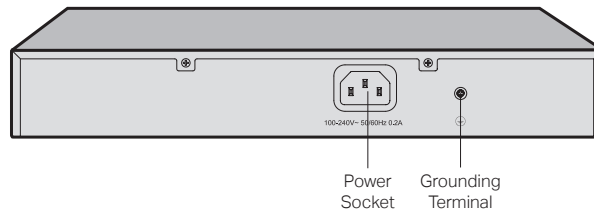

The rear panel of TL-SG1008MP is shown as the following figure.

Figure 1-14 Rear Panel of TL-SG1008MP

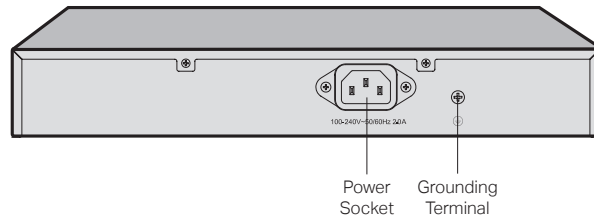

Power Socket

Connect the female connector of the power cord here, and the male connector to the AC (Alternating Current) power outlet. Please make sure the voltage of the power supply meets the requirement of the input voltage.

Grounding Terminal

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable. For detailed lightning protection measures, please refer to the Lightning Protection Guide from the training center of our website: https://www.tp-link.com/en/configuration-guides/lightning_protection_guide/?configurationId=2962.




Caution:

Please use the provided power cord.

Chapter 2 Installation

2.1 Package Contents

Make sure that the package contains the following items. If any of the listed items is damaged or missing, please contact your distributor.

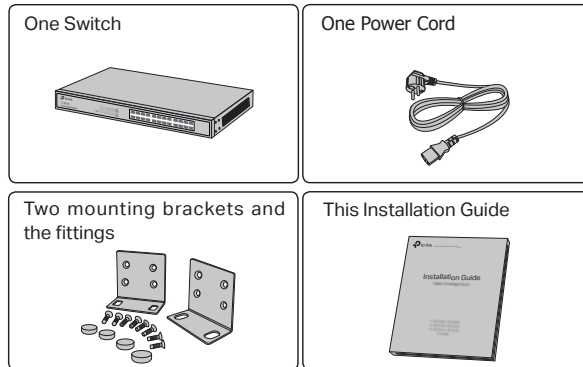

2.2 Safety Precautions

To avoid any device damage and bodily injury caused by improper use, please observe the following rules.

■ Safety Precautions

- Keep the power off during the installation.
- Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- Use only the power cord provided with the switch.
- Make sure that the supply voltage matches the specifications indicated on the rear panel of the switch.
- Ensure the vent hole is well ventilated and unblocked.
- Do not open or remove the cover of the switch.
- Before cleaning the device, cut off the power supply. Do not clean it by the waterish cloth, and never use any other liquid cleaning method.

■ Site Requirements

Temperature/Humidity



Please keep a proper temperature and humidity in the equipment room. Too high/low humidity may lead to bad insulation, electricity leakage, mechanical property changes and corrosions. Too high temperature may accelerate aging of the insulation materials and can thus significantly shorten the service life of the device. For normal temperature and humidity of the device, please check the following table.

| Environment | Temperature | Humidity |
|-------------|-------------|-----------------------------|
| Operating | 0 to 40°C | 10% to 90%RH Non-condensing |
| Storage | -40 to 70°C | 5% to 90%RH Non-condensing |

Clearness



The dust accumulated on the switch can be absorbed by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of the Switch, please attach much importance to the following items:

- Dust the device regularly, and keep the indoor air clean.
- Keep the device well grounded and ensure static electricity has been transferred.

Electromagnetic Interference



Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, please make sure to take the following measures:

- Use the power supply that can effectively filter interference from the power grid.
- Keep the device far from high-frequency, strong-current devices, such as radio transmitting station.

- Use electromagnetic shielding when necessary.

Lightening Protection



Extremely high voltage currents can be produced instantly when lightning occurs and the air in the electric discharge path can be instantly heated up to 20,000°C. As this instant current is strong enough to damage electronic devices, more effective lightning protection measures should be taken.


- Ensure the rack and device are well earthed.
- Make sure the power socket has a good contact with the ground.
- Keep a reasonable cabling system and avoid induced lightning.
- Use the signal SPD (Surge Protective Device) when wiring outdoor.



Note:

For detailed lightning protection measures, please refer to the Lightning Protection Guide from the training center of our website:
https://www.tp-link.com/en/configuration-guides/lightning_protection_guide/?configurationId=2962.

Installation Site

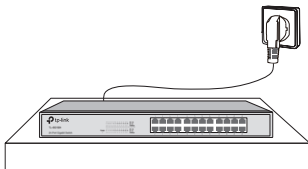

When installing the device on a rack or a flat workbench, please note the following items:

- The rack or workbench is flat and stable, and sturdy enough to support the weight of 5.5kg at least.
- The rack or workbench has a good ventilation system. The equipment room is well ventilated.
- The rack is well grounded. Keep the power socket less than 1.5 meters away from the device.

2.3 Installation Tools

- Phillips screwdriver
- ESD-preventive wrist wrap

- Cables



Note:

These tools are not provided with our product. If needed, please self purchase them.

2.4 Product Installation

■ Desktop Installation

To install the device on the desktop, please follow the steps:

1. Set the device on a flat surface strong enough to support the entire weight of the device with all fittings.
2. Remove the adhesive backing papers from the rubber feet.
3. Turnover the device and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the device.

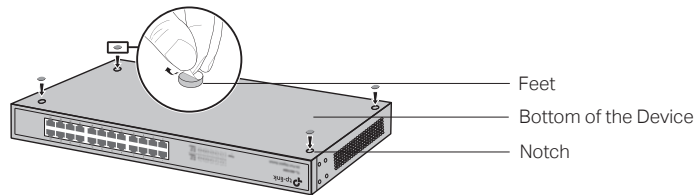


Figure 2-1 Desktop Installation

■ Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:

1. Check the grounding and stability of the rack.
2. Secure the supplied rack-mounting brackets to each side of the device with supplied screws, as illustrated in the following figure.

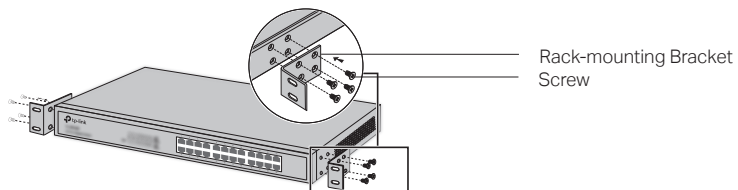


Figure 2-2 Bracket Installation

3. After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

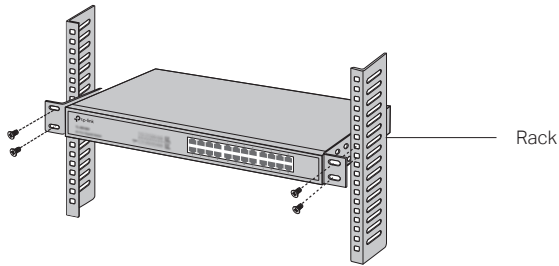


Figure 2-3 Rack Installation



Caution:

- Please set 5 to 10cm gaps around the device for air circulation.
 - Please avoid any heavy thing placed on the device.
 - Please mount devices in sequence from the bottom to top of the rack and ensure a certain clearance between devices for the purpose of heat dissipation.
-

Chapter 3 Connection

3.1 Ethernet Port

Connect a Ethernet port of the switch to the computer by RJ45 cable as the following figure shows.

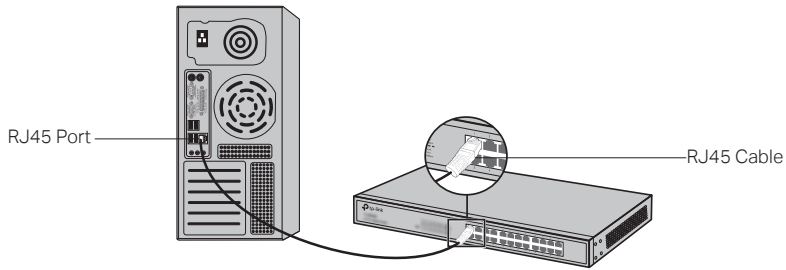


Figure 3-1 Connecting the RJ45 Port

3.2 Verify Installation

After completing the installation, please verify the following items:

- There are 5 to 10cm of clearance around the sides of the device for ventilation and the air flow is adequate.
- The voltage of the power supply meets the requirement of the input voltage of the device.
- The power socket, device and rack are well grounded.
- The device is correctly connected to other network devices.

3.3 Power On

Plug in the negative connector of the provided power cord into the power socket of the device, and the positive connector into a power outlet as the following figure shows.

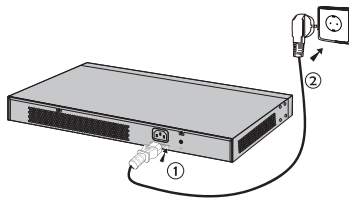


Figure 3-2 Connecting to Power Supply

**Note:**

The figure is to illustrate the application and principle. The power plug you get from the package and the socket in your situation will comply with the regulation in your country, so they may differ from the figure above.

3.4 Initialization

For TL-SG1048/TL-SG1024/TL-SG1024D/TL-SG1016/TL-SG1016D/TL-SG1008:

After the device is powered on, it begins the Power-On Self-Test. A series of tests run automatically to ensure the device functions properly. During this time, its LED indicators will respond as follows:

- All of the LED indicators will flash momentarily for one second, which represents a resetting of the system.
- The Power LED indicator will light up.

For TL-SG1008MP:

The LED indicators for TL-SG1008MP are classified into two parts:

the LEDs indicating switch status including Power LED, Link/Act LEDs and 1000Mbps LEDs; the LEDs indicating PSE status, including PoE MAX LED and PoE Status LEDs.

After the device is powered on, it begins the Power-On Self-Test. A series of tests run automatically to ensure the device functions properly. During this time, its LED indicators will respond as follows:

- All of the LEDs indicating switch status will flash momentarily for one second, which represents a resetting of the switch system. The PoE MAX LED will keep on for approximately ten seconds, representing a resetting of the PSE system. Take note that the PoE Status LEDs won't light up during this period.
- The Power LED indicator will light up.

Appendix A Troubleshooting

Q1. Why is the Power LED not lit?

The Power LED should be lit up when the power system works normally. If the Power LED worked abnormally, please try the following:

1. Make sure that the power cable is connected properly, and the power contact is normal.
2. Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.

Q2. Why is the Link/Act LED not lit while a device is connected to the corresponding port?

Please try the following:

1. Make sure that the cable connectors are firmly plugged into the switch and the device.
2. Make sure the connected device is turned on and working normally.
3. The cable must be less than 100 meters long (328 feet).

- For more troubleshooting help, go to: <https://www.tp-link.com/en/faqs>.
- To download the latest Firmware, Driver, Utility and User Guide, go to: <https://www.tp-link.com/en/download-center>

Appendix B Specifications

| Item | Content |
|---|---|
| Standards | IEEE802.3i, IEEE802.3u, IEEE802.3ab |
| | IEEE802.3x (except TL-SG1048) |
| | IEEE802.1p (for TL-SG1008MP/TL-SG1008) |
| | IEEE802.3af (for TL-SG1008MP), IEEE802.3at (for TL-SG1008MP) |
| Transmission Medium | 10Base-T UTP/STP of Cat. 3 or above(maximum 100m) |
| | 100Base-TX 2-pair UTP/STP of Cat. 5 or above (maximum 100m) |
| | 1000Base-T 4-pair UTP/STP of Cat. 5e or above (maximum 100m) |
| Safety & Emissions | FCC, CE |
| Protocol | CSMA/CD |
| PoE Power on RJ45 (Only for TL-SG1008MP) | Power+: pin 3 & pin 6 |
| | Power -: pin 1 & pin 2 |
| Transfer Method | Store-and-Forward |
| MAC Address Learning | Automatically learning, automatically aging |
| Frame Forward Rate | 10Base-T: 14881pps/Port |
| | 100Base-Tx: 148810pps/Port |
| | 1000Base-T: 1488095pps/Port |
| LEDs | Power, Link/Act (TL-SG1048) |
| | Power, Link/Act, 1000Mbps (TL-SG1024/TL-SG1024D/TL-SG1016/TL-SG1016D/TL-SG1008) |
| | Power, PoE MAX, 1000Mbps, Link/Act, PoE Status (TL-SG1008MP) |
| Operating Temperature | 0 to 40°C (32 to 104°F) |
| Storage Temperature | -40 to 70°C (-40 to 158°F) |
| Operating Humidity | 10% to 90%RH Non-condensing |
| Storage Humidity | 5% to 90%RH Non-condensing |

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Mark Warning



This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.

Safety Information

- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.

BSMI Notice




安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。
- 此為甲類資訊技術設備，于居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Industry Canada Statement

CAN ICES-3 (A)/NMB-3(A)

Explanation of the symbols on the product label

| Symbol | Explanation |
|---|--|
|  | AC voltage |
|  | Indoor use only |
|  | <p>RECYCLING</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p> |

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A



For technical support and other information, please visit
<https://www.tp-link.com/support>, or simply scan the QR code.