

HIKVISION



Handheld Bi-spectrum
Multi-function Binocular

User Manual

COPYRIGHT © 2019 Hikvision. ALL RIGHTS RESERVED

User Manual

COPYRIGHT ©2019 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be “Hikvision”). This user manual (hereinafter referred to be “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to **Handheld Bi-spectrum Multi-function Binocular**.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://overseas.hikvision.com/en/>).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision’s trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR

ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation

EU Conformity Statement



This product and, if applicable, the supplied accessories are marked with “CE” and comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Warnings and Cautions

- Make sure the operating environment meets the requirement of the device. The operating temperature shall be -30 °C to 60 °C (-22 °F to 140 °F), the humidity shall be 95% or less, and the altitude shall be 2000 m or less.
- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please purchase the charger by yourself (please use the power adapter provided by manufacture). Input voltage should meet the Limited Power Source (5 VDC/2 A) according to the IEC61010-1 standard. Please refer to technical specifications for detailed information.
- Improper use or replacement of the battery may result in hazard of explosion. Please use the manufacturer recommended battery type. The battery type is 18650, and the rated voltage and capacity is 3.6 VDC/3.3 Ah (11.88Wh). Dispose of used batteries should confirm to the local instructions.
- For long-term storage of the battery, make sure it is fully charged every half year to ensure the battery quality. Otherwise, damage may occur.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.

- Wipe the device gently with a clean cloth and a small quantity of ethanol, if necessary.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

Laser Light Supplement Warning



Warning: The laser radiation emitted from the device can cause eye injuries, burning of skin or inflammable substances. Before enabling the Light Supplement function, make sure no human or inflammable substances are in front of the laser lens.

Do not place the device where minors can fetch it.

Manufacture address :

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China
Hangzhou Hikvision Digital Technology Co.,Ltd

Table of Contents

About This Manual	1
Overview of Contents	1
1 Overview	2
1.1 Box Content	2
1.2 Description.....	2
1.3 Functions	3
1.4 Appearance.....	4
1.4.1 Components	4
1.4.2 Cables Description	5
1.4.3 Key Description	5
2 Device Operation	7
2.1 Device Charging	7
2.2 Battery Installation.....	7
2.3 Power On/Off	8
2.3.1 Power On.....	8
2.3.2 Power Off	9
2.4 Cable Connection.....	9
2.5 Teleconverter Mounting	9
2.6 Focus.....	10
3 Binocular Setup	11
3.1 Menu Description	11
3.2 Local Output.....	12
3.3 File Export	12
3.4 Display Settings	13
3.4.1 Display Brightness & Contrast	13
3.4.2 Digital Zoom	14
3.4.3 OSD Setting.....	14
3.4.4 Fusion Target	14
3.5 Palettes Settings	15
3.6 Detect Distance	16
3.7 Wi-Fi	16
3.8 Hot Spot	17
3.9 GPS	18
3.10 DMC (Digital Magnetic Compass)	18
3.10.1 Calibration.....	19
3.10.2 Magnetic Declination.....	20
3.10.3 Azimuth Correction	20
3.10.4 Elevation Correction	20
3.11 Reset Default Settings	20
4 Capture and Video	22

4.1	Capture Settings	22
4.1.1	Capture Snapshots.....	22
4.1.2	View Snapshots.....	22
4.1.3	Delete Snapshots.....	22
4.2	Video Settings	23
4.2.1	Video Recording	23
4.2.2	Video Playback.....	23
4.2.3	Delete Videos	24
5	iVMS-4500 Connection	25
5.1	Add the Device	25
5.2	View the Interface of Device	25
6	Appendix	26
6.1	Dimensions	26

About This Manual

This document introduces the **Handheld Bi-spectrum Multi-function Binocular**.

It covers what is handheld thermal binocular, device powering on/off, picture management, and how to set thermal view/visible light view. Besides, it shows concrete functions and descriptions of the binocular.

Overview of Contents

This document contains the following chapters and appendix:

Chapter 1 Overview introduces the Handheld Thermal Binocular, including the main description, major functions, appearance, and interface/menu description.

Chapter 2 Device Operation shows how to charge, power on/off the binocular, and how to connect the cables.

Chapter 3 Binocular Setup describes the binocular focus, digital zoom, brightness and contrast configuration of the image and the screen.

 
Chapter 4 Capture and Video shows you the way to view thermal view and visible light view, and fusion view. Besides, it shows you how to capture snapshots and record videos.

Chapter 5 iVMS-4500 Connection shows you the way to connect the binocular with your phone and view display of the binocular on the client software.


Chapter 6 Appendix lists the dimensions of the device.

1 Overview


1.1 Box Content

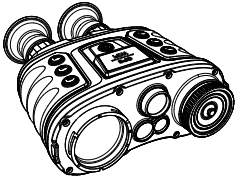

Thermal Binocular (x1)

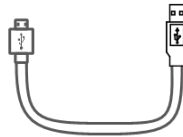 


USB Cable (x1)

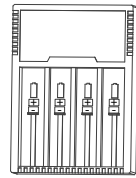 


Battery Charger (x1)



 
Manual (x1)

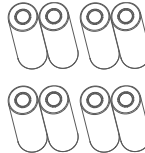


Battery (x8)

 

Straps (x2)

 

Aviation Plug Cables (x1)

 

Non-dust Cloth (x1)

1.2 Description

The handheld thermal binocular (*binocular* for short) is a pair of binoculars with both thermal observation function and target searching function. The device can quickly discover and accurately locate targets on the ground, at sea and in the river even under extreme environment, such as smoke, fog, rain and snow. It can be applied to various scenarios, such as patrol, law enforcement, search and rescue, drug enforcement, anti-smuggling and suspect capture.

1.3 Functions

Thermal View

Device detects the thermal radiation and shows on the screen.

Fusion

Device can display the fusion of thermal view and optical view.

Palette

Device supports multiple palettes, and you can set the palette mode according to the scene.

Distance Detection

Device can detect the target distance with built-in laser-distance detection module.

Wi-Fi Hot Spot

Device can capture snapshots, record videos, and set parameters via APP after being connected to your phone.

GPS

 
Device can locate the target position and can be located with GPS system.

DMC (Digital Magnetic Compass)

The DMC module can detect the azimuth angle and elevation angle of the target and show the direction information on the screen.

1.4 Appearance


1.4.1 Components

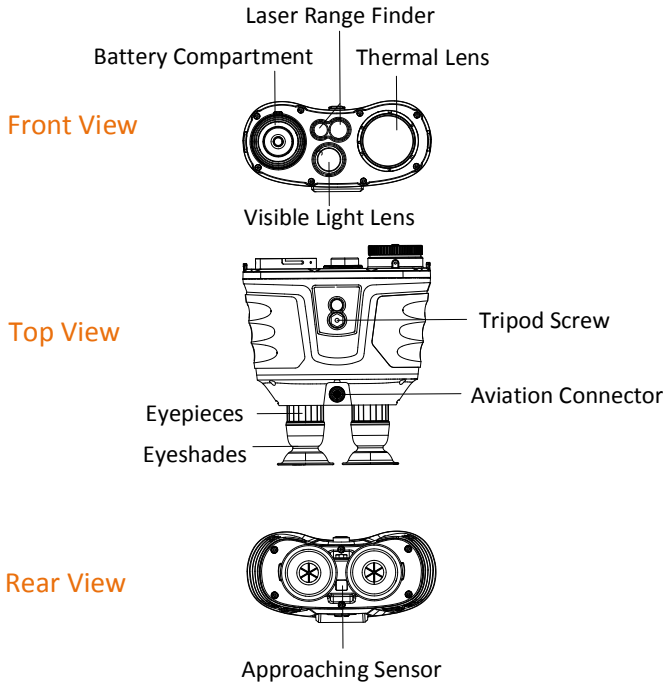

1	Eyeshades	Cover the eyes.
2	Eyepieces	View the target.
3	Visible Light Lens	Let the visible light in.
4	Laser Range Finder	Including a laser transmitter and a laser receiver
5	Thermal Lens	Let the infrared light in.
6	Battery Compartment	The battery is here.

7	Tripod Screw	Install the binocular on tripod.
8	Aviation Connector	Connect with the cables. See 1.4.2.
9	Approaching Sensor	Detect whether human eyes are approaching to save power. If it detects eyes, the OLED screen turns on, otherwise the OLED screen is off.

 
1.4.2 Cables Description

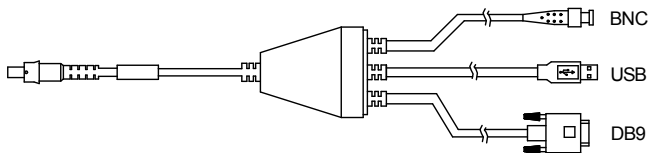


1	BNC	Connect it to the display screen.
2	USB	Connect it to your PC to backup videos/images.
3	DB9	Reserved.





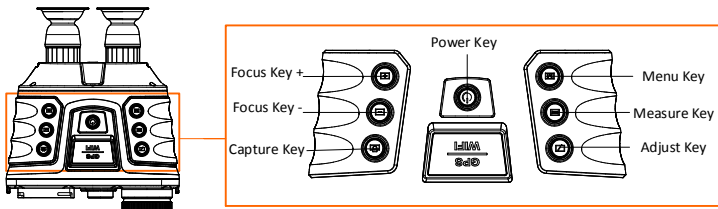 

1.4.3 Key Description

The main keys of the binocular are shown below.



For the descriptions of the menu buttons, see the table below.

	Power Key	Press the key to emphasize the high-temperature target in the view in fusion
---	------------------	--

		mode. Hold the key to power on/off the device.
	Menu Key	Press the key to switch the pallets. Hold the key to enter the menu.
	Measure Key	Press the key to switch between White Hot mode and Black Hot mode. Hold the key to detect the target distance with laser light.
	Adjust Key	Press the key to adjust the digit zoom. Hold the key to correct nonuniformity of display.
	Capture Key	Press the key to capture the view. Hold the key to start/stop recording.
	Focus Key +	Press the key to forward focus step by step. Hold the key to forward focus quickly.
	Focus Key -	Press the key to reverse focus step by step. Hold the key to reverse focus quickly.

2 Device Operation

2.1 Device Charging

Purpose:

For the first use, when the device is running low, charge the batteries with your charger.

Steps:

1. Take out the USB cable from the package.
2. Connect the USB cable with battery charger and appropriate adaptor.
3. Insert the batteries in the charger with corresponding positive/negative terminals.

Note:

When the charger is powered on, the LCD display automatically lights up. The charger will detect the battery and charge it.

1	Unlighted	Power-saving mode Press any button to activate it.
2	Good	Battery is healthy.
3	Poor	Battery is damaged.
4	EE EE	Battery reverse connected or short circuit.
5	END	Battery is charged more than 20h.

4. Complete battery charging and disassemble the battery.

 
2.2 Battery Installation

Purpose:


Insert the batteries into the battery compartment.

Steps:


1. Rotate the battery cover anticlockwise to disassemble it.

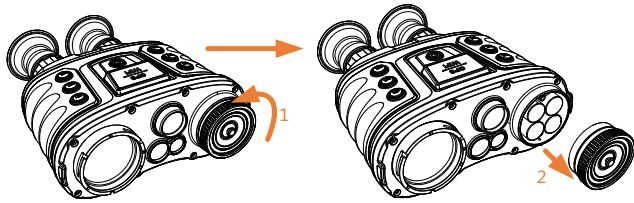

 2. Insert four batteries with positive/negative marks to match those of the battery compartment

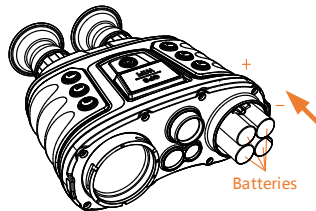

 
3. Align the shape of battery cover with that of the batteries and cover the batteries.
4. Rotate the battery cover clockwise to fix it.

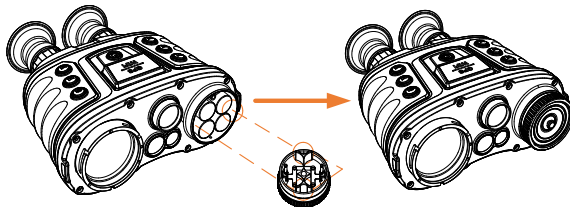



2.3 Power On/Off

2.3.1 Power On

Step:


When the binocular is fully charged, press the  key to power on the binocular.

Notes:

- See the battery icon for the electricity quantity.  means battery is fully charged, and  means that the battery runs low.
- When the Low power note shows, charge the battery.

2.3.2 Power Off

Step:

When the binocular is running, hold the  key for four seconds to power off the binocular.

2.4 Cable Connection



Attentions:

 
- Do NOT drag the cables when you are connecting the cables, or the cables are connected.
- To plug in/out the cable, hold the cable end and then plug in/out it. Do NOT twist the cables, or the pins inside may be damaged.

Purpose:

Connect the binocular with the aviation cable, and you can connect the device to your PC via USB interface or the display via the BNC interface.

Step:

Connect the aviation cable with the aviation Interface. Make sure the anchor points match with each other and insert the cable.

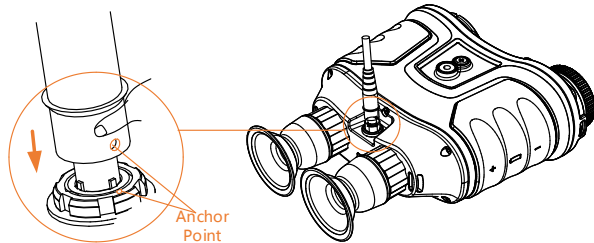


To disconnect the cable, lift the cable.

2.5 Teleconverter Mounting

Step:

 Align the two red spots on the teleconverter and the objective, then rotate the teleconverter clockwise to finish mounting.

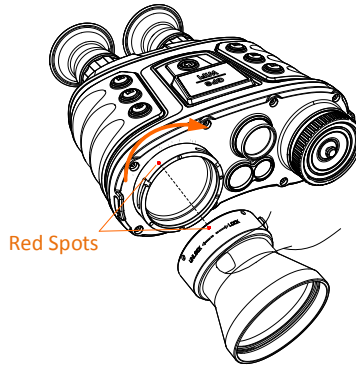

Rotate the teleconverter anticlockwise to dismount it.

 
2.6 Focus



Notes:

Do NOT touch the lens directly with your finger, or place any sharp objects near it.

Steps:

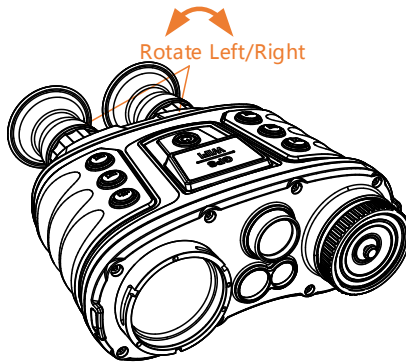1. Slightly rotate the focus wheel to focus the eyepiece.




2. In the live view interface, press or hold the  key and  key to focus the objective. Press the key to focus step by step. Hold the key to focus quickly.

 
3 Binocular Setup

3.1 Menu Description

Step:

Hold the  button to show the menu.


In the menu, the direction keys, OK key, and the Exit key are shown below.

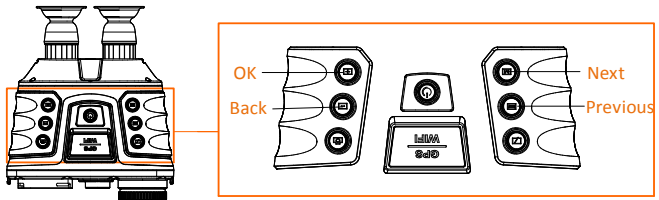

See the figure below for the menu interface.

Note:

 The figure below is only for reference, the font size is readjusted for better viewing.

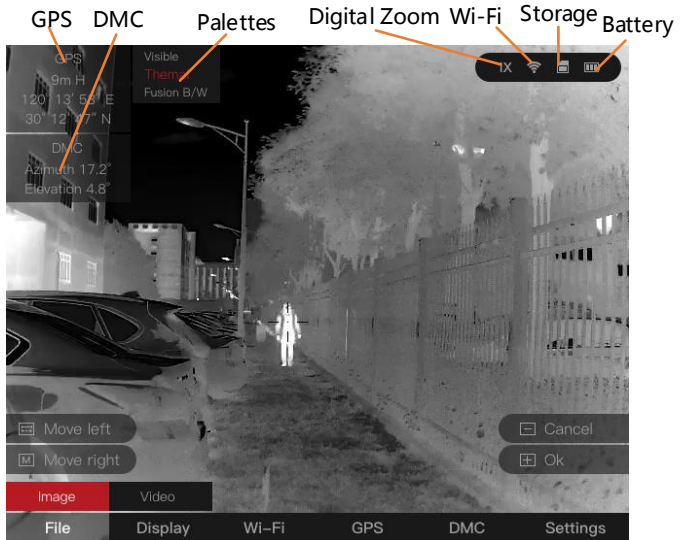

3.2 Local Output

Before you start:

Connect the binocular to the display unit via CVBS interface of the aviation plug. Refer to Section **2.4**.

Purpose:

View the binocular image on the display unit for details.

Steps:

1. Hold the **[M]** key to show the menu of binocular.
2. Press the **[Left Arrow]** key and **[M]** key to move the cursor and open **Settings** submenu.
3. Press the **[Left Arrow]** key and **[M]** key to move the cursor and open **CVBS ON/OFF** submenu.
4. Press the **[+]** key to switch on CVBS.

3.3 File Export

Before you start:

Connect the binocular to your PC via USB interface of the aviation plug. Refer to Section 2.4.

Purpose:

Export the videos and snapshots with your PC.

Steps:

1. In your PC, go to the **Removable Disk**.
2. Double-click to open the disk. View or copy the videos or snapshots.
3. Disconnect the binocular with the PC.

3.4 Display Settings

3.4.1 Display Brightness & Contrast

Purpose:




 







Adjust the brightness and contrast of the screen display.

Note:

 This adjustment also affects the brightness and contrast of menu, icons, etc.




- **Screen Brightness**









Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Display** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Brightness** submenu.
5. Press the  key to confirm.
6. Press the  key or  key, and press the  key to adjust the brightness value. The higher, the brighter.
7. Press the  key to save and exit.


- **Screen Contrast**

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Display** submenu.




 



3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Contrast** submenu.
5. Press the  key to confirm.
6. Press the  key or  key, and press the  key to adjust the brightness value. The higher, the brighter.
7. Press the  key to save and exit.

3.4.2 Digital Zoom

Enable the digital zoom function to enlarge the image display. Press the  key to switch the digital zoom of binocular. The value of digital zoom can be set to 1X, 2X, 3X, 4X.

3.4.3 OSD Setting

Steps:








1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Settings** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **OSD** submenu.
5. Press the  key to switch on/off OSD.




3.4.4 Fusion Target

Before you start:

 
Mount the desired teleconverter lens first.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Settings** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Target Distance** submenu.
5. Press the  key to confirm.

- Press the  key and  key to select 1X, 1.5X, 2X according to the corresponding lens. Select 1X for 50mm thermal lens, 1.5X for 75mm thermal lens, and 2X for 100mm thermal lens.
- Press the  key to confirm.

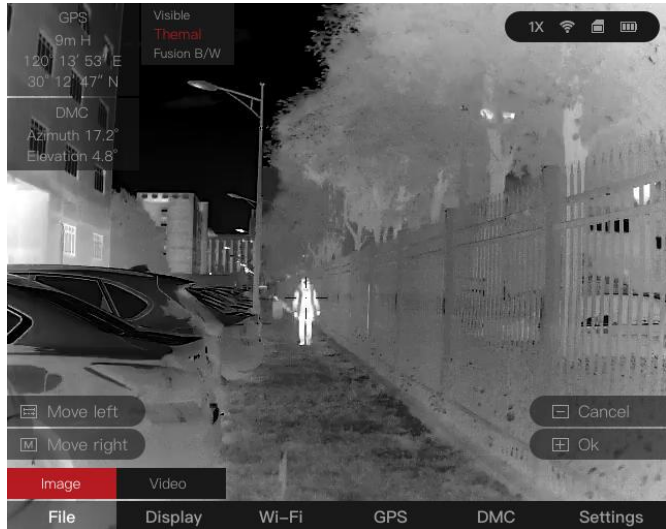

3.5 Palettes Settings

 


Purpose:

The binocular has dual-lens: thermal and visible light lens. You can set the thermal/optical view to show thermal channel, visible light channel, or both of them. For thermal view, you can set the palettes.

Step:

- In the live view interface, press the  key to display the palettes menu.
- Press the  key to switch the view mode.

Thermal	In thermal mode, the device displays the thermal view. Press the  key to switch between white hot and black hot mode.
Visible	In visible mode, the device displays the view of visible light channel.
Fusion B/W	It displays the combined view of thermal channel


	and optical channel in black and white.
City	Applicable to city environment.
Jungle	Applicable to jungle environment.
Desert	Applicable to desert environment.
Sea	Applicable to sea environment.
Snow	Applicable to snow environment.


Result:

After setting the palette, the current palette, next palette, and the previous palette are shown in the upper right corner.



3.6 Detect Distance

In the live view interface, aim the cursor at the target and hold the  key, the distance towards the target can be measured and showed on the screen.





 **Warning:**
 The laser radiation emitted from the device can cause eye injuries, burning of skin or inflammable substances. Before enabling the Light Supplement function, make sure no human or inflammable substances are in front of the laser lens.

 
3.7 Wi-Fi

Purpose:

Connect your phone to the binocular via Wi-Fi, you can configure the parameters and realize functions of the device.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Wi-Fi** submenu.
3. Press the  key to switch on Wi-Fi.

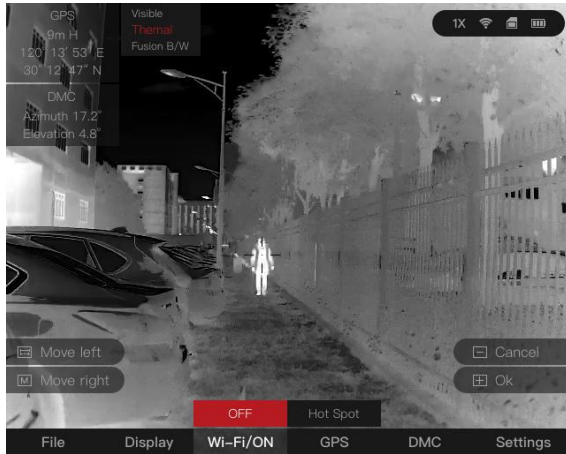








4. Setting the Wi-Fi name and password of your phone or the router as follow:
 - Wi-Fi Name: WLAN-IPTP.
 - Wi-Fi Password: abcd1234.
5. Search the “iVMS-4500” on App Store (iOS System) or Google Play TM (Android System) to download and install the app.
6. Open the APP and connect your phone with the device. You can view the interface of binocular on your phone.

 
3.8 Hot Spot

Purpose:

Connect your phone to the hot spot of the binocular, you can configure the parameters and realize functions of the device.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Wi-Fi** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Hot Spot** submenu.
5. Press the  key to confirm.

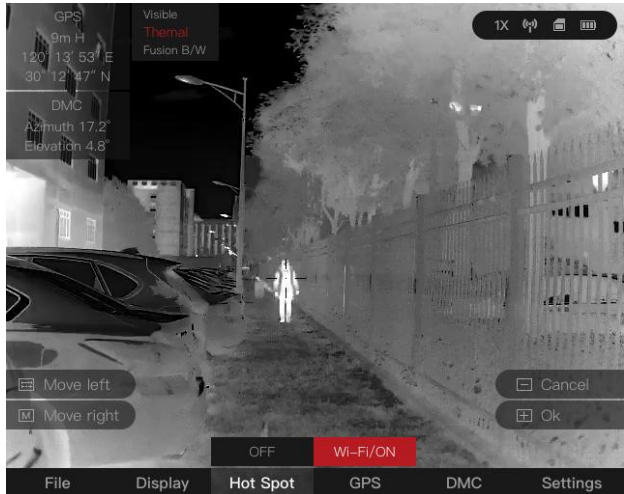

6. Turn on the WLAN of your phone and connect to the hot spot.
 - Hot Spot Name: HIK-IPTS Serial No.
 - Hot Spot Password: Serial No.
7. Search the “iVMS-4500” on App Store (iOS System) or Google Play TM (Android System) to download and install the app.
8. Open the APP and connect your phone with the device. You can view the interface of binocular on your phone.

3.9 GPS

Steps:

1. Hold the **[M]** key to show the menu of binocular.
2. Press the **[⏏]** key and **[M]** key to move the cursor to **GPS** submenu.
3. Press the **[+]** key to switch ON or OFF.




3.10 DMC (Digital Magnetic Compass)

Purpose:

The DMC function can locate the target position and self-locate the binocular together with the GPS function.




Steps:

 
1. Hold the **[M]** key to show the menu of binocular.

2. Press the  key and  key to move the cursor to **DMC** submenu.
3. Press the  key to switch on DMC.

 
3.10.1 Calibration

Steps:

1. Press the  key and  key to move the cursor to **Calibration** submenu.
2. Press the  key to confirm.
3. Adjust the current angle of the binocular to be consistent with the standard angle. When all of the values of current angles turn green, the calibration of Shot No .1 is successful.

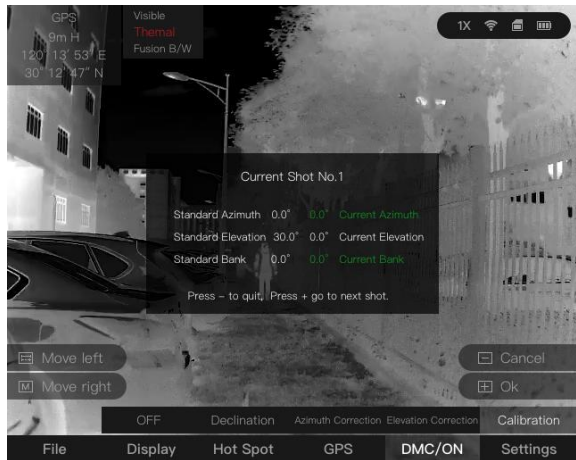



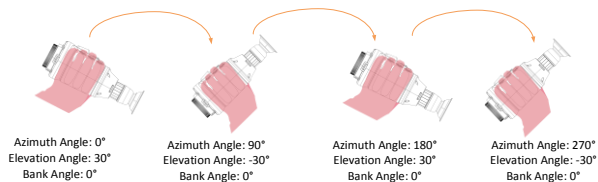




 4. Move the binocular 360° to calibrate the other three shots according to step 3. The calibration angles are shown as below:










3.10.2 Magnetic Declination

Steps:

1. Press the  key and  key to move the cursor to **Declination** submenu.
2. Press the  key to confirm.
3. Press the  key or  key, and press the  key to adjust the magnetic declination according to the current location.
4. Press the  key to save and exit.








3.10.3 Azimuth Correction

Steps:

1. Press the  key and  key to move the cursor to **Azimuth Correction** submenu.
2. Press the  key to confirm.
3. Press the  key or  key, and press the  key to adjust the deviation of azimuth if required.
4. Press the  key to save and exit.

3.10.4 Elevation Correction

Steps:




1. Press the  key and  key to move the cursor to **Elevation Correction** submenu.
2. Press the  key to confirm.
3. Press the  key or  key, and press the  key to adjust the deviation of elevation if required.
4. Press the  key to save and exit.





3.11 Reset Default Settings

Purpose:

Restore the device to default settings.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **Settings** submenu.


3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Reset** submenu.
5. Press the  key to confirm.

4 Capture and Video

4.1 Capture Settings

4.1.1 Capture Snapshots

Step:







 



In the live view mode, press the  key to capture a snapshot.

When capturing succeeded, it shows **Capture succeeded**.

When capturing failed, it shows **Capture failed**.

4.1.2 View Snapshots

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **File** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Image** submenu.
5. Press the  key to confirm.
6. Press the  key and  key to select snapshot.
7. Press the  key to view the selected snapshot.




4.1.3 Delete Snapshots










Attention:

Once a snapshot is deleted, it can NOT be recovered. Do this operation cautiously.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **File** submenu.

3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Image** submenu.
5. Press the  key to confirm.
6. Press the  key and  key to select snapshot.
7. Hold the  key to delete the selected snapshot.



Or

You can delete the snapshot while viewing the live view.

4.2 Video Settings









 

4.2.1 Video Recording

Steps:

1. In the live view mode, hold the  key to record videos. When the record time shows on the top, it starts recording.
2. When the desired video is recorded, hold the  key to stop recording.

4.2.2 Video Playback

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **File** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Video** submenu.
5. Press the  key to confirm.
6. Press the  key and  key to select video.
7. Press the  key to play the selected video.











4.2.3 Delete Videos



Attention:

Once a video is deleted, it can NOT be recovered. Do this operation cautiously.

Steps:

1. Hold the  key to show the menu of binocular.
2. Press the  key and  key to move the cursor to **File** submenu.
3. Press the  key to confirm.
4. Press the  key and  key to move the cursor to **Video** submenu.
5. Press the  key to confirm.
6. Press the  key and  key to select video.
7. Hold the  key to delete the selected video.


5 iVMS-4500 Connection

Before you start:



Install the iVMS-4500 on your mobile phone first, and then connect your phone to the hot spot of the scoop. Refer to chapter 3.8 for details of hot spot connection.

5.1 Add the Device

Steps:



1. Open the iVMS-4500 and click **Device**.
2. Click  on the top right of the interface, select **Online Device**.
3. Click the desired online device. If necessary, please active the device first.

Active the Device:

- a) Click **Activate**.
 - b) Edit the password, and click **Confirm**.
4. You can view the device information and network information on the **Details** page.
 5. Click **Add** to add the device to the iVMS-4500.
 6. Enter the password and click  to save settings.
 7. *Note: the password is the password setting in the device active interface.*
 8. Click  to exit.

 
5.2 View the Interface of Device

Steps:

1. Click **Live View** on the main menu.
2. Click  on the top left of the interface, then click  to select the desired channel.
3. You can view the interface of the scoop on the software.

6 Appendix

6.1 Dimensions

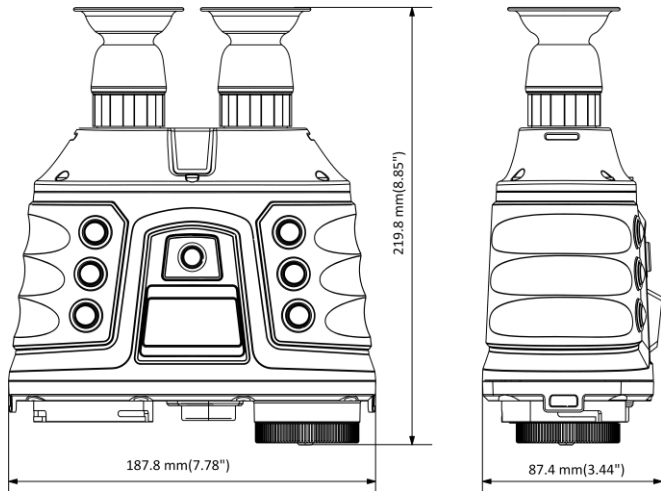

Note: the dimension varies according to different camera models.



See Far, Go Further