

DS-PM2-D

6V PSU Module User Manual UD27355B

English

1 Overview

The PSU module is a power supply adapting board, which connects the AXPRO to 12 VDC power sources.

2 Installation

Before You Start

Make sure that the device is disconnected from the mains. Follow the general safety rules when install the PSU.

- 1. Remove the mounting plate of the control panel.
- 2. Turn off the power button of the device. Disconnect the power and Ethernet cables.
- 3. Loosen the screws and remove the back lid.
- 4. Remove the screws that fix the boards on the device body.
- 5. Remove the boards, and keep them in the same plane without disconnecting them.
- 6. Remove the original power supply unit (the smaller one) from the mainboard.
- 7. Connect the PSU to the mainboard by connecting the pin terminal.
- 8. Fix the boards and the control panel body with the screws loosened before.
- 9. Connect the power and Ethernet cable, and turn on the power switch.

Specification

Compatibility	AX PRO Panel
Input Voltage	4 to 16 VDC
Output Voltage	5 VDC
Input Current	Up to 4A (4 VDC) ~ Up to 1A (16 VDC)
Output Current	Up to 2.5A
Operation temperature	-10°C to 55°C (-4°F to 122°F)
Operation humidity	10% to 90% (No condensing)
Dimension (W× H×D)	80 × 90 × 15 mm
Weight	35 g

Product Information

©2022 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product, Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website (https://www.hikvision.com/). Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

HIKLYISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners.

DISCIalmer
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND
FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING
WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY OLULLITY, OR FITHENESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT
YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES,
INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROPITS, BUSINESS INTERRUPTION, OR LOSS OF DAGA, CORRUPTION OF SYSTEMS, OR
LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LUBBILITY, OR OTHERWISE, IN
CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY
RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS
INFECTION. OR OTHER INTERNET SECULIETY RISKS: HOWEVER, RIKVISION WILL PROVIDE THEY IT CHIEFY TECHNICAL PROPORT IS REGULATED. INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIS PAPEL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS, YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the EMC Directive 2014/30/EU, the ROHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. 2000/pv)C (deter) on lettive). This product contains a observe via channot be unspecied in all with symbols, which may be inthe corporation of specific better information. The battery is marked with symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

CAUTION

Install the equipment according to the instructions in this manual.



- instant me equipment according to the instructions in this manual.

 This equipment is not suitable for use in locations where children are likely to be present.

 This equipment is suitable for use in gang box or other encloslure protected device only.

 To prevent injury, this equipment must be securely attached to the floor/wall in accordance with the installation instructions.

 No naked flame sources, such as lighted candles, should be placed on the equipment.
- The equipment has been designed, when required, modified for connection to an IT power distribution system. A readily accessible disconnect device shall be incorporated external to the equipment.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
 The socket-outlet shall be installed near the equipment and shall be easily accessible.
 Burned fingers when handling the device. Walt one-half hour after switching to the fore handling the parts.
 10. Use only power supplies at the standard of 100 VAC to 240 VAC, 50/60 HZ.
- 11. The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the equipment.



Ensure correct wiring of the terminals for connection to an AC mains supply.

indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.