



TandemVu PTZ Camera

User Manual

Initiatives on the Use of Video Products

Thank you for choosing Hikvision products.

Technology affects every aspect of our life. As a high-tech company, we are increasingly aware of the role technology plays in improving business efficiency and quality of life, but at the same time, the potential harm of its improper usage. For example, video products are capable of recording real, complete and clear images. This provides a high value in retrospect and preserving real-time facts. However, it may also result in the infringement of a third party's legitimate rights and interests if improper distribution, use and/or processing of video data takes place. With the philosophy of "Technology for the Good", Hikvision requests that every end user of video technology and video products shall comply with all the applicable laws and regulations, as well as ethical customs, aiming to jointly create a better community.

Please read the following initiatives carefully:

- Everyone has a reasonable expectation of privacy, and the installation of video products should not be in conflict with this reasonable expectation. Therefore, a warning notice shall be given in a reasonable and effective manner and clarify the monitoring range, when installing video products in public areas. For non-public areas, a third party's rights and interests shall be evaluated when installing video products, including but not limited to, installing video products only after obtaining the consent of the stakeholders, and not installing highly-invisible video products.
- The purpose of video products is to record real activities within a specific time and space and under specific conditions. Therefore, every user shall first reasonably define his/her own rights in such specific scope, in order to avoid infringing on a third party's portraits, privacy or other legitimate rights.
- During the use of video products, video image data derived from real scenes will continue to be generated, including a large amount of biological data (such as facial images), and the data could be further applied or reprocessed. Video products themselves could not distinguish good from bad regarding how to use the data based solely on the images captured by the video products. The result of data usage depends on the method and purpose of use of the data controllers. Therefore, data controllers shall not only comply with all the applicable laws and regulations and other normative requirements, but also respect international norms, social morality, good morals, common practices and other non-mandatory requirements, and respect individual privacy, portrait and other rights and interests.
- The rights, values and other demands of various stakeholders should always be considered when processing video data that is continuously generated by video products. In this regard, product security and data security are extremely crucial. Therefore, every end user and data controller, shall undertake all reasonable and necessary measures to ensure data security and avoid data leakage, improper disclosure and improper use, including but not limited to, setting up access

control, selecting a suitable network environment (the Internet or Intranet) where video products are connected, establishing and constantly optimizing network security.

- Video products have made great contributions to the improvement of social security around the world, and we believe that these products will also play an active role in more aspects of social life. Any abuse of video products in violation of human rights or leading to criminal activities are contrary to the original intent of technological innovation and product development. Therefore, each user shall establish an evaluation and tracking mechanism of their product application to ensure that every product is used in a proper and reasonable manner and with good faith.

Legal Information

©2023 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website (<https://www.hikvision.com/>).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE

TandemVu PTZ Camera User Manual

DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Contents

Chapter 1 Overview	1
1.1 Product Introduction	1
1.2 Key Function	1
1.3 System Requirement	2
Chapter 2 Device Activation and Accessing	3
2.1 Activate Device	3
2.1.1 Activate Device via Web Browser	3
2.1.2 Activate via SADP	4
2.2 Access Device via Web Browser	5
2.2.1 Plug-in Installation	5
2.2.2 Admin Password Recovery	6
2.2.3 Illegal Login Lock	6
Chapter 3 Smart Function	8
3.1 Allocate VCA Resource	8
3.2 Set Camera Info	8
3.3 Capture Target with Feature	8
3.3.1 Set Detection Rule	8
3.3.2 Overlay and Capture	9
3.3.3 Advanced Parameters	10
3.4 Person Arming	11
3.4.1 Device Auto Person Arming	12
3.4.2 Manual Person Arming	14
3.4.3 Capture Settings	14
3.5 Intelligent Traffic Event (ITS)	17
3.5.1 Basic Settings	17
3.5.2 Common Settings	18

3.5.3 Enforcement	20
3.5.4 Traffic Event Detection	28
3.5.5 Vehicle Detection	31
3.5.6 Traffic Data Collection	34
3.5.7 ITS Linkage and Alarm	34
3.5.8 Vehicle Arming	36
3.5.9 Advanced Settings	38
3.6 People Density	39
3.7 Smart Display	42
Chapter 4 PTZ	43
4.1 PTZ Control	43
4.2 Set Preset	45
4.2.1 Special Presets	45
4.3 Set Patrol Scan	46
4.3.1 Set One-Touch Patrol	47
4.4 Set Pattern Scan	47
4.5 Set Limit	48
4.6 Set Initial Position	49
4.7 Set Scheduled Tasks	49
4.8 Operate Wiper	49
4.9 Set Park Action	50
4.9.1 Set One-Touch Park	50
4.10 Set Privacy Mask	51
4.11 Set Power Off Memory	52
4.12 Set PTZ Priority	52
4.13 Set Rapid Focus	52
4.14 Set Device Position	53
4.15 Panorama Tracking	54

4.15.1 Link Channels by Calibration	54
4.15.2 Set Tracking Parameters	55
4.16 GPS Calibration	56
4.16.1 Set GPS Calibration	56
4.16.2 Verify Calibration	57
Chapter 5 Live View	58
5.1 Live View Parameters	58
5.1.1 Start and Stop Live View	58
5.1.2 Aspect Ratio	58
5.1.3 Window Division	58
5.1.4 Live View Stream Type	59
5.1.5 Quick Set Live View	59
5.1.6 Select the Third-Party Plug-in	59
5.1.7 Start Digital Zoom	59
5.1.8 Conduct Regional Focus	60
5.1.9 Conduct Regional Exposure	60
5.1.10 Light	60
5.1.11 Lens Initialization	60
5.1.12 Track Manually	60
5.1.13 Conduct 3D Positioning	61
5.1.14 OSD Menu	61
5.1.15 Display Target Information on Live View	61
5.2 Set Transmission Parameters	61
Chapter 6 Video and Audio	63
6.1 Video Settings	63
6.1.1 Stream Type	63
6.1.2 Video Type	63
6.1.3 Resolution	64

6.1.4 Bitrate Type and Max. Bitrate	64
6.1.5 Video Quality	64
6.1.6 Frame Rate	64
6.1.7 Video Encoding	64
6.1.8 I-Frame Interval	66
6.2 Audio Settings	66
6.2.1 Audio Input	67
6.2.2 Audio Output	67
6.2.3 Environmental Noise Filter	67
6.3 Two-way Audio	67
6.4 ROI	68
6.4.1 Set ROI	68
6.5 Display Info. on Stream	68
6.6 Display Settings	69
6.6.1 Scene Mode	69
6.6.2 Image Parameters Switch	74
6.6.3 Mirror	75
6.6.4 Video Standard	75
6.7 OSD	75
Chapter 7 Video Recording and Picture Capture	76
7.1 Storage Settings	76
7.1.1 Memory Card	76
7.1.2 Set FTP	78
7.1.3 Set NAS	79
7.1.4 Set Cloud Storage	80
7.2 Video Recording	80
7.2.1 Record Automatically	81
7.2.2 Record Manually	82

7.2.3 Playback and Download Video	82
7.3 Capture Configuration	83
7.3.1 Capture Automatically	83
7.3.2 Capture Manually	83
7.3.3 View and Download Picture	84
Chapter 8 Event and Alarm	85
8.1 Basic Event	85
8.1.1 Set Motion Detection	85
8.1.2 Set Video Tampering Alarm	87
8.1.3 Set Exception Alarm	88
8.1.4 Set Alarm Input	89
8.2 Smart Event	89
8.2.1 Detect Audio Exception	89
8.2.2 Set Intrusion Detection	90
8.2.3 Set Line Crossing Detection	92
8.2.4 Set Region Entrance Detection	93
8.2.5 Set Region Exiting Detection	95
8.2.6 Set Tracking Parameters	97
Chapter 9 Arming Schedule and Alarm Linkage	98
9.1 Set Arming Schedule	98
9.2 Linkage Method Settings	98
9.2.1 Trigger Alarm Output	98
9.2.2 FTP/NAS/Memory Card Uploading	99
9.2.3 Send Email	100
9.2.4 Notify Surveillance Center	101
9.2.5 Trigger Recording	101
9.2.6 Flashing Light	101
9.2.7 Audible Warning	102

Chapter 10 Network Settings	103
10.1 TCP/IP	103
10.1.1 Multicast	104
10.1.2 Multicast Discovery	104
10.2 Port	105
10.3 Port Mapping	106
10.3.1 Set Auto Port Mapping	106
10.3.2 Set Manual Port Mapping	106
10.3.3 Set Port Mapping on Router	107
10.4 SNMP	108
10.5 Access to Device via Domain Name	108
10.6 Access to Device via PPPoE Dial Up Connection	109
10.7 Accessing via Mobile Client	109
10.7.1 Enable Hik-Connect Service on Camera	110
10.7.2 Set Up Hik-Connect	111
10.7.3 Add Camera to Hik-Connect	111
10.8 Set ISUP	112
10.9 Set Open Network Video Interface	112
10.10 Set Network Service	113
10.11 Set Alarm Server	114
10.12 TCP Acceleration	114
10.13 Traffic Shaping	114
10.14 Data Monitoring	114
10.15 Set SRTP	115
Chapter 11 System and Security	116
11.1 View Device Information	116
11.2 Restore and Default	116
11.3 Search and Manage Log	116

11.4 Import and Export Configuration File	117
11.5 Export Diagnose Information	117
11.6 Reboot	117
11.7 Upgrade	117
11.8 Undervoltage Alarm	118
11.9 View Open Source Software License	118
11.10 Set Live View Connection	118
11.11 Time and Date	118
11.11.1 Synchronize Time Manually	118
11.11.2 Set NTP Server	119
11.11.3 Set DST	119
11.12 Set RS-485	119
11.13 Security	120
11.13.1 Authentication	120
11.13.2 Set IP Address Filter	120
11.13.3 Set MAC Address Filter	121
11.13.4 Set HTTPS	121
11.13.5 Security Audit Log	122
11.13.6 Set QoS	123
11.13.7 Set IEEE 802.1X	123
11.13.8 Certificate Management	124
11.13.9 Control Timeout Settings	126
11.13.10 SSH	126
11.13.11 User and Account	127
Appendix A. FAQ	129

Chapter 1 Overview

1.1 Product Introduction

The network speed dome combines a panoramic channel and a PTZ channel to offer overall and detailed HD monitoring.

1.2 Key Function

The key functions of the device are as follows.

Audio and Visual Alarm

The device supports flashing light alarm and audio alarm to warn intruders off.

Linked Tracking and Capture

The panoramic channel and the PTZ channel work together to detect, locate and track targets in both overall pictures and adequate details.

Face Capture

The device detects, captures, grades, and filters moving faces, and outputs captured pictures.

Capture Target with Feature

The device captures faces and human bodies and extracts features of the target.

Person Arming

The device detects the armed face or human body in the monitoring scene. When the wanted targets are found, the device triggers alarms, and starts tracking and capturing the target. The realtime target location and other related information are uploaded during tracking if properly configured.

Vehicle Detection

The device detects vehicles in the detection area, recognizes license plates, captures and saves pictures, and uploads alarms.

Vehicle Arming

The device detects the armed vehicle (license plates) in the monitoring scene. When the wanted vehicles are found, the device triggers alarms, and starts tracking and capturing the target. The real-time target location and other related information are uploaded during tracking if properly configured.

Event Function

The device detects basic events and multiple smart events.

People Density

The device detects the level of people density in the detection areas.

PTZ Function

The device supports PTZ functions, such as presets, scans, patrol, and power-off memory.

1.3 System Requirement

Your computer should meet the requirements for visiting and operating the product.

Recommended Specifications	
Operating System	Microsoft Windows XP/ Windows 7/ Windows 8/ Windows 10 Mac OS 10.13 or later
CPU	Intel® Pentium® IV 3.0 GHz or higher
RAM	1 GB or higher
Display	1024 × 768 resolution or higher
Web Browser	Internet Explorer 10 and above version, Apple Safari 12 and above version, Mozilla Firefox 52 and above version, Google Chrome 57 and above version.

Chapter 2 Device Activation and Accessing

To protect the security and privacy of the user account and data, you should set a login password to activate the device when access the device via network.



Refer to the user manual of the software client for the detailed information about the client software activation.

2.1 Activate Device

The device needs to be activated by setting a strong password before use. This part introduces activation using different client tools.

2.1.1 Activate Device via Web Browser

Use web browser to activate the device. For the device with the DHCP enabled by default, use SADP software or PC client to activate the device.

Before You Start

Make sure your device and your PC connect to the same LAN.

Steps

1. Change the IP address of your PC to the same subnet as the device.
The default IP address of the device is 192.168.1.64.
2. Open a web browser and input the default IP address.
3. Create and confirm the admin password.



STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click **OK** to complete activation and enter **Live View** page.
5. Modify IP address of the camera.
 - 1) Enter IP address modification page. **Configuration** → **Network** → **TCP/IP**
 - 2) Change IP address.
 - 3) Save the settings.

2.1.2 Activate via SADP

SADP is a tool to detect, activate and modify the IP address of the device over the LAN.

Before You Start

- Get the SADP software from the supplied disk or the official website <http://www.hikvision.com/>, and install the SADP according to the prompts.
- The device and the PC that runs the SADP tool should belong to the same subnet.

The following steps show how to activate one device and modify its IP address. For batch activation and IP address modification, refer to *User Manual of SADP* for details.

Steps

1. Run the SADP software and search the online devices.
2. Find and select your device in online device list.
3. Input new password (admin password) and confirm the password.



Caution

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click **Activate** to start activation.

The screenshot shows the SADP software interface. On the left, there is a table of online devices. The table has columns for ID, Device Type, Security, IPv4 Address, Port, Software Version, IPv4 Gateway, HTTP Port, and Device Serial No. The device with ID 007 is highlighted in red and labeled 'Inactive' with the IP address 192.168.1.64. A red box around this row is labeled 'Select inactive device.' Below the table, there is a red box labeled 'Input and confirm password.' On the right side of the interface, there is a panel titled 'Activate the Device'. It shows a blue padlock icon and the text 'The device is not activated.' Below this, there is a blue button that says 'You can modify the network parameters after the device activation.' and an 'Activate Now' button. At the bottom of the panel, there are input fields for 'New Password' and 'Confirm Password', both with masked characters. A strength indicator shows 'Strong' with a green bar. There is also a checkbox for 'Enable Hik-Connect' and a red 'Activate' button at the bottom.

Status of the device becomes **Active** after successful activation.

5. Modify IP address of the device.
 - 1) Select the device.

- 2) Change the device IP address to the same subnet as your computer by either modifying the IP address manually or checking **Enable DHCP**.
- 3) Input the admin password and click **Modify** to activate your IP address modification.

2.2 Access Device via Web Browser

Before You Start

Check the system requirement to confirm that the operating computer and web browser meets the requirements. See **System Requirement** .

Steps

1. Open the web browser.
2. Input IP address of the device to enter the login interface.
3. Input user name and password.



Note


Illegal login lock is activated by default. If admin user performs seven failed password attempts (five attempts for user/operator), the IP address is blocked for 30 minutes.

If illegal login lock is not needed, go to **Configuration → System → Security → Security Service** to turn it off.

4. Click **Login**.
5. Download and install appropriate plug-in for your web browser.
For IE based web browser, webcomponents and QuickTime™ are optional. For non-IE based web browser, webcomponents, QuickTime™, VLC and MJPEG are optional.

2.2.1 Plug-in Installation

Certain operation systems and web browser may restrict the display and operation of the device function. You should install plug-in or complete certain settings to ensure normal display and operation. For detailed restricted function, refer to the actual device.

Operating System	Web Browser	Operation
Windows	Internet Explorer 10+	Follow pop-up prompts to complete plug-in installation.
Windows 7 and above version	Google Chrome 57+ Mozilla Firefox 52+	Click  Download Plug-in to download and install plug-in.
Mac OS	Google Chrome 57+ Mozilla Firefox 52+ Mac Safari 12+	Plug-in installation is not required. Go to Configuration → Network → Advanced Settings

Operating System	Web Browser	Operation
		→ Network Service to enable WebSocket or Websockets for normal view. Display and operation of certain functions are restricted. For example, Playback and Picture are not available. For detailed restricted function, refer to the actual device.

 **Note**

The device only supports Windows and Mac OS system and do not support Linux system.

2.2.2 Admin Password Recovery

If you forget the admin password, you can reset the password by clicking **Forget Password** on the login page after completing the account security settings.

You can reset the password by setting the security question or email.

 **Note**

When you need to reset the password, make sure that the device and the PC are on the same network segment.

Security Question

You can set the account security during the activation. Or you can go to **Configuration → System → User Management**, click **Account Security Settings**, select the security question and input your answer.

You can click **Forget Password** and answer the security question to reset the admin password when access the device via browser.

Email

You can set the account security during the activation. Or you can go to **Configuration → System → User Management**, click **Account Security Settings**, input your email address to receive the verification code during the recovering operation process.

2.2.3 Illegal Login Lock

It helps to improve the security when accessing the device via Internet.

Go to **Configuration → System → Security → Security Service** , and enable **Enable Illegal Login Lock**. **Illegal Login Attempts** and **Locking Duration** are configurable.

Illegal Login Attempts

When your login attempts with the wrong password reach the set times, the device is locked.

Locking Duration

The device releases the lock after the setting duration.

Chapter 3 Smart Function

3.1 Allocate VCA Resource

VCA resource offers you options to enable certain VCA functions according to actual needs. It helps allocate more resources to the desired functions.

Steps

1. Go to **VCA → VCA Resource** .
2. Select desired VCA functions.
3. Save the settings.



Certain VCA functions are mutually exclusive. When a certain function or functions are selected and saved, others will be hidden.

3.2 Set Camera Info

Customize specific information for the device. It may help identify a certain device when multiple devices are under management.

Go to **VCA → General VCA Resource** to set **Camera No.** and **Camera Info**.

3.3 Capture Target with Feature

It is to detect, capture and upload features of targets in multiple types, such as human face and human body.

3.3.1 Set Detection Rule

After the rules and algorithm parameters are set, the device captures targets of multiple types and triggers linkage actions automatically.

Steps

1. Go to **VCA → Face+Human → Rule** .
2. Check **Enable**.
3. Select a configuration mode.

Normal One detection scene is allowed to set. The device captures targets in the scene in the set arming schedule.
See for details.

Expert The device can patrol among the detection scenes and capture target images. Detection scenes and patrol schedule should be set in advance. See for details.

4. Click **Save**.

What to do next

Go to **Picture** to search and view the captured pictures.

Go to **Smart Display** to see currently captured target pictures.

3.3.2 Overlay and Capture

Choose to configure capture parameters and the information you want to display on stream and picture.

Display VCA Info. on Stream

Display smart information on stream, including the target and rules information.

Display Target Info. on Alarm Picture

Overlay the alarm picture with target information.

Target Picture Settings

You can set the face picture type by selecting **Custom**, **Head Shot**, **Half-Body Shot**, or **Full-Body Shot**. If you select **Custom**, you can define detailed picture width and height of a picture freely. If the captured pictures should have the same picture height, check **Fixed Value** and input desired picture height.

Face Beautification

Check **Face Beautification** and adjust the beautification level as needed.





Note

Face Beautification slightly adjusts skin tone and reduces facial noise.

Background Picture Settings

Comparing to target picture, background picture is the scene image offers extra environmental information. You can set the background picture quality and resolution. If the background image need to be uploaded to surveillance center, check **Background Upload**.

Text Overlay

You can check desired items (Device No., Camera Info. and Capture Time) and adjust their order to display on captured pictures by  .

See **Set Camera Info** to set **Device No.** and **Camera Info.**

3.3.3 Advanced Parameters

It is used to set the parameters of the algorithm library for better detection performance.

HMS Version

It refers to the current algorithm version, which cannot be edited.

Restore Defaults

Click **Restore** to restore all the settings in advanced configuration to the factory default.

Capture Parameters

Best Shot

The device captures the target picture with the highest score after setting the parameters.

Capture Times

It refers to the capture times a face will be captured during its stay in the detection area.

Capture Threshold

It refers for the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Remove Duplicated Faces

This function can filter out repeated captures of certain face.

Similarity Threshold for Duplicates Removing

It is the similarity between the newly captured face and the picture in the duplicates removing library. When the similarity is higher than the value you set, the captured picture is regarded as a duplicated face and will be dropped.

Duplicates Removing Library Grading Threshold

It is the face grading threshold that triggers duplicates checking. When the face grading is higher than the set value, the captured face is compared with the face pictures that are already in the duplicates removing library.

Duplicates Removing Library Update Time

Every face picture is kept in the duplicates removing library for the set update time.

Quick Shot

The device captures the target picture once the score of the captured face exceeds the **Quick Shot Threshold** during the **Max. Capture Interval**. Otherwise, the device selects and uploads the picture with the highest score during the **Max. Capture Interval**.

Quick Shot Threshold

It refers to the quality of face to trigger quick shot.

Max. Capture Interval

It describes the max. time occupation for one quick shot.

Capture Times

It refers to the capture times a face will be captured during its stay in the configured area. The device captures the target face according to the set times.

Face Exposure

Enable the function, and the device automatically adjusts exposure level when human faces appear in the scene.

Reference Brightness

It refers to the reference brightness of a face in the face exposure mode. If a face in the actual scene is brighter than the set reference brightness, the device lowers the exposure level. If a face in the actual scene is darker than the set reference, the device increases the exposure level.

Minimum Duration

The extra time the device keeps the face exposure level after the face disappears in the scene.

Face Filtering Time

It means the time interval between the camera detecting a face and taking a capture action. If the detected face stays in the scene for less than the set filtering time, capture will not be triggered. For example, if the face filtering time is set as 5 seconds, the camera will capture the detected face when the face keeps staying in the scene for 5 seconds.

Data Upload

Check one or more desired target types for picture uploading.

3.4 Person Arming

When the device detects the armed face or human body in the monitoring scene, it triggers alarms, and tracks and captures the target. During the tracking, the target location and other related information are uploaded.

Note

- Select **Person Arming** on **VCA Resource** page to show the configuration page.
- Target location information can be uploaded only when you set the GPS Calibration properly. See ***GPS Calibration*** for instructions.
- This function is only supported by certain device models.

Device Auto Person Arming and **Manual Person Arming** are supported. The **Manual Person Arming** has a higher priority than the other, which means it can interrupt the ongoing auto person arming.

Manual Person Arming	The device tracks and captures the manually selected target and uploads the related data.
Device Auto Person Arming	The device tracks and captures targets automatically according to the setting rule.

3.4.1 Device Auto Person Arming

You need to set face picture libraries and auto person arming rules to realize device auto person arming.

Set Auto Person Arming Rule

Before You Start

The face picture library should be set in advance. See .

Steps

1. Go to **VCA → Set Application → Person Arming → Basic Settings** .

2. Check **Enable**.

3. Set the parameters for face picture comparison and arming.

1) Set the **Face Grading Threshold for Detection** and **Max. Detection Time of Face**.

Face Grading Threshold for Detection

Every face entering the monitoring scene is graded by the device according to the quality.

When a face with its grading exceeds the set threshold, it triggers the comparison with the pictures in the selected face picture library.

Max. Detection Time of Face

If the grading of a target face does not reach the set **Face Grading Threshold for Detection** during the set time, the device stops grading the target face.

2) Select a desired library, and set as the **Face Picture Library**.

3) Set the arming schedule and linkage method for the selected library.

Note

The arming schedule and linkage method for different libraries are allowed to set independently.

4. Click **Save**.

Advanced Settings

In advanced parameters, you can set the tracking, capture and other parameters for the person arming.

Tuning Mode

The mode is only for the professional users.

Tracking Capture

Check to enable the device to capture the targets during the tracking. Some capture parameters are allowed to adjust.

Face Capture Threshold

It refers for the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Human Body Capture Threshold

It refers for the quality of human body to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Tracking Parameters

Zooming Control

Two modes are available. Controlled by target frame or by tilt angle of the device.

By Tilt Angle

The device calculates the tracking zoom ratio automatically according to the tilt angle of the device.



The attitude of the device affects the accuracy of this zooming control mode. For the model with a built-in gyroscope, try to calibrate the attitude if some zooming problems happen during tracking. See [***Set Device Position***](#) for instructions.

By Target Frame

The tracked target has a virtual frame around. The device calculates a suitable zoom ratio according to the frame and the set **Tracking Zoom Ratio**. Larger value means bigger zoom ratio.

Dwell Time after Failed Tracking

The time the device stays at the position where the target tracking fails.

Report Interval of Tracking Info

The alarming information upload interval during tracking.

Wait to Stop Tracking If Low Validity

The validity is an internal parameter that helps judge whether the device should keep tracking or not. This parameter is the waiting time level before the device stops tracking when the validity is low. Larger value means longer waiting time.

Wait to Lower Tracking Speed If Low Validity

The validity is an internal parameter that helps judge whether the PTZ channel should lower the tracking speed or not. This parameter is the waiting time level before the device lowers the tracking speed when the validity is low. Larger value means longer waiting time.

Tracking Duration

When you set the **Tracking Duration** as **0**, the device keeps tracking the target until it disappears.

When you set the **Tracking Duration** as a number other than 0, the device tracks a target for the set time. The tracking stops when the time is up or when the target disappears.

Display Tracking Target on Panorama

Check to display a frame around the target that is tracked by the PTZ channel.



Note

Go to **Configuration** → **Local** → **Live View Parameters**, and enable **Rules** before using this function.

3.4.2 Manual Person Arming


The device tracks and captures the manually selected target and uploads the related data.



Note

Manual face capture is prior to the manual person arming. When the manual face capture is in use, the manual person arming is temporarily unavailable.

Steps

1. Click **Live View**.
2. Click  to start manual person arming.
3. Click or frame a person as the target.

The device starts to track the target and upload related data.

4. Click  to stop manual person arming.

3.4.3 Capture Settings

Multi-target-type detection is used for capturing armed persons. You can set the capture rules and parameters according to your needs.

Set Detection Rule

After the rules and algorithm parameters are set, the device captures targets of multiple types and triggers linkage actions automatically.

Steps

1. Go to **VCA → Face+Human → Rule** .
2. Check **Enable**.
3. Select a configuration mode.

Normal One detection scene is allowed to set. The device captures targets in the scene in the set arming schedule.
See for details.

Expert The device can patrol among the detection scenes and capture target images. Detection scenes and patrol schedule should be set in advance.
See for details.

4. Click **Save**.

What to do next

Go to **Picture** to search and view the captured pictures.

Go to **Smart Display** to see currently captured target pictures.

Overlay and Capture

Choose to configure capture parameters and the information you want to display on stream and picture.

Display VCA Info. on Stream

Display smart information on stream, including the target and rules information.

Display Target Info. on Alarm Picture

Overlay the alarm picture with target information.

Target Picture Settings

You can set the face picture type by selecting **Custom**, **Head Shot**, **Half-Body Shot**, or **Full-Body Shot**. If you select **Custom**, you can define detailed picture width and height of a picture freely. If the captured pictures should have the same picture height, check **Fixed Value** and input desired picture height.

Face Beautification

Check **Face Beautification** and adjust the beautification level as needed.





Note

Face Beautification slightly adjusts skin tone and reduces facial noise.

Background Picture Settings

Comparing to target picture, background picture is the scene image offers extra environmental information. You can set the background picture quality and resolution. If the background image need to be uploaded to surveillance center, check **Background Upload**.

Text Overlay

You can check desired items (Device No., Camera Info. and Capture Time) and adjust their order to display on captured pictures by  .

See [Set Camera Info](#) to set **Device No.** and **Camera Info.**

Advanced Parameters

It is used to set the parameters of the algorithm library for better detection performance.

HMS Version

It refers to the current algorithm version, which cannot be edited.

Restore Defaults

Click **Restore** to restore all the settings in advanced configuration to the factory default.

Capture Parameters

Best Shot

The device captures the target picture with the highest score after setting the parameters.

Capture Times

It refers to the capture times a face will be captured during its stay in the detection area.

Capture Threshold

It refers for the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Remove Duplicated Faces

This function can filter out repeated captures of certain face.

Similarity Threshold for Duplicates Removing

It is the similarity between the newly captured face and the picture in the duplicates removing library. When the similarity is higher than the value you set, the captured picture is regarded as a duplicated face and will be dropped.

Duplicates Removing Library Grading Threshold

It is the face grading threshold that triggers duplicates checking. When the face grading is higher than the set value, the captured face is compared with the face pictures that are already in the duplicates removing library.

Duplicates Removing Library Update Time

Every face picture is kept in the duplicates removing library for the set update time.

Quick Shot

The device captures the target picture once the score of the captured face exceeds the **Quick Shot Threshold** during the **Max. Capture Interval**. Otherwise, the device selects and uploads the picture with the highest score during the **Max. Capture Interval**.

Quick Shot Threshold

It refers to the quality of face to trigger quick shot.

Max. Capture Interval

It describes the max. time occupation for one quick shot.

Capture Times

It refers to the capture times a face will be captured during its stay in the configured area. The device captures the target face according to the set times.

Face Exposure

Enable the function, and the device automatically adjusts exposure level when human faces appear in the scene.

Reference Brightness

It refers to the reference brightness of a face in the face exposure mode. If a face in the actual scene is brighter than the set reference brightness, the device lowers the exposure level. If a face in the actual scene is darker than the set reference, the device increases the exposure level.

Minimum Duration

The extra time the device keeps the face exposure level after the face disappears in the scene.

Face Filtering Time

It means the time interval between the camera detecting a face and taking a capture action. If the detected face stays in the scene for less than the set filtering time, capture will not be triggered. For example, if the face filtering time is set as 5 seconds, the camera will capture the detected face when the face keeps staying in the scene for 5 seconds.

Data Upload

Check one or more desired target types for picture uploading.

3.5 Intelligent Traffic Event (ITS)

The device detects vehicles, traffic violations, and traffic accidents, captures evidence pictures, and collects traffic data. You can set the rules for detection, alarm messages, and data uploading.

3.5.1 Basic Settings

You can set the basic information, listening server, and ANR.

Go to **VCA → Intell Traffic Event → Common Settings → Basic Configuration** to complete the settings.

Basic Information

Select the **Country/Region**.

Listening Server

If the device uploads alarms in listening mode via our company's SDK, you should set the IP address and port for the listening server.

ANR

When the network is disconnected, data is temporarily saved on the memory card. When the network connection is resumed, the device automatically uploads the saved data to the arming host, in which case, the arming host IP address is required.



Note

A memory card should be installed in the device. Memory card settings should be completed. See **Memory Card** for instructions.

3.5.2 Common Settings

These are the commonly used settings for all types of ITS detections.

Set Lane Area

A lane area is where you want to set the detection rules. Mark the lane area according to the actual lanes in the view.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** and click **Lane Area**.
2. Click **Add**.
Blue lane lines and a trigger line show on the live view.
3. Drag the lane lines to frame the actual lane on the image.



Note

- You can click **Full Screen** to enlarge the live view window. Press **ESC** on the keyboard to exit.
 - Lane lines cannot overlap.
-
4. Select the direction of the traffic and line type of the left and right lane lines according to the actual situation.
 5. Drag the trigger line to adjust its length and position.
The trigger line is where the device captures the vehicle pictures in some detections and where traffic data collection is triggered.
 6. **Optional:** Repeat the steps above to set multiple lane areas.

7. Click **Save**.

Set Polygon Area


A polygon area is where you want to set the detection rules. Draw the area according to the actual situation.

Steps

1. Go to **VCA → Set Application → Tunnel Event Detection → Panoramic Rule Settings** and click **Polygon Area**.
2. Click **Add Area**.
3. Click to mark the corner points of the polygon area. Right click to complete drawing.




Note

- You can click  to enlarge the live view window. Press **ESC** on the keyboard to exit.
- Polygon areas cannot overlap.
- Click on the area and you can drag the corner points to adjust the area.

-
4. Select the line type of the left and right side lines according to the actual situation.
 5. **Optional:** Repeat the steps above to set multiple polygon areas.



Note

When there are multiple polygon areas, you can click on one area and click  to delete it.

-
6. Click **Save**.

Set Detection Scene

A detection scene is an area you want to monitor. If one detection scene cannot cover all the intended monitoring areas, set multiple detection scenes.

Steps

1. Go to **VCA → Set Application → ITS (Intelligent Transportation System) → Close-up Rule Settings** .
2. **Optional:** Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.

Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.

3. Select a **Scene**.
4. Check **Enable** to enable the scene.
5. Click the PTZ control buttons to adjust the scene to where you want to monitor.
6. Enter a **Scene Name**.
7. Select the **Scene Direction** according to the traffic direction in the scene.
8. Click **Save**.

- 9. **Optional:** Repeat the steps above to set multiple detection scenes.
- 10. **Optional:** Select a **Scene** to turn the live view image to the scene.

Set ITS Arming Schedule




The device automatically detects among multiple scenes according to the arming schedule.


Before You Start

Set multiple detection scenes. See [Set Detection Scene](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Arming Schedule** .
2. Check **Enable**.
3. Draw a bar on the timeline to cover the arming hours.
4. **Optional:** Click on an arming period and adjust the arming hours.
 - Enter the start time and end time and click **Save** to fine-tune the arming period.
 - Click **Delete** to delete the arming period.
5. Click on an arming period, and click **Configuration**.
6. Set the **Patrol Sequence** and **Dwell Time** in each scene.

	Add a detection scene to the patrol sequence.
	Adjust the order of the scenes.
	Remove the detection scene from the patrol sequence.

7. Click  to copy the setting to another day.
8. Click **Save**.
9. **Optional:** Go to **VCA → Intell Traffic Event → Advanced Configuration → Advanced** to set **PTZ Camera Motion Parameters**.

Enforcement Park Time

Manual control of the device takes priority over automatic patrols. When manual control is over, the device waits for the set **Enforcement Park Time** before resuming automatic detection.

Scene Auto-switch

If only **Illegal Parking Detection** is enabled in a scene, the device automatically switches to the next scene when no evidence picture capturing is triggered for the set **Auto-switch Interval**.

3.5.3 Enforcement

Enforcement includes detection of traffic violations and evidence picture capturing.

Set Illegal Parking Detection

Illegal parking is the violation of parking rules, for example, parking in a restricted place. The device can automatically detect violations and capture evidence pictures or you can manually capture pictures on the live view image.

Set Auto Capture for Illegal Parking

Set the rules for the device to automatically detect illegal parking violations and capture evidence pictures.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Polygon Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings**.
2. Select **Enforcement**.
3. Click **Illegal Parking Detection** and check **Enable**.
4. Select **Arm Polygon**.

Illegal parking detection takes effect in the selected polygon areas.

5. Select the car types.

Only selected car types will trigger illegal parking alarms.

6. Check **Illegal Parking License Plate Recognition**.

When an illegal parking event is triggered, the device zooms in to recognize the license plate. If the **License Plate Thumbnail** in **Advanced** settings is enabled, a picture of the license plate is uploaded with the alarm message.

7. Set **Parking Tolerance**.

When the vehicle stays in the detection area longer than the parking tolerance, the device starts to take evidence pictures.

8. Set the evidence picture parameters.

- 1) Set **Amount of Pictures**.

- 2) Click **Illegal Parking Capture Settings**, select the **Picture Type** for each picture and set the **Capture Interval** between the pictures.

Note

- You can select **Picture Type** as **Custom** after you upload the custom picture in **VCA → Intell Traffic Event → Advanced Configuration → Picture**.
- To ensure clear license plate recognition, set at least one **Close View** picture.

-
9. Click **Advanced**.

No Alarm When Congestion Occurs in Detection Area

Check to enable this function and alarms will not be triggered when congestion occurs in the detection area.

Sensitivity

With higher sensitivity, the device is more sensitive to detect and recognize targets.

10. Click **Save**.

What to do next

Set the arming schedule, linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Manual Capture for Illegal Parking

Set the rules for manually selecting illegal parking vehicles and capturing evidence pictures.

Steps

1. Go to **VCA → Intell Traffic Event → Advanced Configuration → Manual Capture for Illegal Parking**.
2. Set the manual capture parameters.

Manual License Plate Recognition

When an illegal parking vehicle is manually selected on the live view image, the device zooms in to recognize the license plate. If the **License Plate Thumbnail** in **Advanced** settings is enabled, a picture of the license plate is uploaded with the alarm message.

Capture No Plate Vehicle

Check to enable this function. The device captures the evidence pictures even if the license plate of a vehicle is not recognized.

Plate Matching Ratio

The device compares the captured pictures of a vehicle and saves the pictures that have a higher matching ratio than the set **Plate Matching Ratio**. If the ratio is set to **0**, the device does not compare the pictures.


Amount of Pictures

Set the amount of pictures the device captures when a vehicle is manually selected.

Description

Select the **Picture Type** for each picture and set the **Capture Interval** between the pictures.

You can select **Picture Type** as **Custom** after you upload the custom picture in **VCA → Intell Traffic Event → Advanced Configuration → Picture**.

3. Click **Save**.
4. Go to **Live View** and click  on the toolbar.
5. Select an illegal parking vehicle on the live view image.
The device takes evidence pictures of the vehicle.
6. Click the icon again to end manual capture.

What to do next

Set the linkage and alarm. See [*ITS Linkage and Alarm*](#) for details.

Set Illegal Parking Evidence Capture Parameters

Go to **VCA** → **Intell Traffic Event** → **Advanced Configuration** → **Advanced** to set the parameters.

Illegal Parking LPR Area

Set the size of license plate recognition area that suits the actual situation to avoid mistakenly recognize the license plate of other vehicles around.

Illegal Parking LPR Double Check

The device double-checks the license plate to avoid mistakenly capturing of other vehicles.

Illegal Parking LPR Grading Threshold

If the confidence level of captured license plate or any character on the license plate is lower than the threshold, the plate will not be recognized. The alarm information may be filtered out if the threshold is too high.

Illegal Parking Plate Size Threshold

If the width of the captured license plate is lower than the set threshold, the plate will not be recognized. The lower the threshold is, the smaller plates will be filtered out. It is recommended to keep the default value.

Illegal Parking Target Lock

When the illegal parking target lock is enabled, the device focuses on the vehicle that triggers the evidence capture and ignores other vehicles. It is suitable for situations where strict enforcement is required, but it decreases the overall evidence capture efficiency.

Set Reverse Driving Detection

Reverse driving refers to driving against the direction of traffic. The device detects violations and captures evidence pictures.

Before You Start

Set detection scenes and detection areas. See [*Set Detection Scene*](#) and [*Set Lane Area*](#) for details.

Steps

1. Go to **VCA** → **Intell Traffic Event** → **Common Settings** → **Speed Dome Rule Settings** .
2. Select **Enforcement**.
3. Click **Reverse Driving Detection** and check **Enable**.
4. Select **Arm Lane**.



Note

The direction of the arm lane cannot be **Unknown**.

Reverse driving detection takes effect in the selected lane areas.

5. Set the Amount of Pictures.

The device takes evidence pictures of the set amount when a vehicle hits the trigger line in the detection area.

6. Set Sensitivity.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

7. Click Save.

What to do next

Set the arming schedule, linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set U-turning Detection

The device detects vehicles making a u-turn where it is not allowed and captures evidence pictures.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings .**
2. Select **Enforcement.**
3. Click **U-turning Detection** and check **Enable.**
4. Select at least two lanes in **Arm Lane.**



Note

The direction of the arm lanes cannot be the same and the lane lines between the two lanes cannot be **Broken Line**. Otherwise, the u-turning event will not be triggered.

U-turning detection takes effect in the selected lane areas.

5. Set Sensitivity.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

6. Click Save.

What to do next

Set the arming schedule, linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Over Lane Line Detection

The device detects vehicles driving over lane lines where it is not allowed and captures evidence pictures.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .
2. Select **Enforcement**.
3. Click **Over Lane Line Detection** and check **Enable**.
4. Select **Arm Lane**.



If the lane line is **Solid-Broken Line** or **Broken-Solid Line**, only driving from the solid side triggers the alarm.

Over lane line detection takes effect in the selected lane areas.

5. Set the **Amount of Pictures**.

The device takes evidence pictures of the set amount when a vehicle hits the trigger line in the detection area.

6. Set **Sensitivity**.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

7. Click **Save**.

What to do next

Set the arming schedule, linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Illegal Lane Change Detection

The device detects vehicles changing lanes where it is not allowed and captures evidence pictures.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) , [Set Polygon Area](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .
2. Select **Enforcement**.
3. Click **Illegal Lane Change Detection** and check **Enable**.
4. Select **Arm Lane** or **Arm Polygon**.



- If the line type is **Solid-Broken Line** or **Broken-Solid Line**, only driving from the solid side triggers the alarm.
 - If you choose **Arm Polygon**, set and select at least two polygon areas for the detection to take effect.
-

Illegal lane change detection takes effect in the selected lanes or areas.

5. Set *Sensitivity*.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

6. Click *Save*.

What to do next

Set the arming schedule, linkage and alarm. See [*Set ITS Arming Schedule*](#) and [*ITS Linkage and Alarm*](#) for details.

Set Vehicle on Non-motor Vehicle Lane Detection

The device detects vehicles driving on non-motor vehicle lane and captures evidence pictures.

Before You Start

Set detection scenes and detection areas. See [*Set Detection Scene*](#) and [*Set Lane Area*](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .
2. Select **Enforcement**.
3. Click **Vehicle on Non-motor Vehicle Lane** and check **Enable**.
4. Select **Arm Lane**.

Vehicle on non-motor vehicle lane takes effect in the selected lane areas.

5. Set the *Amount of Pictures*.

The device takes evidence pictures of the set amount when a vehicle hits the trigger line in the detection area.

6. Set *Duration*.

When the vehicle stays in the detection area longer than the duration, an alarm is triggered.

7. Click *Save*.

What to do next

Set the arming schedule, linkage and alarm. See [*Set ITS Arming Schedule*](#) and [*ITS Linkage and Alarm*](#) for details.

Advanced Settings for Enforcement

Go to **VCA → Intell Traffic Event → Advanced Configuration → Advanced** to set the parameters.

Alarm Uploading

License Plate Thumbnail

When the license plate is recognized during enforcement, a license plate image is uploaded.

Upload Traffic Violation Data

Check to upload the alarm data when an enforcement event is triggered.

Upload Enforcement Data

Check to upload the alarm data when evidence capture of an enforcement is triggered.

Violation Filtering Parameters

Check to enable filtering mode.

Repeated Alarm Filtering Time

If a vehicle stays unmoved within the set filtering time, illegal parking alarm will not be triggered repeatedly.

Illegal Filtering Threshold

Within the set threshold time, the same vehicle will not trigger the same enforcement alarm repeatedly.

For example, when the illegal filtering threshold is set to **30** minutes, if a vehicle triggers reverse driving alarm, other reverse driving violations of the same vehicle within 30 minutes do not count. After 30 minutes, reverse driving of the vehicle will trigger a second alarm.

Capture No Plate Vehicle

Check to enable this function. The device captures the evidence pictures even if the license plate of a vehicle is not recognized.

Plate Matching Ratio

The device compares the captured pictures of a vehicle and saves the pictures that have a higher matching ratio than the set **Plate Matching Ratio**. If the ratio is set to **0**, the device does not compare the pictures.

Common Evidence Capture Parameters

Alarm Feature View

When **Alarm Feature View** is enabled, the last evidence picture of enforcement detections and the alarm picture of vehicle detection are set to be feature view pictures. A feature view picture is a close-up picture of a target vehicle. The function takes effect when **Track and Collect Evidence** is not enabled.

Feature View Size Level

The higher the feature view size level is, the larger the target vehicle is in feature view pictures.

Ratio Coefficient of Getting Evidence

The higher the ratio coefficient of getting evidence is, the more the picture is enlarged when the device is recognizing the license plate.

Track and Collect Evidence

When **Track and Collect Evidence** is enabled, the license plate recognition of reverse driving, over lane line, illegal lane change, u-turning, and vehicle on non-motor vehicle lane is completed during tracking. If it is not enabled, recognition is done when the license plate is large and close to the bottom of the image.

3.5.4 Traffic Event Detection

Traffic event detection includes detection of incidents happens on the road, for example, thrown objects and traffic congestion. The device captures pictures and uploads alarm data.

Set Fallen Object Detection

The device detects fallen objects on the road and captures pictures.

Before You Start

Set detection areas. See [Set Polygon Area](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Set Application → Tunnel Event Detection → Panoramic Rule Settings** .
2. Click **Add Event** and select **Fallen Object Detection**.
3. Select **Arming Lane** or **Arming Polygon**.

Fallen object detection takes effect in the selected lanes or areas.

4. Set **Sensitivity**.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

5. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [Set Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Pedestrian Detection

The device detects pedestrians and non-motor vehicles in the detection area and captures pictures.

Before You Start

Set detection areas. See [Set Polygon Area](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Set Application → Tunnel Event Detection → Panoramic Rule Settings** .
2. Click **Add Event** and select **Pedestrian Detection**.
3. Select **Arming Lane** or **Arming Polygon**.

Pedestrian detection takes effect in the selected lanes or areas.

4. Set **Sensitivity**.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

5. Set **Duration**.

When the target stays in the detection area longer than the duration (at night, three times the duration), an alarm is triggered.

6. Set **Filtering Time**.

Within the set filtering time, the same target will not trigger the alarm repeatedly.

7. Select the target types in **Detection Target**.

Only selected target types trigger linkage and alarm.

8. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [**Set Arming Schedule**](#) and [**ITS Linkage and Alarm**](#) for details.

Set Congestion Detection

The device detects traffic congestion in the detection area and captures pictures.

Before You Start

Set detection areas. See [**Set Polygon Area**](#) and [**Set Lane Area**](#) for details.

Steps

1. Go to **VCA → Set Application → Tunnel Event Detection → Panoramic Rule Settings** .
2. Click **Add Event** and select **Congestion Detection**.
3. Select **Arming Lane** or **Arming Polygon**.

Congestion detection takes effect in the selected lanes or areas.

4. Set **Sensitivity**.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

5. Set **Duration**.

When the congestion in the detection area lasts longer than the duration, an alarm is triggered.

6. Set **Filtering Time**.

Within the set filtering time, the congestion in the same detection area will not trigger the alarm repeatedly.

7. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [**Set Arming Schedule**](#) and [**ITS Linkage and Alarm**](#) for details.

Set Roadblock Detection

The device detects roadblocks in the detection area and captures pictures.

Before You Start

Set detection scenes and detection areas. See [**Set Detection Scene**](#) , [**Set Polygon Area**](#) and [**Set Lane Area**](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .
2. Select **Traffic Event Detection**.
3. Click **Roadblock Detection** and check **Enable**.
4. Select **Arm Lane** or **Arm Polygon**.
Roadblock detection takes effect in the selected lanes or areas.
5. Set **Sensitivity**.
With higher sensitivity, the device is more sensitive to detect and recognize targets.
6. Set **Duration**.
When the roadblock stays in the detection area longer than the duration, an alarm is triggered.
7. Set **Filtering Time**.
Within the set filtering time, the roadblocks in the same detection area will not trigger the alarm repeatedly.
8. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Construction Detection

The device detects ongoing construction in the detection area and captures pictures.

Before You Start

Set detection areas. See [Set Polygon Area](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Set Application → Tunnel Event Detection → Panoramic Rule Settings** .
2. Click **Add Event** and select **Construction Detection**.
3. Select **Arming Lane** or **Arming Polygon**.
Construction detection takes effect in the selected lanes or areas.
4. Set **Sensitivity**.
With higher sensitivity, the device is more sensitive to detect and recognize targets.
5. Set **Duration**.
When the construction in the detection area lasts longer than the duration, an alarm is triggered.
6. Set **Filtering Time**.
Within the set filtering time, the construction in the same detection area will not trigger the alarm repeatedly.
7. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [Set Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

Set Traffic Accident Detection

The device detects traffic accidents in the detection area and captures pictures.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Polygon Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .

2. Select **Traffic Event Detection**.

3. Click **Traffic Accident Detection** and check **Enable**.

4. Select **Arm Polygon**.

Traffic accident detection takes effect in the selected areas.

5. Set **Sensitivity**.

With higher sensitivity, the device is more sensitive to detect and recognize targets.

6. Set **Duration**.

When the traffic accident in the detection area lasts longer than the duration, an alarm is triggered.

7. Set **Filtering Time**.

Within the set filtering time, the traffic accidents in the same detection area will not trigger the alarm repeatedly.

8. Click **Save**.

What to do next

Set the arming schedule, linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

3.5.5 Vehicle Detection

The device detects vehicles in the detection area, recognizes license plates, captures and saves pictures, and uploads alarms.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** .

2. Select **Vehicle Detection**.

3. Check **Enable**.

4. Select **Arm Lane**.

Vehicle detection takes effect in the selected lane areas.

5. Select the car types.

Only selected car types will trigger alarms.

6. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [**Set ITS Arming Schedule**](#) and [**ITS Linkage and Alarm**](#) for details.

Set Detection Scene

A detection scene is an area you want to monitor. If one detection scene cannot cover all the intended monitoring areas, set multiple detection scenes.

Steps

1. Go to **VCA → Set Application → ITS (Intelligent Transportation System) → Close-up Rule Settings**.
2. **Optional:** Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.
Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.
3. Select a **Scene**.
4. Check **Enable** to enable the scene.
5. Click the PTZ control buttons to adjust the scene to where you want to monitor.
6. Enter a **Scene Name**.
7. Select the **Scene Direction** according to the traffic direction in the scene.
8. Click **Save**.
9. **Optional:** Repeat the steps above to set multiple detection scenes.
10. **Optional:** Select a **Scene** to turn the live view image to the scene.

Set Lane Area

A lane area is where you want to set the detection rules. Mark the lane area according to the actual lanes in the view.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings** and click **Lane Area**.
2. Click **Add**.
Blue lane lines and a trigger line show on the live view.
3. Drag the lane lines to frame the actual lane on the image.

Note

- You can click **Full Screen** to enlarge the live view window. Press **ESC** on the keyboard to exit.
 - Lane lines cannot overlap.
-
4. Select the direction of the traffic and line type of the left and right lane lines according to the actual situation.
 5. Drag the trigger line to adjust its length and position.
The trigger line is where the device captures the vehicle pictures in some detections and where traffic data collection is triggered.
 6. **Optional:** Repeat the steps above to set multiple lane areas.
 7. Click **Save**.

Set ITS Arming Schedule




The device automatically detects among multiple scenes according to the arming schedule.


Before You Start

Set multiple detection scenes. See [Set Detection Scene](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Arming Schedule** .
2. Check **Enable**.
3. Draw a bar on the timeline to cover the arming hours.
4. **Optional:** Click on an arming period and adjust the arming hours.
 - Enter the start time and end time and click **Save** to fine-tune the arming period.
 - Click **Delete** to delete the arming period.
5. Click on an arming period, and click **Configuration**.
6. Set the **Patrol Sequence** and **Dwell Time** in each scene.

	Add a detection scene to the patrol sequence.
	Adjust the order of the scenes.
	Remove the detection scene from the patrol sequence.

7. Click  to copy the setting to another day.
8. Click **Save**.
9. **Optional:** Go to **VCA → Intell Traffic Event → Advanced Configuration → Advanced** to set **PTZ Camera Motion Parameters**.

Enforcement Park Time

Manual control of the device takes priority over automatic patrols. When manual control is over, the device waits for the set **Enforcement Park Time** before resuming automatic detection.

Scene Auto-switch

If only **Illegal Parking Detection** is enabled in a scene, the device automatically switches to the next scene when no evidence picture capturing is triggered for the set **Auto-switch Interval**.

3.5.6 Traffic Data Collection

The device collects and uploads traffic data including vehicle speed, traffic volume, headway time, headway distance, time occupancy of a lane, and space occupancy of a lane.

Before You Start

Set detection scenes and detection areas. See [Set Detection Scene](#) and [Set Lane Area](#) for details.

Steps

1. Go to **VCA → Intell Traffic Event → Common Settings → Speed Dome Rule Settings**.
2. Select **Traffic Data Collection**.
3. Check **Enable**.
4. Select **Arm Lane**.

Traffic data collection takes effect in the selected lane areas.

5. Set **Statistics Interval**.

Traffic volume in a lane is counted and uploaded by the statistics interval.

6. Click **Save**.

What to do next

Set the arming schedule and linkage and alarm. See [Set ITS Arming Schedule](#) and [ITS Linkage and Alarm](#) for details.

3.5.7 ITS Linkage and Alarm

When traffic events are detected, the device can perform linkage actions, for example, uploading captured pictures and sending alarm messages.



Note

Some linkage actions may not be supported by certain device models.

Upload Pictures

Set the parameters for the device to automatically upload captured pictures to FTP server or other platforms.

See [Upload by FTP](#) to upload captured pictures by FTP.

See [Upload by SDK](#) or [Set ISUP](#) to upload captured pictures to platforms.

Upload by FTP

Upload the data of enforcement, vehicle detection, and traffic data collection to an FTP server.

Before You Start

The FTP server is configured.

Steps

1. Go to **VCA → Intell Traffic Event → Advanced Configuration → FTP Host**
2. Check **Enable FTP**.
3. Select a **Character Encoding Mode**.
4. Enter the **IP Address, Port, User Name, and Password** of the FTP server.
5. Set the picture names and saving paths of detections.
6. Click **Save**.

Upload by SDK

Upload the alarm messages by SDK in listening and arming mode.

Go to **VCA → Intell Traffic Event → Common Settings → Basic Configuration** to set the parameters.

Listening Server

You can upload alarm messages and pictures to a listening server by SDK. Enter the **IP Address** and **Port** of the listening server and click **Save**.



Note

Make sure that the listening server is enabled with listening service and that the network connection with the device is normal.

ANR

You can upload alarm messages and pictures to an arming server by SDK. Enter the **Arming Host IP Address** and click **Save**. When the device loses connection with the arming server, the data is saved in the memory card of the device and will be uploaded again when the connection resumes.

Set Armed License Plates

You can specify the vehicles you want to arm by adding their license plates to the blocklist or allowlist.

Steps

1. Go to **VCA → Intell Traffic Event → Advanced Configuration → Blocklist & Allowlist** .
2. Click **Export** to export license plate list template.

Note

If a list of license plates exists, the existing list is exported.

3. Fill in the list.
4. Click **Browse** to import the list.
The list shows on the web page.
5. Select a mode according to your need.
 - Normal Mode** No vehicle is armed.
 - Allowlist Mode** Vehicles NOT on the list are armed.
 - Blocklist Mode** Only the vehicles on the list are armed.
6. Click **Save**.

Set Alarm Output Linkage

The device sends alarm signals to the connected alarm output devices when an alarm is triggered.

Before You Start

The device is connected to alarm output devices.

Steps

1. Go to **VCA → Intell Traffic Event → Advanced Configuration → Alarm Output Linkage**.
2. Select alarm output channels for each type of alarms.
3. Click **Save**.

What to do next

See [***Trigger Alarm Output***](#) for detailed alarm output settings.


3.5.8 Vehicle Arming

The device detects and tracks designated license plates, and uploads real-time target location and other related information.

Note



- Select **ITS (Intelligent Transportation System)** on **VCA Resource** page to show the configuration page.
 - Target location information can be uploaded only when the GPS calibration is completed. See [***GPS Calibration***](#) for configuration instructions.
 - This function is only supported by certain device models.
-

Manual vehicle arming and platform-controlled vehicle arming are supported, and manual vehicle arming has a higher priority.

Manual Vehicle Arming	The device tracks the target manually selected by user and uploads related information.
Platform-Controlled Vehicle Arming	The device receives orders from the platform and performs arming tasks.  Note To use platform-controlled vehicle arming, you need to build a platform with the SDK tool provided on our website.

Manual Vehicle Arming

Steps

1. Go to **Live View** .
2. Click  .
3. Frame or click on a vehicle in the live image.
The device starts to track the vehicle.
4. Click  to stop manual vehicle arming.

Platform-Controlled Vehicle Arming

The device receives arming tasks from the platform to detect and track target vehicles. You can view the arming tasks in arming status.

Set Arming Location

Steps

1. Go to **VCA → Intell Traffic Event → Vehicle Arming → Arming Scene** .

Note

The PTZ control is automatically locked to avoid interruption during configuration.

2. Adjust the live image to the target scene with PTZ control buttons.
3. Click **Add**.
The scene is added to the Arming Scene List.
4. Edit the scene name and moving direction of the vehicles.
5. Repeat the steps to add other scenes.
6. Click **Save**.

View Arming Task

Go to **VCA → Intell Traffic Event → Vehicle Arming → Arming Status** to view the arming tasks sent from the platform.

The device performs a single task at one time. If it receives multiple tasks, former tasks are interrupted and the device performs the latest task.

3.5.9 Advanced Settings

You can set the advanced settings according to your need to get better vehicle arming effect.

Advanced Parameters

Go to **Configuration → Vehicle Arming → Advanced Configuration → Advance Parameters** to set the following parameters.

License Plate Thumbnail

If the device recognizes a license plate, an additional thumbnail of the license plate is uploaded.

Tuning Mode

The tuning mode is for professional technicians. It is not recommended to other users as it may affect the live view image.

Capture No Plate Vehicle

When this function is enabled, the device captures and uploads vehicle pictures with or without license plate. If it is not enabled, only pictures of vehicles with license plate are uploaded.

Dwell Time after Failed Tracking

The time the device stays at the position where the target tracking fails.

Report Interval of Tracking Info

The alarming information upload interval during tracking.

Wait to Stop Tracking If Low Validity

The validity is an internal parameter that helps judge whether the device should keep tracking or not. This parameter is the waiting time level before the device stops tracking when the validity is low. Larger value means longer waiting time.

Wait to Lower Tracking Speed If Low Validity

The validity is an internal parameter that helps judge whether the PTZ channel should lower the tracking speed or not. This parameter is the waiting time level before the device lowers the tracking speed when the validity is low. Larger value means longer waiting time.

Self-adaptive Ratio Coefficient

It represents the ratio of vehicle size to live image size during tracking. The larger the coefficient is, the larger the vehicle is shown.

Uploading Picture Settings

Go to **VCA → Set Application → ITS (Intelligent Transportation System) → Advanced Settings → Picture** to set the parameters of alarm pictures.

Picture Quality

Pictures with higher resolution and better quality have more details and larger file size.

Enable OSD Overlay

The device OSD is overlaid on alarm pictures.

Display Target Info. on Alarm Picture

Check to display target information on alarm pictures.

License Plate Exposure

You can adjust the exposure parameters to make sure that the license plates are exposed properly during vehicle arming.

Steps

1. Go to **VCA → Set Application → ITS (Intelligent Transportation System) → Advanced Settings → License Plate Exposure** .
2. Select a channel.
3. Check **License Plate Exposure**.
4. Set exposure parameters.

Reference Brightness

Adjust the reference brightness to the value that the license plate is exposed properly.

Min. Duration

The minimum duration to maintain the exposure level for the license plates when they are detected.

Arming Schedule

Set the start time and end time when the license plate exposure settings are valid.

5. Click **Save**.




3.6 People Density

This function detects the level of people density in the detection areas.

Before You Start



People Density is supported by the panoramic channel. You need to select **People Density** for Camera 02 or Camera 03 on **VCA Resource** page first.

Steps

1. Enable the function in **Configuration → People Density → Rule**.
2. Set a detection area.
 - Click , and click on the live image to define the boundary of the detection area. Left click to finish drawing.
 - Click  to clear selected areas.
 - Click  to clear all the areas.

Note

Up to 8 areas can be set at the same time.

3. Select an area from the list and set the target size as **Large-size Target** or **Small-size Target**.
 - Click , and a frame of 40 × 40 pixels will be displayed in the live image. If the shoulder of the target is wider than the frame, you should select **Large-size Target**.
 - Click , and a frame of 20 × 20 pixels will be displayed in the live image. If the shoulder of the target is shorter than the frame, you should select **Small-size Target**.

Note

If the shoulder width is between the two modes, adjust installation position and device angle to meet the requirements.

4. Define the **Density Level** by the number of people in the detection area and the target pixel ratio.

Number of People	Set the range for each level by inputting the lower limit of the number of people in the detection area.
Target Pixel Ratio	Target pixel ratio refers to the ratio of the detection area occupied by people. Check Enable Target Pixel Ratio and input the lower limit of target pixel ratio for each level.

Note

- Up to three levels can be configured. The density increases from level 1 to level 3.
- The target pixel ratio is optional. When it is enabled, both the set number of people and the ratio should be met to reach the density level.

Example

Set the people number of **Level 1** as **10**, **Level 2** as **100**, and **Level 3** as **1000**. When the number of people in the detection area is less than 10, the alarm is not triggered. When the number of people is between 10 and 100, Level 1 alarm is triggered. When the number of people is between 100 and 1000, Level 2 alarm is triggered. When the number exceeds 1000, Level 3 alarm is triggered.

5. Click **Save**.

6. Set arming schedule. See ***Set Arming Schedule*** .

7. Set linkage method. See ***Linkage Method Settings*** .

8. Set data uploading parameters in **Data Upload**.

- 1) Check **Enable Data Uploading**, and the data of people density detection is uploaded to surveillance center.
- 2) **Optional**: Check **Enable Picture Uploading**, and the alarm is uploaded to surveillance center with pictures.
- 3) Set the **Uploading Mode**.

Scheduled Uploading

The detection data and pictures can be uploaded to surveillance center at certain time intervals. Select **Statistics Cycle** on your demand.

Instant Uploading

Once the level of people density changes, the detection data and pictures are uploaded to surveillance center immediately.

- 4) **Optional**: If required, set **HTTP Data Transmission**. Input IP address, URL, and port, and click **Test** to see if it succeeds.
- 5) Click **Save**.

9. Configure overlay information in **Advanced Configuration**.

Display Rule Info. on Stream

Check **Display Rule Info. on Stream** to overlay the rule information in live image.

Display Rule Info. on Alarm Picture

Check **Display Rule Info. on Alarm Picture** to overlay the rule information on alarm pictures.

Overlay Pseudo-Color Density

Check **Overlay Pseudo-Color Density** and the real-time density is marked with colors in live image.



Note

The pseudo-color density can only be displayed on devices with discrete graphics.

Flow Overlay

Select corresponding parameters to display people number, density level, or ratio in live image. You can edit the region name for the detection area.

10. Click **Save**.

11. Select the **Algorithm Mode** in **Parameters**.

- If the network condition is good, select **Low Latency**.
- If long distance transmission is required, select **Long Distance**.

12. Click **Save**.

What to do next

After configuration, you can monitor people density in live view image, and the overlay information will be displayed in live view.

 **Note**

To display the overlaid information, make sure that **Display POS Information** in **Configuration → Local → Live View Parameters** has been enabled.







3.7 Smart Display

This function displays real time pictures captured by smart functions and analyzes the target in real time.



 **Note**

To use this function, your web browser version should be above IE11.0.9600.17843.

Live View Parameter

Icon	Function
	Start or stop live view.
	For devices with multiple channels, you can choose a way to display the images.
	For devices with multiple channels, you can choose one or more channels for live view.
	Capture a picture.
	Start or stop recording.
	Adjust the volume of live view. Move the slider to right to turn up the volume and left to turn down the volume. Move to the left end to mute the live view.


Download Display Pictures

Click  and the device stores captured pictures to the browser cache. Hover the pointer over the icon to see the number of pictures in the cache. Click  again to download the pictures in a package.

 **Note**

The browser cache has a limited size. The recommended number of pictures to download is no more than 200.

Layout

Click  and choose **Layout**. Check the display content you need to add it to the smart display page. When real-time analyze is selected, you can choose the contents you want to display.




Chapter 4 PTZ

PTZ is an abbreviation for pan, tilt, and zoom. It means the movement options of the camera.

4.1 PTZ Control

In live view interface, you can use the PTZ control buttons to control the device panning, tilting, and zooming.

PTZ Control Panel

	<p>Click and hold the directional button to pan/tilt the device.</p> <p>Note</p> <ul style="list-style-type: none"> You can set Keyboard Control Speed in Configuration → PTZ → Basic Settings . The speed of pan/tilt movement in live view is based on this speed level. You can set Max. Tilt-angle in Configuration → PTZ → Basic Settings to limit tilt movement range.
	<p>Click the button, then the device keeps panning.</p> <p>Note</p> <p>You can set Auto Scan Speed in Configuration → PTZ → Basic Settings . The higher the value you set, the faster the device pans.</p>
	<p>Drag the slider to adjust the speed of pan/tilt movement.</p>



Note

You can set **Manual Control Speed** in **Configuration → PTZ → Basic Settings** .

Compatible	The control speed is same as Keyboard Control Speed .
Pedestrian	Choose Pedestrian when you monitor the pedestrians.
Non-motor Vehicle	Choose Non-motor Vehicle when you monitor the non-motor vehicles.
Motor Vehicle	Choose Motor Vehicle when you monitor the motor vehicles.
Auto	You are recommended to set it as Auto when the application scene of the speed dome is complicated.

To avoid blurred image resulted from fast zoom, you can check **Enable Proportional Pan** in **Configuration → PTZ → Basic Settings** . If you enable this function, the pan/tilt speed change according to the amount of zoom. When there is a large amount of zoom, the pan/tilt speed will be slower for keeping the image from moving too fast on the live view image.



Zoom in/out

	Click the button, and the lens zooms in.
	Click the button, and the lens zooms out.



Note

- You can set **Zooming Speed** in **Configuration → PTZ → Basic Settings** . The higher the value is, the faster the zooming speed is.
 - You can set **Zoom Limit** in **Configuration → Image → Display Settings → Other** to limit the maximum value of the total zoom (digital zoom and optical zoom).
-

Focus

	Click the button, then the lens focuses near and the object nearby gets clear.
	Click the button, then the lens focuses far and the object far away gets clear.




Iris

	When the image is too dark, click the button to enlarge the iris.
	When the image is too bright, click the button to stop down the iris.

4.2 Set Preset

A preset is a predefined image position. For the defined preset, you can call the preset No. to view the position.



Steps

1. Click  to show the setting panel, and click .
2. Use the PTZ control buttons to move the lens to the desired position.
3. Select a preset number from the preset list, and click  to finish the setting.

Note

Some presets are predefined with special command. You can only call them but not configure them.

-
4. Repeat the steps above to set multiple presets.

-  Click the button to call the preset.
-  Click the button to delete the preset.

Note

You can delete all presets in **Configuration → PTZ → Clear Config**. Click **Clear All Presets**, and click **Save**.

What to do next

Go to **Configuration → PTZ → Basic Settings** to set preset freezing and preset speed.

After enabling preset freezing, the live image switches directly from one preset to another, without showing the areas between these two scenes. It also guarantees the masked area will not be seen when the device is moving.

4.2.1 Special Presets

You can call the following presets with special demands to enable corresponding functions.

Preset No.	Function	Preset No.	Function
33	Auto flip	92	Set manual limits
34	Back to origin	93	Save manual limits
35	Call patrol 1	94	Remote reboot
36	Call patrol 2	95	Call OSD menu
37	Call patrol 3	96	Stop a scan
38	Call patrol 4	97	Start random scan
39	Day mode	98	Start frame scan
40	Night mode	99	Start auto scan
41	Call pattern 1	100	Start tilt scan
42	Call pattern 2	101	Start panorama scan
43	Call pattern 3	102	Call patrol 5
44	Call pattern 4	103	Call patrol 6
45	One-touch patrol	104	Call patrol 7
46	Day/Night Mode	105	Call patrol 8





4.3 Set Patrol Scan

Patrol scan is a function to automatically move among multiple presets.

Before You Start

Make sure that you have defined more than one presets. See [Set Preset](#) for detailed configuration.

Steps

1. Click  to show the setting panel, and click  to enter patrol setting interface.
2. Select a patrol number from the list and click .
3. Click  to add presets.

Preset


Select predefined preset.



Speed

Set the speed of moving from one preset to another.

Time

It is the duration staying on one patrol point.

-  Delete the presets in patrol.

  Adjust the preset order.

Note

A patrol can be configured with 32 presets at most, and 2 presets at least.

4. Click **OK** to finish a patrol setting.
 5. Repeat the steps above to configure multiple patrols.
 6. Operate patrols.
 - ▶ Call the patrol.
 - Stop patrolling.
 - ✗ Delete the patrol.
 - ⚙ Set the patrol.
-

Note


You can delete all patrols in **Configuration → PTZ → Clear Config** . Click **Clear All Patrols**, and click **Save**.

4.3.1 Set One-Touch Patrol

The device automatically adds presets to one patrol path and starts patrol scan.

Steps




1. Set two or more presets among preset No.1 to preset No.32. For setting presets, refer to **Set Preset** .

The device will automatically add presets to patrol path No.8.
2. Choose one of the following methods to enable the function.
 - Click  .
 - Call patrol path No.8.
 - Select and call preset No.45.

4.4 Set Pattern Scan






The device can move as the recorded pattern.

Steps

1. Click  to show the PTZ control panel, and click  .
2. Select one pattern scan path that needs to be set.
3. Click  to start recording pattern scan.
4. Click PTZ control buttons as demands.

Note

Recording stops when the space for pattern scan is 0%.

5. Click  to complete one pattern scan path settings.
6. Click  to call pattern scan.
 -  Stop pattern scan.
 -  Reset pattern scan path.
 -  Delete the selected pattern scan.

Note

If you need to delete all the pattern scans, go to **Configuration → PTZ → Clear Config** , and check **Clear All Patterns**, and click **Save**.

4.5 Set Limit

The device can only move within the limited range.

Steps

1. Go to **Configuration → PTZ → Limit** .
2. Select **Limit Type**.

Manual Stops

It refers to the movement range limit when you control the device manually.

Scan Stops

It refers to the movement range limit when the device scans automatically.

Note

Scan limit is only supported by the device that has scan function.

3. Click **Set** and set limits according to the prompt on the live image.
4. **Optional:** Click **Clear** to clear the limit settings of the selected mode.
5. Click **Save**.
6. Check **Enable Limit**.

Note

If you need to cancel all the set patrol paths, go to **Configuration → PTZ → Clear Config** , select **Clear All PTZ Limited**, and click **Save**.

Result

The device can only move within the set region after saving the settings.

4.6 Set Initial Position

Initial position refers to the relative initial position of the device azimuth. You can set the initial position if you need to select one point in the scene as the base point.

Steps

1. Go to **Configuration → PTZ → Initial Position** .
2. Move the device to the needed position by manually controlling the PTZ control buttons.
3. Click **Set** to save the information of initial position.

Call The device moves to the set initial position.

Clear Clear the set initial position.

4.7 Set Scheduled Tasks

You can set the device to perform a certain task during a certain period.

Steps

1. Go to **Configuration → PTZ → Scheduled Tasks** .
2. Check **Enable Scheduled Task**.
3. Select the task type and set the period. For setting the period, refer to **Set Arming Schedule** .
4. Repeat step 3 to set more than one scheduled tasks.
5. Set **Park Time**. During the set task period, if you operate the device manually, the scheduled task will be suspended. When the manual operation is over, the device will continue to perform the scheduled task after the set park time.
6. Click **Save**.

Note

If you want to clear all scheduled tasks, go to **Configuration → PTZ → Clear Config** , check **Clear All Scheduled Tasks**, and click **Save**.

4.8 Operate Wiper



For the device that has a wiper, you can control the wiper via web browser.

Note

Wiper operation and settings vary on device models.

Steps

1. Go to **Configuration → PTZ → Wiper** .
2. Select a wiper mode.

- One Time** The wiper wipes one time when you click  on live view page.
- Cycle** The wiper works on schedule at set wiping interval. Click  on live view to start wiping.
- Duration**
The schedule in which the wiper is ready to work.
- Interval**
The interval between two successive wiping actions.

Auto



Auto mode is only available for device that supports rain-sensing auto wiper.

In auto mode, the wiper works when rain drops on the window.

4.9 Set Park Action

You can set the device to perform an action (for example, preset or patrol) or return to a position after a period of inactivity (park time).

Before You Start

Set the action type first. For example, if you want to select patrol as park action, you should set the patrol. See [Set Patrol Scan](#) for details.

Steps

1. Go to **Configuration** → **PTZ** → **Park Action** .
2. Check **Enable Park Action**.
3. Set **Park Time**: the inactive time before the device starts park action.
4. Select **Action Type** according to your needs.
5. Select an **Action Type ID**, if you select patrol or preset as action type.


When the action type is patrol, action type ID stands for patrol No. When the action type is preset, action type ID stands for preset No.

6. Click **Save**.

4.9.1 Set One-Touch Park

This function is used to start park instantly.

Steps

1. Refer to [Set Park Action](#) to set a park action.
2. Choose from the following methods to start one-touch park.
 - Click  .

- Call Preset No. 32.

4.10 Set Privacy Mask

Privacy masks cover certain areas on the live image to protect personal privacy from being live viewed and recorded.

Steps

1. Go to **Configuration → PTZ → Privacy Mask** .
2. Select the PTZ channel.
 - 1) Check **Enable Privacy Masks**.
 - 2) Adjust the live image to the target scene via PTZ control buttons.
 - 3) Draw the area.

Draw Area	Click Draw Area and drag the mouse in live view image. You can drag the corners of the red rectangle to adjust the area.
Stop Drawing	Click Stop Drawing after drawing area.

- 4) Click **Add**.
It is listed in **Privacy Mask List**.
- 5) Edit **Name**, **Type**, and **Active Zoom Ratio** on your demand.

Active Zoom Ratio

When the actual zoom ratio is less than the set active zoom ratio, the set area can not be covered. When the actual zoom ratio is greater than the set active zoom ratio, the privacy mask is valid. The maximum value of active zoom ratio depends on the camera module.

- 6) Click **Save**.
- 7) Repeat the steps above to set other privacy masks.
3. Select panoramic channel.
 - 1) Check **Enable Privacy Masks**.
 - 2) Draw the area.

Draw Area	Click Draw Area and drag the mouse in live image. You can drag the corners of the red rectangle to adjust the area.
Stop Drawing	Click Stop Drawing after drawing area.

- 3) Click **Add**.
It will be listed in **Privacy Mask List**.
- 4) Edit **Name**, **Type** on your demand.
- 5) Click **Save**.
- 6) Repeat the steps above to set other privacy masks.

4.11 Set Power Off Memory

This function can resume the previous PTZ status of device after it restarting from a power-off.

Steps

1. Go to **Configuration → PTZ → Basic Settings** .
2. Select **Resume Time Point**. When the device stays at one position for the set resume time point or more, the position is saved as a memory point. The device returns to the last memory point when it restarts.
3. Click **Save**.

4.12 Set PTZ Priority

The function can set the PTZ priority of different signals.

Steps

1. Go to **Configuration → PTZ → Prioritize PTZ** .
2. Set the priority signal and delayed time.

Network

The network signal controls the device with priority.

RS-485

The RS-485 signal controls the device with priority.

Delay

It refers to the time interval of PTZ operation controlled by different signals. When the operation with high priority is finished, the low priority signal controls the device after the setting interval.

3. Click **Save**.

4.13 Set Rapid Focus

Rapid focus is a function to reduce time of focusing comparing with that of normal focusing. To use the function, calibration should be done first. Rapid focus may not be supported by certain device models.

Steps

1. Go to **Configuration → PTZ → Rapid Focus** .
2. Add scenes for calibration.
 - 1) Adjust the live image to a desired scene via PTZ control buttons, and click **Add**.
 - 2) Set the **Rate** and the **Calibration Point Amount** of the added scene.

Note

More calibration points may increase calibration accuracy, but more focusing time is required. The default amount is recommended.

3. Select the scene to display the calibration line.

A red line displays on live image.

4. Adjust the length and position of the line by dragging its two endpoints.
-

Note

The red line is recommended to stay in the center of the scene and to cover ground at the same time.

Double click the image to enter full screen mode.

5. Click **Start Calibration**.

Calibration status displays on the live image.

6. Repeat to add other scenes and complete the calibration.
7. Check **Enable Height Compensation** if the mounting height of the device is lower than 3 meters.
8. Check **Enable** after successful calibration.
9. Click **Save**.

4.14 Set Device Position

Before You Start

Go to **Configuration** → **PTZ** → **Basic Settings** → **PTZ OSD** to enable **PT Status** display. Use other direction indicating devices to find the North at the device location.

Steps

1. Go to **Configuration** → **PTZ** → **Position Settings**.
 2. Set compass.
 - 1) Adjust the tilt position of the device to 0 by controlling the up arrow and down arrow on the PTZ panel.
 - 2) Adjust the pan position to show the live view of the north direction by controlling the left arrow and right arrow on the PTZ panel.
 - 3) Click **Set as North**.
 3. Click **Gyroscope Attitude Calibration** to calibrate gyroscope.
-

Note

Only the device with built-in gyroscope supports this function.

4. Get the device location information in advance, and input the longitude and latitude of the device manually.
5. Set vandal-proof alarm.

The function enables the device to trigger alarms when its position changes because of shock or vandalism.

Sensitivity

The higher the value is, the easier the alarm will be triggered.

Upload Vandal-proof Alarm

The device uploads the alarm information when the alarm is triggered.

Vandal-proof Alarm Voice Warning

The device triggers the alarm with audible warning.

6. Click **Save**.

What to do next

If you lost direction when operating the device, you can click **Point to North** to call the north position that is saved in the device.

4.15 Panorama Tracking

This function links panoramic channel with PTZ channel through calibration. The PTZ channel tracks moving objects in panoramic channel and automatically adjusts its PTZ positions to keep the target in the center of PTZ view for more details.



Note

This function is only supported by certain device models.

4.15.1 Link Channels by Calibration

Calibrate the panoramic channel and the PTZ channel to establish the link.

Steps

1. Go to **Configuration → PTZ → Panorama Tracking**.

2. Click **Calibration**.

3. Calibrate the channels automatically.

1) Select the **Calibration Mode** as **Auto (Fast)**.

2) Adjust the PTZ positions of the two channels and make the centers of the two channels at approximately the same position.

3) Click **Start Calibration**.

The device starts calibration automatically.

4. **Optional:** If automatic calibration fails, you can use the manual calibration.

1) Select the **Calibration Mode** as **Manual**.


2) Select a calibration point in **Calibration Parameter** list.


A numbered green cross is displayed on the panoramic image. You can drag the green cross to adjust its position.

3) Click **Add** to save the cross position in the panoramic channel.

- 4) Adjust PTZ to place the green cross in the PTZ channel at the same position as the green cross in the panoramic channel. 1× zoom ratio is recommended.

Note

To quickly locate the desired point in the PTZ channel, you can click  and click the target position in the PTZ channel.

- 5) Click  to save the PTZ position of this calibration point.
 - 6) Repeat the steps above to set at least 4 calibration points.
 - 7) Click **Start Calibration**.
5. Click **Save** to finish calibration.

4.15.2 Set Tracking Parameters

The tracking parameters includes the initial tracking position, tracking zoom ratio, tracking duration, and advanced parameters.

Steps

1. Go to **Configuration → PTZ → Panorama Tracking → Calibration**.
2. Set the initial tracking position of the PTZ channel.

When the tracking task stops, the PTZ channel returns to the set initial position.

- 1) Adjust the PTZ channel to the desired scene as the initial position.
- 2) Click **Set Tracking Initial Position** to save the position.

3. Set the tracking zoom ratio.

Set a fixed zoom ratio

A fixed zoom ratio means the PTZ channel keeps the set zoom value throughout the tracking.

Adjust the **Self-adaptive Ratio Coefficient** to **0**.

Adjust the zoom to a desired level.

Click **Set Zoom Ratio** to save the zoom level.

Set auto zoom ratio control

The device determines the actual zoom ratio dynamically according to the detected target size and the set **Self-adaptive Ratio Coefficient**.

Larger **Self-adaptive Ratio Coefficient** means larger zoomed target during tracking.

4. Set the tracking duration.
 - When you set the **Tracking Duration** as **0**, the PTZ channel keeps tracking the target until it leaves the view of the panoramic channel.
 - When you set the **Tracking Duration** as a number other than 0, the PTZ channel tracks a target for the set time. The tracking stops when the time is up or when the target leaves the view of the panoramic channel.
5. Click **Save**.
6. Go to **Configuration → PTZ → Panorama Tracking → Advanced**.
7. **Optional:** Check to enable **Tracking Takeover**.

When the target leaves the view of the panoramic channel, the PTZ channel takes over the leading role of the task and keeps tracking.

8. Optional: Check to enable **Track in Turn**.

When multiple targets trigger events in the panoramic channel around the same time, the PTZ channel tracks the targets in turn. If this function is not enabled, the PTZ channel tracks a target until it leaves the view.

9. Click **Save**.

4.16 GPS Calibration

GPS calibration is used to map the geographical location to the camera scene so that the device can calculate the real-time geographic information of targets. This function is only supported under certain VCA resource options.

4.16.1 Set GPS Calibration

Before You Start

Choose at least 4 calibration points on the ground in the monitoring scene and measure the precise longitude and latitude of the points. The calibration points should scatter in a 2 × 2 or 3 × 3 array.

Steps

1. Go to **Configuration → PTZ → GPS Calibration → Calibration** .



Note

The PTZ control is automatically locked to avoid interruption during configuration.

2. Select the longitude and latitude type according to device location.

3. Set calibration points.

1) Adjust the pan, tilt, and zoom to find the scene with a calibration point.


2) Click  and click on the calibration point on the live image.

The selected point is zoomed in and placed in the center of the image.

3) Click  again.

A green cross shows on the point.

4) Click **Add** and input the precise longitude and latitude of the point.

5) Click  to save the pan, tilt, and zoom value of the point.

6) Click **Save**.

7) Repeat the steps to set other calibration points.

4.16.2 Verify Calibration

Before You Start

Choose verification points on the ground in the monitoring scene and measure the precise longitude and latitude of the points.


Steps

1. Go to **Configuration → PTZ → GPS Calibration → Calibration Verification** .
-

Note

The PTZ control is automatically locked to avoid interruption during configuration.


2. Set verification points.

- 1) Adjust the pan, tilt, and zoom to find the scene with a verification point.
- 2) Click  and click on the verification point on the live image.

The selected point is zoomed in and placed in the center of the image.

- 3) Click  again.

A red cross shows on the point.

- 4) Click **Add** and input the precise longitude and latitude of the point.
- 5) Click  to save the pan, tilt, and zoom value of the point.
- 6) Click **Save**.

- 7) Repeat the steps to set other verification points.

Numbered green and blue rectangles are displayed on the image. The blue rectangle marks the PTZ position of the verification point you set and the green rectangle marks the calculated PTZ position based on the longitude and latitude you input. If the two rectangles are close to each other, then the GPS calibration succeeds.

Chapter 5 Live View

It introduces the live view parameters, function icons and transmission parameters settings.



5.1 Live View Parameters

The supported functions vary depending on the model.



For multichannel devices, select the desired channel first before live view settings.





5.1.1 Start and Stop Live View

On **Live View** page, click  to start all live view. Click  to stop all live view.

You can also start the live view of the channels one by one through clicking a divided window first and double-clicking a channel from the channel list on left.







5.1.2 Aspect Ratio

Aspect Ratio is the display ratio of the width to height of the image.

-  refers to 4:3 window size.
-  refers to 16:9 window size.
-  refers to original window size.
-  refers to self-adaptive window size.

5.1.3 Window Division

You can choose a layout for live view window.

-  displays live images in three rows.
-  displays two live images on the top and one live image on the bottom.
-  displays live images in two rows.
-  displays one live image.
-  displays live images in 2 × 2 layout.
-  displays live images in PIP (picture in picture) layout.



5.1.4 Live View Stream Type

Select the live view stream type according to your needs. For the detailed information about the stream type selection, refer to [Stream Type](#).

5.1.5 Quick Set Live View

It offers the quick access to the display settings, OSD, and video/audio on live view page.


Steps

1.  Click  and click **General** to show quick setup page.
2. Set display settings, OSD, and video/audio.
 - For parameter explanation and instructions of display settings, see [Display Settings](#).
 - For parameter explanation and instructions of OSD settings, see [OSD](#).
 - For parameter explanation and instructions of audio and video settings, see [Video and Audio](#).

5.1.6 Select the Third-Party Plug-in

When the live view cannot display via certain browsers, you can change the plug-in for live view according to the browser.


Steps

1. Click **Live View**.
2. Click  to select the plug-in.
 - When you access the device via Internet Explorer, you can select Webcomponents or QuickTime.
 - When you access the device via the other browsers, you can select Webcomponents, QuickTime, VLC or MJPEG.

5.1.7 Start Digital Zoom

It helps to see a detailed information of any region in the image.



Steps

1. Click  to enable the digital zoom.
2. In live view image, drag the mouse to select the desired region.
3. Click in the live view image to back to the original image.

5.1.8 Conduct Regional Focus

You can enable the function to focus on certain area.



Steps

1. Click  to enable regional focus.
2. Drag the mouse on the live view to draw a rectangle as the desired focus area.
3. Click  to disable this function.


5.1.9 Conduct Regional Exposure

When the brightness of live view is not balanced, you can enable this function to optimize the exposure of the selected image region.

Steps

1. Click  to enable regional exposure.
2. Drag the mouse on the live view to draw a rectangle as the desired exposure area.
3. Click  to disable this function.

5.1.10 Light

Click  to turn on or turn off the illuminator.

5.1.11 Lens Initialization


Lens initialization is used on the device equipped with motorized lens. The function can reset lens when long time zoom or focus results in blurred image. This function varies according to different models.

Click  to operate lens initialization.

5.1.12 Track Manually

In live view, manually select a target for the device to track.

Steps


1. Click  on the toolbar of the live view page.
2. Click a moving object in the live image.

The camera tracks the target and keep it in the center of live view image.

5.1.13 Conduct 3D Positioning



3D positioning is to relocate the selected area to the image center.

Steps

1. Click  to enable the function.
2. Select a target area in live image.
 - Left click on a point on live image: the point is relocated to the center of the live image. With no zooming in or out effect.
 - Hold and drag the mouse to a lower right position to frame an area on the live: the framed area is zoomed in and relocated to the center of the live image.
 - Hold and drag the mouse to an upper left position to frame an area on the live: the framed area is zoomed out and relocated to the center of the live image.
3. Click the button again to turn off the function.

5.1.14 OSD Menu

When network access is unavailable, you can call the Preset No.95 to show OSD menu to start device configuration.

Click direction buttons or  and  to move up and down.

Click  to confirm your selection.

5.1.15 Display Target Information on Live View

Go to **Configuration → Local → Live View Parameters** for settings.



Note

Related smart function should be configured and enabled in advance.

Display POS Information

POS information refers to the target features, such as target ID, etc. Supported POS information types varies according to device models.

5.2 Set Transmission Parameters

The live view image may be displayed abnormally according to the network conditions. In different network environments, you can adjust the transmission parameters to solve the problem.

Steps

1. Go to **Configuration → Local** .
2. Set the transmission parameters as required.

Protocol

TCP

TCP ensures complete delivery of streaming data and better video quality, yet the real-time transmission will be affected. It is suitable for the stable network environment.

UDP

UDP is suitable for the unstable network environment that does not demand high video fluency.

MULTICAST

MULTICAST is suitable for the situation that there are multiple clients. You should set the multicast address for them before selection.



For detailed information about multicast, refer to [***Multicast***](#) .

HTTP

HTTP is suitable for the situation that the third-party needs to get the stream from the device.

Play Performance

Shortest Delay

The device takes the real-time video image as the priority over the video fluency.

Balanced

The device ensures both the real-time video image and the fluency.

Fluent

The device takes the video fluency as the priority over real-time. In poor network environment, the device cannot ensure video fluency even the fluency is enabled.

Custom

You can set the frame rate manually. In poor network environment, you can reduce the frame rate to get a fluent live view. But the rule information may not display.

Auto Start Live View

- **Yes** means the live view is started automatically. It requires a high performance monitoring device and a stable network environment.
- **No** means the live view should be started manually.

3. Click **OK**.

Chapter 6 Video and Audio

This part introduces the configuration of video and audio related parameters.

6.1 Video Settings

This part introduces the settings of video parameters, such as, stream type, video encoding, and resolution.

Go to setting page: **Configuration → Video/Audio → Video** .



For device with multiple camera channels, select a channel before other settings.

6.1.1 Stream Type

For device supports more than one stream, you can specify parameters for each stream type.

Main Stream

The stream stands for the best stream performance the device supports. It usually offers the best resolution and frame rate the device can do. But high resolution and frame rate usually means larger storage space and higher bandwidth requirements in transmission.

Sub Stream

The stream usually offers comparatively low resolution options, which consumes less bandwidth and storage space.

Other Streams

Streams other than the main stream and sub stream may also be offered for customized usage.

6.1.2 Video Type

Select the content (video and audio) that should be contained in the stream.

Video

Only video content is contained in the stream.

Video & Audio

Video content and audio content are contained in the composite stream.

6.1.3 Resolution

Select video resolution according to actual needs. Higher resolution requires higher bandwidth and storage.

6.1.4 Bitrate Type and Max. Bitrate

Constant Bitrate

It means that the stream is compressed and transmitted at a comparatively fixed bitrate. The compression speed is fast, but mosaic may occur on the image.

Variable Bitrate

It means that the device automatically adjust the bitrate under the set **Max. Bitrate**. The compression speed is slower than that of the constant bitrate. But it guarantees the image quality of complex scenes.

6.1.5 Video Quality

When **Bitrate Type** is set as Variable, video quality is configurable. Select a video quality according to actual needs. Note that higher video quality requires higher bandwidth.

6.1.6 Frame Rate

The frame rate is to describe the frequency at which the video stream is updated and it is measured by frames per second (fps).

A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout. Note that higher frame rate requires higher bandwidth and larger storage space.

6.1.7 Video Encoding

It stands for the compression standard the device adopts for video encoding.

Note

Available compression standards vary according to device models.

H.264

H.264, also known as MPEG-4 Part 10, Advanced Video Coding, is a compression standard. Without compressing image quality, it increases compression ratio and reduces the size of video file than MJPEG or MPEG-4 Part 2.

H.264+

H.264+ is an improved compression coding technology based on H.264. By enabling H.264+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.264, H.264+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

When H.264+ is enabled, **Max. Average Bitrate** is configurable. The device gives a recommended max. average bitrate by default. You can adjust the parameter to a higher value if the video quality is less satisfactory. Max. average bitrate should not be higher than max. bitrate.

Note

When H.264+ is enabled, **Video Quality, I Frame Interval, Profile** and **SVC** are not configurable.

H.265

H.265, also known as High Efficiency Video Coding (HEVC) and MPEG-H Part 2, is a compression standard. In comparison to H.264, it offers better video compression at the same resolution, frame rate and image quality.

H.265+

H.265+ is an improved compression coding technology based on H.265. By enabling H.265+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.265, H.265+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

When H.265+ is enabled, **Max. Average Bitrate** is configurable. The device gives a recommended max. average bitrate by default. You can adjust the parameter to a higher value if the video quality is less satisfactory. Max. average bitrate should not be higher than max. bitrate.

Note

When H.265+ is enabled, **Video Quality, I Frame Interval, Profile** and **SVC** are not configurable.

Profile

This function means that under the same bitrate, the more complex the profile is, the higher the quality of the image is, and the requirement for network bandwidth is also higher.

SVC

Scalable Video Coding (SVC) is the name for the Annex G extension of the H.264 or H.265 video compression standard.

The objective of the SVC standardization has been to enable the encoding of a high-quality video bitstream that contains one or more subset bitstreams that can themselves be decoded with a complexity and reconstruction quality similar to that achieved using the existing H.264 or H.265 design with the same quantity of data as in the subset bitstream. The subset bitstream is derived by dropping packets from the larger bitstream.

SVC enables forward compatibility for older hardware: the same bitstream can be consumed by basic hardware which can only decode a low-resolution subset, while more advanced hardware will be able to decode high quality video stream.

Smoothing

It refers to the smoothness of the stream. The higher value of the smoothing is, the better fluency of the stream will be, though, the video quality may not be so satisfactory. The lower value of the smoothing is, the higher quality of the stream will be, though it may appear not fluent.

MJPEG

Motion JPEG (M-JPEG or MJPEG) is a video compression format in which intraframe coding technology is used. Images in a MJPEG format are compressed as individual JPEG images.

6.1.8 I-Frame Interval

I-frame interval defines the number of frames between 2 I-frames.

In H.264 and H.265, an I-frame, or intra frame, is a self-contained frame that can be independently decoded without any reference to other images. An I-frame consumes more bits than other frames. Thus, video with more I-frames, in other words, smaller I-frame interval, generates more steady and reliable data bits while requiring more storage space.

6.2 Audio Settings

It is a function to set audio parameters such as audio encoding, environment noise filtering.

Go to the audio settings page: **Configuration → Video/Audio → Audio** .

6.2.1 Audio Input

External audio pick-up device is available for audio input, and audio encoding and input volume are configurable.

Audio Encoding

The device offers several compression standard. Select according to your need.

Audio Input

LineIn is supported for external audio pick-up device.

Input volume

Adjust the volume of the audio input.

6.2.2 Audio Output

The device outputs audio by the built-in speaker. You can adjust the output volume according to your need.

6.2.3 Environmental Noise Filter

Set it as OFF or ON. When the function is enabled, the noise in the environment can be filtered to some extent.



6.3 Two-way Audio

It is used to realize the two-way audio function between the monitoring center and the target in the monitoring screen.

Before You Start

- Make sure the audio input device (pick-up or microphone) and audio output device (speaker) connected to the device is working properly. Refer to specifications of audio input and output devices for device connection.
- If the device has built-in microphone and speaker, two-way audio function can be enabled directly.

Steps

1. Click **Live View**.
2. Click  on the toolbar to enable two-way audio function of the camera.
3. Click , disable the two-way audio function.

6.4 ROI

ROI (Region of Interest) encoding helps to discriminate the ROI and background information in video compression. The technology assigns more encoding resource to the region of interest, thus to increase the quality of the ROI whereas the background information is less focused.

6.4.1 Set ROI

ROI (Region of Interest) encoding helps to assign more encoding resource to the region of interest, thus to increase the quality of the ROI whereas the background information is less focused.

Before You Start

Please check the video coding type. ROI is supported when the video coding type is H.264 or H.265.

Steps

1. Go to **Configuration** → **Video/Audio** → **ROI**.
2. Check **Enable**.
3. Select the channel No. according to your need.
4. Select **Stream Type**.
5. Select **Region No.** in **Fixed Region** to draw ROI region.
 - 1) Click **Draw Area**.
 - 2) Click and drag the mouse on the view screen to draw the fixed region.
 - 3) Click **Stop Drawing**.

Note

Select the fixed region that needs to be adjusted and drag the mouse to adjust its position.

6. Input the **Region Name** and **ROI Level**.
7. Click **Save**.

Note

The higher the ROI level is, the clearer the image of the detected region is.

8. **Optional:** Select other region No. and repeat the above steps if you need to draw multiple fixed regions.

6.5 Display Info. on Stream

The information of the objects (e.g. human, vehicle, etc.) is marked in the video stream. You can set rules on the connected rear-end device or client software to detect the events including line crossing, intrusion, etc.

Steps

1. Go to the setting page: **Configuration → Video/Audio → Display Info. on Stream** .
2. Check **Enable Dual-VCA**.
3. Click **Save**.

6.6 Display Settings

It offers the parameter settings to adjust image features.

Go to **Configuration → Image → Display Settings** .

For device that supports multiple channels, display settings of each channel is required. The settings for different channels may be different. This part introduces all possible parameters among the channels.

Click **Default** to restore settings.

6.6.1 Scene Mode

There are several sets of image parameters predefined for different installation environments. Select a scene according to the actual installation environment to speed up the display settings.

Image Adjustment

By adjusting the **Brightness, Saturation, Contrast** and **Sharpness**, the image can be best displayed.

Exposure Settings

Exposure is controlled by the combination of iris, shutter, and gain. You can adjust image effect by setting exposure parameters.

Exposure Mode

Auto

The iris, shutter, and gain values are adjusted automatically.

You can limit the changing ranges of iris, shutter and gain by setting **Max. Iris Limit, Min. Iris Limit, Max. Shutter Limit, Min. Shutter Limit** and **Limit Gain** for better exposure effect.

Iris Priority

The value of iris needs to be adjusted manually. The shutter and gain values are adjusted automatically according to the brightness of the environment.

You can limit the changing ranges of the shutter and gain by setting **Max. Shutter Limit, Min. Shutter Limit** and **Limit Gain** for better exposure effect.

Shutter Priority

The value of shutter needs to be adjusted manually. The iris and gain values are adjusted automatically according to the brightness of the environment.

You can limit the changing ranges of the iris by setting **Max. Iris Limit**, **Min. Iris Limit** and **Limit Gain** for better exposure effect.

Manual

You need to set **Iris**, **Shutter**, and **Gain** manually.

Slow Shutter

The higher the slow shutter level is, the slower the shutter speed is. It ensures full exposure in underexposure condition.

Focus

It offers options to adjust the focus mode and the minimum focus distance.

Focus Mode

Auto

The device focuses automatically as the scene changes. If you cannot get a well-focused image under auto mode, reduce light sources in the image and avoid flashing lights.

Semi-auto

The device focuses once after the PTZ and lens zooming. If the image is clear, the focus does not change when the scene changes.

Manual

You can adjust the focus manually on the live view page.

Min. Focus Distance

When the distance between the scene and lens is shorter than the Min. Focus Distance, the lens does not focus.

Day/Night Switch

Day/Night Switch function can provide color images in the day mode and black/white images in the night mode. Switch mode is configurable.

Day

The image is always in color.

Night

The image is always black/white

Auto

The camera switches between the day mode and the night mode according to the illumination automatically.

Scheduled-Switch

Set the **Start Time** and the **End Time** to define the duration for day mode.



Day/Night Switch function varies according to models.

Set Supplement Light

Steps

1. Go to **Configuration → Maintenance → System Service** .
2. Check **Enable Supplement Light**.
3. Click **Save**.
4. Go to **Configuration → Image → Display Settings → Day/Night Switch** to set supplement light parameters.

Smart Supplement Light

This feature uses smart image processing technology to reduce overexposure caused by supplement light.

IR Light Mode

When the mode is set to **Auto**, the supplement light is automatically turned in or off according to the image brightness.

Brightness Limit

Adjust the upper limit of supplement light power.

BLC

If you focus on an object against strong backlight, the object will be too dark to be seen clearly. BLC (backlight compensation) compensates light to the object in the front to make it clear. If BLC mode is set as **Custom**, you can draw a red rectangle on the live view image as the BLC area.

HLC

When the bright area of the image is over-exposed and the dark area is under-exposed, the HLC (High Light Compression) function can be enabled to weaken the bright area and brighten the dark area, so as to achieve the light balance of the overall picture.

WDR

The WDR (Wide Dynamic Range) function helps the camera provide clear images in environment with strong illumination differences.

When there are both very bright and very dark areas simultaneously in the field of view, you can enable the WDR function and set the level. WDR automatically balances the brightness level of the whole image and provides clear images with more details.

Note

When WDR is enabled, some other functions may be not supported. Refer to the actual interface for details.



WDR Off

WDR On

Figure 6-1 WDR

DNR

Digital Noise Reduction is used to reduce the image noise and improve the image quality. **Normal** and **Expert** modes are selectable.

Normal


Set the DNR level to control the noise reduction degree. The higher level means stronger reduction degree.

Expert

Set the DNR level for both space DNR and time DNR to control the noise reduction degree. The higher level means stronger reduction degree.



DNR Off

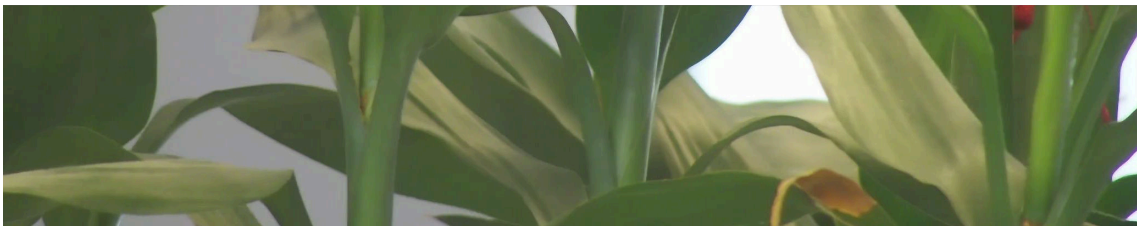

DNR On


Figure 6-2 DNR

White Balance

White balance is the white rendition function of the camera. It is used to adjust the color temperature according to the environment.



Cold

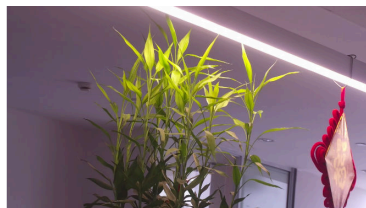

Warm



Auto White Balance

Figure 6-3 White Balance

Defog

You can enable the defog function when the environment is foggy and the image is misty. It enhances the subtle details so that the image appears clearer.



Figure 6-4 Defog

EIS

Increase the stability of video image by using jitter compensation technology.

6.6.2 Image Parameters Switch

The device automatically switches image parameters in set time periods.

Go to image parameters switch setting page: **Configuration** → **Image** → **Image Parameters Switch** , and set parameters as needed.

Set Scheduled-switch

Switch the image to the linked scene mode automatically in certain time periods.

Steps

1. Check **Scheduled-switch**.
2. Select and configure the corresponding time period and linked scene mode.



For Linked Scene configuration, refer to ***Scene Mode*** .

3. Click **Save**.

Set Link to Preset

You can set a preset to switch the image to a linked scene.

Steps

1. Check **Link to Preset**.
2. Select a preset.
3. Check and set a time period and a linked scene mode.
4. Click **Save**.

6.6.3 Mirror

When the live view image is the reverse of the actual scene, this function helps to display the image normally.

Select the mirror mode as needed.



The video recording will be shortly interrupted when the function is enabled.

6.6.4 Video Standard

Video standard is an ability of a video card or video display device that defines the amount of colors that are shown and the resolution. The two most common video standard used are NTSC and PAL. In NTSC, 30 frames are transmitted each second. Each frame is made up of 525 individual scan lines. In PAL, 25 frames are transmitted each second. Each frame is made up of 625 individual scan lines. Select video signal standard according to the video system in your country/region.

6.7 OSD

You can customize OSD (On-screen Display) information such as device name, time/date, font, color, and text overlay displayed on video stream.

Go to OSD setting page: **Configuration** → **Image** → **OSD Settings** .

Select a channel.

Set the corresponding parameters, and click **Save** to take effect.

Character Set

Select character set for displayed information. If Korean is required to displayed on screen, select **EUC-KR**. Otherwise, select **GBK**.

Displayed Information

Set camera name, date, week, and their related display format.

Text Overlay

Set customized overlay text on image.

OSD Parameters

Set OSD parameters, such as **Display Mode**, **OSD Size**, **Font Color**, and **Alignment**.

Chapter 7 Video Recording and Picture Capture

This part introduces the operations of capturing video clips and snapshots, playback, and downloading captured files.

7.1 Storage Settings

This part introduces the configuration of several common storage paths.

7.1.1 Memory Card

You can view the capacity, free space, status, type, and property of the memory card. Encryption of memory card is supported to ensure data security.

Set New or Unencrypted Memory Card

Before You Start

Insert a new or unencrypted memory card to the device. For detailed installation, refer to *Quick Start Guide* of the device.

Steps

1. Go to **Configuration** → **Storage** → **Storage Management** → **HDD Management** .
2. Select the memory card.

Note

If an **Unlock** button appears, you need to unlock the memory card first. See ***Detect Memory Card Status*** for details.

-
3. Click **Format** to initialize the memory card.

When the **Status** of memory card turns from **Uninitialized** to **Normal**, the memory card is ready for use.

4. **Optional:** Encrypt the memory card.
 - 1) Click **Encrypted Format**.
 - 2) Set the encryption password.
 - 3) Click **OK**.

When the **Encryption Status** turns to **Encrypted**, the memory card is ready for use.

Note

Keep your encryption password properly. Encryption password cannot be found if forgotten.

-
5. **Optional:** Define the **Quota** of the memory card. Input the percentage for storing different contents according to your needs.

6. Click **Save**.

Set Encrypted Memory Card

Before You Start

- Insert an encrypted memory card to the device. For detailed installation, refer to *Quick Start Guide* of the device.
- You need to know the correct encryption password of the memory card.

Steps

1. Go to **Configuration → Storage → Storage Management → HDD Management** .
2. Select the memory card.



If an **Unlock** button appears, you need to unlock the memory card first. See [***Detect Memory Card Status***](#) for details.

3. Verify the encryption password.
 - 1) Click **Parity**.
 - 2) Enter the encryption password.
 - 3) Click **OK**.

When the **Encryption Status** turns to **Encrypted**, the memory card is ready for use.



If the encryption password is forgotten and you still want to use this memory card, see [***Set New or Unencrypted Memory Card***](#) to format and set the memory card. All existing contents will be removed.

4. **Optional:** Define the **Quota** of the memory card. Input the percentage for storing different contents according to your needs.
5. Click **Save**.

Detect Memory Card Status

The device detects the status of Hikvision memory card. You receive notifications when your memory card is detected abnormal.

Before You Start

The configuration page only appears when a Hikvision memory card is installed to the device.

Steps

1. Go to **Configuration → Storage → Storage Management → Memory Card Detection** .
2. Click **Status Detection** to check the **Remaining Lifespan** and **Health Status** of your memory card.
Remaining Lifespan

It shows the percentage of the remaining lifespan. The lifespan of a memory card may be influenced by factors such as its capacity and the bitrate. You need to change the memory card if the remaining lifespan is not enough.

Health Status

It shows the condition of your memory card. There are three status descriptions: good, bad, and damaged. You will receive a notification if the health status is anything other than good when the **Arming Schedule** and **Linkage Method** are set.



It is recommended that you change the memory card when the health status is not "good".

3. Click **R/W Lock** to set the permission of reading and writing to the memory card.
 - Add a Lock
 - a. Select the **Lock Switch** as ON.
 - b. Enter the password.
 - c. Click **Save**
 - Unlock
 - If you use the memory card on the device that locks it, unlocking will be done automatically and no unlocking procedures are required on the part of users.
 - If you use the memory card (with a lock) on a different device, you can go to **HDD Management** to unlock the memory card manually. Select the memory card, and click **Unlock**. Enter the correct password to unlock it.
 - Remove the Lock
 - a. Select the **Lock Switch** as OFF.
 - b. Enter the password in **Password Settings**.
 - c. Click **Save**.



- Only admin user can set the **R/W Lock**.
- The memory card can only be read and written when it is unlocked.
- If the device, which adds a lock to a memory card, is restored to the factory settings, you can go to **HDD Management** to unlock the memory card.

-
4. Set **Arming Schedule** and **Linkage Method**. See [Set Arming Schedule](#) and [Linkage Method Settings](#) for details.
 5. Click **Save**.

7.1.2 Set FTP

You can configure the FTP server to save images which are captured by events or a timed snapshot task.

Before You Start

Get the FTP server address first.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **FTP** .
2. Configure FTP settings.

Server Address and Port

The FTP server address and corresponding port.

User Name and Password

The FTP user should have the permission to upload pictures.

If the FTP server supports picture uploading by anonymous users, you can check **Anonymous** to hide your device information during uploading.

Directory Structure

The saving path of snapshots in the FTP server.

Picture Filing Interval

For better picture management, you can set the picture filing interval from 1 day to 30 days. Pictures captured in the same time interval will be saved in one folder named after the beginning date and ending date of the time interval.

Picture Name

Set the naming rule for captured pictures. You can choose **Default** in the drop-down list to use the default rule, that is, IP address_channel number_capture time_event type.jpg (e.g., 10.11.37.189_01_20150917094425492_FACE_DETECTION.jpg). Or you can customize it by adding a **Custom Prefix** to the default naming rule.

3. Click **Upload Picture** to enable uploading snapshots to the FTP server.
4. Click **Test** to verify the FTP server.
5. Click **Save**.

7.1.3 Set NAS

Take network server as network disk to store the record files, captured images, etc.

Before You Start

Get the IP address of the network disk first.

Steps

1. Go to NAS setting page: **Configuration** → **Storage** → **Storage Management** → **Net HDD** .
2. Click **HDD No.**. Enter the server address and file path for the disk.

Server Address

The IP address of the network disk.

File Path

The saving path of network disk files.

Mounting Type

Select file system protocol according to the operation system.

Enter user name and password of the net HDD to guarantee the security if **SMB/CIFS** is selected.

3. Click **Test** to check whether the network disk is available.
4. Click **Save**.

7.1.4 Set Cloud Storage

It helps to upload the captured pictures and data to the cloud. The platform requests picture directly from the cloud for picture and analysis. The function is only supported by certain models.

Steps



Caution

If cloud storage is enabled, the pictures are stored in the cloud video manager preferentially.

1. Go to **Configuration → Storage → Storage Management → Cloud Storage**.
2. Check **Enable Cloud Storage**.
3. Set basic parameters.

Protocol Version	The protocol version of the cloud video manager.
Server IP	The IP address of the cloud video manager. It supports IPv4 address.
Serve Port	The port of the cloud video manager. 6001 is the default port and you are not recommended to edit it.
AccessKey	The key to log in to the cloud video manager.
SecretKey	The key to encrypt the data stored in the cloud video manager.
User Name and Password	The user name and password of the cloud video manager.
Picture Storage Pool ID	The ID of the picture storage region in the cloud video manager. Make sure storage pool ID and the storage region ID are the same.

4. Click **Test** to test the configured settings.
5. Click **Save**.

7.2 Video Recording

This part introduces the operations of manual and scheduled recording, playback, and downloading recorded files.

7.2.1 Record Automatically

This function can record video automatically during configured time periods.

Before You Start

Select **Trigger Recording** in event settings for each record type except **Continuous**. See [Event and Alarm](#) for details.

Steps



The function varies according to different models.

1. Go to **Configuration** → **Storage** → **Schedule Settings** → **Record Schedule** .
 2. Select channel No.
 3. Check **Enable**.
 4. Select a record type.
-



The record type is vary according to different models.

Continuous

The video will be recorded continuously according to the schedule.

Motion

When motion detection is enabled and trigger recording is selected as linkage method, object movement is recorded.

Alarm

When alarm input is enabled and trigger recording is selected as linkage method, the video is recorded after receiving alarm signal from external alarm input device.

Motion | Alarm

Video is recorded when motion is detected or alarm signal is received from the external alarm input device.

Motion & Alarm

Video is recorded only when motion is detected and alarm signal is received from the external alarm input device.

Event

The video is recorded when configured event is detected.

5. Set schedule for the selected record type. Refer to [Set Arming Schedule](#) for the setting operation.
6. Click **Advanced** to set the advanced settings.

Overwrite

Enable **Overwrite** to overwrite the video records when the storage space is full. Otherwise the camera cannot record new videos.

Pre-record

The time period you set to record before the scheduled time.

Post-record

The time period you set to stop recording after the scheduled time.

Stream Type

Select the stream type for recording.



Note

When you select the stream type with higher bitrate, the actual time of the pre-record and post-record may be less than the set value.



Recording Expiration

The recordings are deleted when they exceed the expired time. The expired time is configurable. Note that once the recordings are deleted, they can not be recovered.

7. Click **Save**.

7.2.2 Record Manually




Steps

1. Go to **Configuration** → **Local** .
2. Set the **Record File Size** and saving path to for recorded files.
3. Click **Save**.
4. Click  in the live view interface to start recording. Click  to stop recording.

7.2.3 Playback and Download Video


You can search, playback and download the videos stored in the local storage or network storage.

Steps

1. Click **Playback**.
2. Select channel No.
3. Set search condition and click **Search**.
The matched video files showed on the timing bar.
4. Click  to play the video files.
 - Click  to clip video files.
 - Click  to play video files in full screen. Press **ESC** to exit full screen.

 **Note**

Go to **Configuration → Local** , click **Save clips to** to change the saving path of clipped video files.

5. Click  on the playback interface to download files.
 - 1) Set search condition and click **Search**.
 - 2) Select the video files and then click **Download**.

 **Note**

Go to **Configuration → Local** , click **Save downloaded files to** to change the saving path of downloaded video files.

7.3 Capture Configuration

The device can capture the pictures manually or automatically and save them in configured saving path. You can view and download the snapshots.

7.3.1 Capture Automatically

This function can capture pictures automatically during configured time periods.

Before You Start

If event-triggered capture is required, you should configure related linkage methods in event settings. Refer to [***Event and Alarm***](#) for event settings.

Steps

1. Go to **Configuration → Storage → Schedule Settings → Capture → Capture Parameters** .
2. Set the capture type.

Timing

Capture a picture at the configured time interval.

Event-Triggered

Capture a picture when an event is triggered.

3. Set the **Format, Resolution, Quality, Interval, and Capture Number**.
4. Refer to [***Set Arming Schedule***](#) for configuring schedule time.
5. Click **Save**.

7.3.2 Capture Manually

Steps


1. Go to **Configuration → Local** .
2. Set the **Image Format** and saving path to for snapshots.

JPEG

The picture size of this format is comparatively small, which is better for network transmission.

BMP

The picture is compressed with good quality.

3. Click **Save**.
4. Click  near the live view or play back window to capture a picture manually.

7.3.3 View and Download Picture

You can search, view and download the pictures stored in the local storage or network storage.

Steps

1. Click **Picture**.
2. Select channel No.
3. Set search condition and click **Search**.

The matched pictures showed in the file list.

4. Select the pictures then click **Download** to download them.



Note

Go to **Configuration** → **Local** , click **Save snapshots when playback** to change the saving path of pictures.

Chapter 8 Event and Alarm

This part introduces the configuration of events. The device takes certain response to triggered alarm.

8.1 Basic Event

8.1.1 Set Motion Detection

This function detects moving objects in the detection region and trigger linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Motion Detection** .
2. Check **Enable Motion Detection**.
3. **Optional**: Check **Enable Motion Detection in PTZ Control**, and the device detects moving targets in PTZ movement.
4. **Optional**: Highlight moving objects in green.
 - 1) Check **Enable Dynamic Analysis for Motion**.
 - 2) Go to **Configuration** → **Local** to enable **Rules**.
5. Select **Configuration Mode**. Normal mode and expert mode are selectable.
 - For the information about normal mode, see ***Normal Mode*** .
 - For the information about expert mode, see ***Expert Mode*** .
6. Set the arming schedule. See ***Set Arming Schedule*** for details.
7. Set linkage methods. See ***Linkage Method Settings*** for details.
8. Click **Save**.

Normal Mode

You can set motion detection parameters according to the device default parameters.

Steps

1. Select normal mode in **Configuration**.
2. Set the sensitivity of normal mode. The higher the value of sensitivity is, the more sensitive the motion detection is. If the sensitivity is set to **0**, motion detection and dynamic analysis do not take effect.
3. Click **Draw Area**. Click and drag the mouse on the live video, then release the mouse to finish drawing one area.

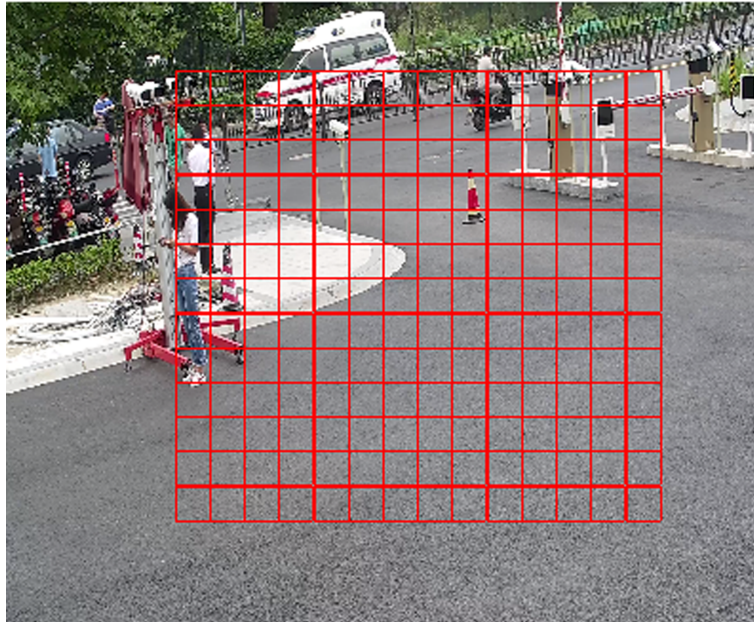


Figure 8-1 Set Rules

Stop Drawing Stop drawing one area.

Clear All Clear all the areas.

4. Optional: You can set the parameters of multiple areas by repeating the above steps.

Expert Mode

You can configure different motion detection parameters for day and night according to the actual needs.

Steps

1. Select **Expert Mode** in **Configuration**.
2. Set parameters of expert mode.

Scheduled Image Settings

OFF

Image switch is disabled.

Auto-Switch

The system switches day/night mode automatically according to environment. It displays colored image at day and black and white image at night.

Scheduled-Switch

The system switches day/night mode according to the schedule. It switches to day mode during the set periods and switches to night mode during the other periods.

Sensitivity

The higher the value of sensitivity is, the more sensitive the motion detection is. If scheduled image settings is enabled, the sensitivity of day and night can be set separately.

3. Select an **Area** and click **Draw Area**. Click and drag the mouse on the live image and then release the mouse to finish drawing one area.

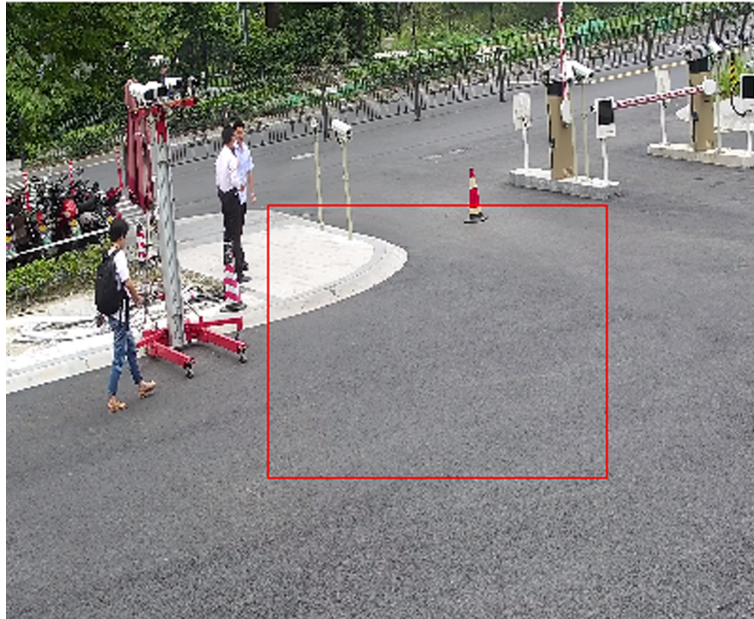


Figure 8-2 Set Rules

Stop Drawing Finish drawing one area.

Clear All Delete all the areas.

4. Click **Save**.
5. **Optional:** Repeat above steps to set multiple areas.

8.1.2 Set Video Tampering Alarm

When the configured area is covered and cannot be monitored normally, the alarm is triggered and the device takes certain alarm response actions.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Video Tampering** .
2. Select the channel number.
3. Check **Enable**.
4. Set the **Sensitivity**. The higher the value is, the easier to detect the area covering.
5. Click **Draw Area** and drag the mouse in the live view to draw the area.

Stop Drawing Finish drawing.

Clear All Delete all the drawn areas.

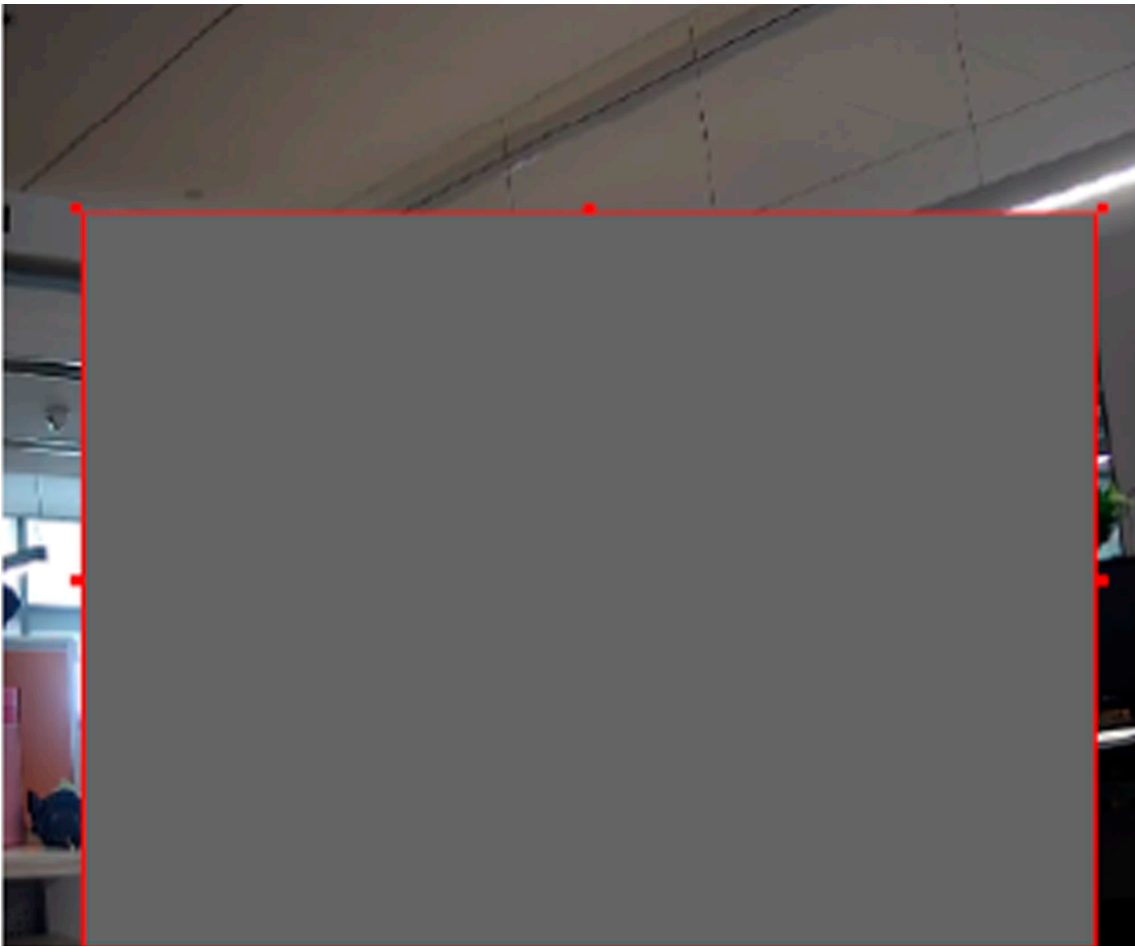


Figure 8-3 Set Video Tampering Area

6. Refer to ***Set Arming Schedule*** for setting scheduled time. Refer to ***Linkage Method Settings*** for setting linkage method.
7. Click **Save**.

8.1.3 Set Exception Alarm

Exception such as network disconnection can trigger the device to take corresponding action.

Steps

1. Go to **Configuration → Event → Basic Event → Exception**.
2. Select **Exception Type**.

HDD Full	The HDD storage is full.
HDD Error	Error occurs in HDD.

Network Disconnected The device is offline.

IP Address Conflicted The IP address of current device is same as that of other device in the network.

Illegal Login Incorrect user name or password is entered.

3. Refer to **Linkage Method Settings** for setting linkage method.

4. Click **Save**.

8.1.4 Set Alarm Input

Alarm signal from the external device triggers the corresponding actions of the current device.

Before You Start

Make sure the external alarm device is connected. See *Quick Start Guide* for cable connection.

Steps

1. Go to **Configuration → Event → Basic Event → Alarm Input** .

2. Check **Enable Alarm Input Handling**.

3. Select **Alarm Input NO.** and **Alarm Type** from the dropdown list. Edit the **Alarm Name**.

4. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.

5. Click **Copy to...** to copy the settings to other alarm input channels.

6. Click **Save**.

8.2 Smart Event



Note

- For certain device models, you need to enable the smart event function on **VCA Resource** page first to show the function configuration page.
 - The function varies according to different models.
-

8.2.1 Detect Audio Exception

Audio exception detection function detects the abnormal sound in the scene, such as the sudden increase/decrease of the sound intensity, and some certain actions can be taken as response.

Steps

1. Go to **Configuration → Event → Smart Event → Audio Exception Detection** .

2. Select one or several audio exception detection types.

Audio Loss Detection

Detect sudden loss of audio track.

Sudden Increase of Sound Intensity Detection

Detect sudden increase of sound intensity. **Sensitivity** and **Sound Intensity Threshold** are configurable.

Note

- The lower the sensitivity is, the more significant the change should be to trigger the detection.
- The sound intensity threshold refers to the sound intensity reference for the detection. It is recommended to set as the average sound intensity in the environment. The louder the environment sound, the higher the value should be. You can adjust it according to the real environment.

Sudden Decrease of Sound Intensity Detection

Detect sudden decrease of sound intensity. **Sensitivity** is configurable.

3. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage methods.

4. Click **Save**.

Note

The function varies according to different models.

8.2.2 Set Intrusion Detection

Intrusion detection detects the object movement of entering and loitering in a predefined area. When intrusion occurs, the device takes linkage actions as response.

Before You Start

You need to enable **Smart Event** on the **VCA Resource** page to show the configuration page. See **Allocate VCA Resource** for instructions.

Steps

1. Go to **Open Platform** → **Smart Event** → **Intrusion Detection** .
2. Check **Enable**.
3. **Optional**: Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.

Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.

4. Adjust the live image to the desired scene by using PTZ control buttons.
5. Draw detection area.
 - 1) Select a **Region No.**. Up to 4 regions can be set.
 - 2) Click **Detection Area**.
 - 3) Click on the live image to draw the boundaries of the detection area, and right click to complete drawing.

- 6. Optional:** Set the minimum size and the maximum size for the target to improve detection accuracy. Only targets whose size are between the maximum size and the minimum size trigger the detection.
- 1) Click **Max. Size**, and drag the mouse on live image. If you want to change the size, click the button and draw again.
 - 2) Click **Min. Size**, and drag the mouse on the live image. If you want to change the size, click the button and draw again.
- 7.** Set detection parameters.

Sensitivity	It stands for the sensitivity of detecting an target. The higher the value of sensitivity is, the more easily the target is detected.
Threshold	Threshold stands for the time of the target loitering in the region. If the time that she/he stays in the region exceeds the threshold, the alarm is triggered.
Detection Target	You can specify the object type, and the device only detects the selected type of objects.



Figure 8-4 Draw Area

- 8.** Click **Save**.
- 9.** Repeat above steps to set other detection areas.
- 10.** Set arming schedule. See **Set Arming Schedule** .
- 11.** Set linkage method. See **Linkage Method Settings** .

8.2.3 Set Line Crossing Detection

Line crossing detection is used to detect the object movement of crossing a predefined line. When it occurs, the device takes linkage actions as response.

Before You Start

You need to enable **Smart Event** on the **VCA Resource** page to show the configuration page. See **Allocate VCA Resource** for instructions.

Steps

1. Go to **Open Platform → Smart Event → Line Crossing Detection** .
2. Check **Enable**.
3. **Optional:** Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.

Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.

4. Adjust the live image to the desired scene by using PTZ control buttons.
5. Draw detection line.
 - 1) Select a **Line No.**. Up to 4 lines can be set in the scene.
 - 2) Click **Detection Area**.

A yellow line is displayed on live image.

- 3) Click on the line, and drag its end points to adjust the length and position.
- 4) Select the **Direction** for the detection line.

Direction

It stands for the direction from which the object goes across the line.

A<->B

The object going across the line from both directions can be detected and alarms are triggered.

A->B

Only the object crossing the configured line from side A to side B can be detected.

B->A

Only the object crossing the configured line from side B to side A can be detected.

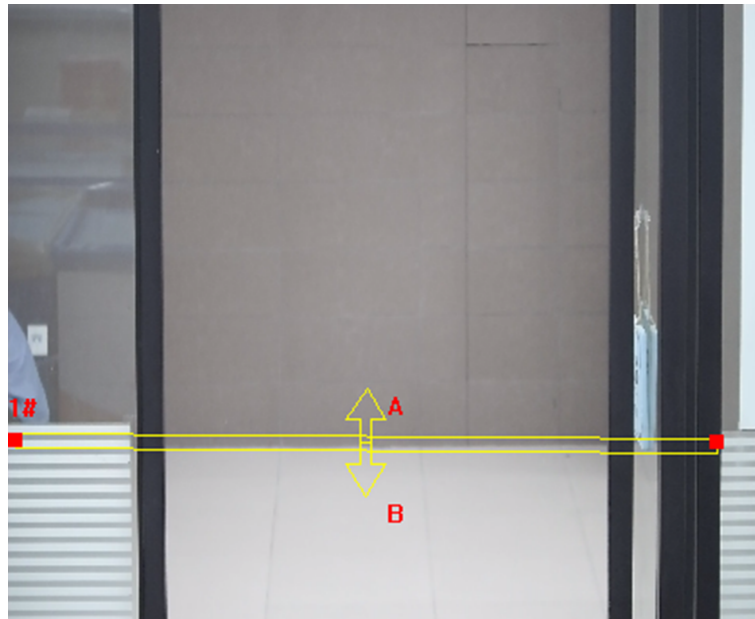


Figure 8-5 Draw Line

6. **Optional:** Set the minimum size and the maximum size for the target to improve detection accuracy. Only targets whose size are between the maximum size and the minimum size trigger the detection.
 - 1) Click **Max. Size**, and drag the mouse on live image. If you want to change the size, click the button and draw again.
 - 2) Click **Min. Size**, and drag the mouse on the live image. If you want to change the size, click the button and draw again.
7. Set detection parameters.

Sensitivity	It stands for the sensitivity of detecting an target. The higher the value is, the more easily the target is detected.
Detection Target	You can specify the object type, and the device only detects the selected type of objects.
8. Click **Save**.
9. Repeat above steps to set other lines.
10. Set arming schedule. See ***Set Arming Schedule*** .
11. Set linkage method. See ***Linkage Method Settings*** .

8.2.4 Set Region Entrance Detection

Region entrance detection is used to detect the object movement of entering a predefined area. When it occurs, the device takes linkage actions as response.

Before You Start

You need to enable **Smart Event** on the **VCA Resource** page to show the configuration page. See [***Allocate VCA Resource***](#) for instructions.

Steps

1. Go to **Open Platform → Smart Event → Region Entrance Detection** .
2. Check **Enable**.
3. **Optional:** Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.

Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.

4. Adjust the live image to the desired scene by using PTZ control buttons.
5. Draw detection area.
 - 1) Select a **Region No.**. Up to 4 regions can be set.
 - 2) Click **Detection Area**.
 - 3) Click on the live image to draw the boundaries of the detection area, and right click to complete drawing.
6. **Optional:** Set the minimum size and the maximum size for the target to improve detection accuracy. Only targets whose size are between the maximum size and the minimum size trigger the detection.
 - 1) Click **Max. Size**, and drag the mouse on live image. If you want to change the size, click the button and draw again.
 - 2) Click **Min. Size**, and drag the mouse on the live image. If you want to change the size, click the button and draw again.
7. Set detection parameters.

Sensitivity	It stands for the sensitivity of detecting an target. The higher the value is, the more easily the target is detected.
Detection Target	You can specify the object type, and the device only detects the selected type of objects.



Figure 8-6 Draw Area

8. Click **Save**.
9. Repeat above steps to set other regions.
10. Set arming schedule. See [***Set Arming Schedule***](#) .
11. Set linkage method. See [***Linkage Method Settings***](#) .

8.2.5 Set Region Exiting Detection

Region exiting detection is used to detect the objects movement of exiting from a predefined area. When it occurs, the device takes linkage actions as response.

Before You Start

You need to enable **Smart Event** on the **VCA Resource** page to show the configuration page. See [***Allocate VCA Resource***](#) for instructions.

Steps

1. Go to **Open Platform** → **Smart Event** → **Region Exiting Detection** .
2. Check **Enable**.
3. **Optional:** Click **Lock** to lock PTZ control to prevent the interruption from other PTZ related action during configuration.

Normally, the PTZ control is automatically locked when you enter the configuration interface. You can manually resume the lock when the countdown is over.

4. Adjust the live image to the desired scene by using PTZ control buttons.
5. Draw detection area.
 - 1) Select a **Region No.**. Up to 4 regions can be set.

- 2) Click **Detection Area**.
- 3) Click on the live image to draw the boundaries of the detection area, and right click to complete drawing.
6. **Optional:** Set the minimum size and the maximum size for the target to improve detection accuracy. Only targets whose size are between the maximum size and the minimum size trigger the detection.
 - 1) Click **Max. Size**, and drag the mouse on live image. If you want to change the size, click the button and draw again.
 - 2) Click **Min. Size**, and drag the mouse on the live image. If you want to change the size, click the button and draw again.
7. Set detection parameters.

Sensitivity	It stands for the sensitivity of detecting an target. The higher the value is, the more easily the target is detected.
Detection Target	You can specify the object type, and the device only detects the selected type of objects.



Figure 8-7 Draw Area

8. Click **Save**.
9. Repeat above steps to set other regions.
10. Set arming schedule. See **Set Arming Schedule** .
11. Set linkage method. See **Linkage Method Settings** .

8.2.6 Set Tracking Parameters

Adjust the motion parameters of the device for better target tracking performance.

Steps

1. Go to **Open Platform** → **Smart Event** → **Advanced Parameters** .
2. **Optional**: Check **Tuning Mode**.



Tuning mode is to display the information that helps debugging the function. This mode is reserved for technical support.

3. Set the **Duration**.

The device stops tracking when it tracks a target uninterruptedly for the set duration.

4. Set the zooming control and other tracking parameters.

Zooming Control

Two modes are available. Controlled by target frame or by tilt angle of the device.

By Tilt Angle

The device calculates the tracking zoom ratio automatically according to the tilt angle of the device.



The attitude of the device affects the accuracy of this zooming control mode. For the model with a built-in gyroscope, try to calibrate the attitude if some zooming problems happen during tracking. See ***Set Device Position*** for instructions.

By Target Frame

The tracked target has a virtual frame around. The device calculates a suitable zoom ratio according to the frame and the set **Tracking Zoom Ratio**. Larger value means bigger zoom ratio.

Wait to Stop Tracking If Low Validity

The validity is an internal parameter that helps judge whether the device should keep tracking or not. This parameter is the waiting time level before the device stops tracking when the validity is low. Larger value means longer waiting time.

Wait to Lower Tracking Speed If Low Validity

The validity is an internal parameter that helps judge whether the PTZ channel should lower the tracking speed or not. This parameter is the waiting time level before the device lowers the tracking speed when the validity is low. Larger value means longer waiting time.

5. Click **Save**.

Chapter 9 Arming Schedule and Alarm Linkage

Arming schedule is a customized time period in which the device performs certain tasks. Alarm linkage is the response to the detected certain incident or target during the scheduled time.

9.1 Set Arming Schedule

Set the valid time of the device tasks.

Steps

1. Click **Arming Schedule**.
2. Drag the time bar to draw desired valid time.



Up to 8 periods can be configured for one day.

3. Adjust the time period.
 - Click on the selected time period, and enter the desired value. Click **Save**.
 - Click on the selected time period. Drag the both ends to adjust the time period.
 - Click on the selected time period, and drag it on the time bar.
4. **Optional:** Click **Copy to...** to copy the same settings to other days.
5. Click **Save**.

9.2 Linkage Method Settings

You can enable the linkage functions when an event or alarm occurs.

9.2.1 Trigger Alarm Output

If the device has been connected to an alarm output device, and the alarm output No. has been configured, the device sends alarm information to the connected alarm output device when an alarm is triggered.

Steps

1. Go to **Configuration → Event → Basic Event → Alarm Output** .
2. Set alarm output parameters.

Automatic Alarm For the information about the configuration, see [Automatic Alarm](#) .

Manual Alarm For the information about the configuration, see [Manual Alarm](#) .

3. Click **Save**.

Automatic Alarm

Set the automatic alarm parameters, then the device triggers an alarm output automatically in the set arming schedule.

Steps

1. Set automatic alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Custom a name for the alarm output.

Delay

It refers to the time duration that the alarm output remains after an alarm occurs.

2. Set the alarming schedule. For the information about the settings, see [Set Arming Schedule](#) .
3. Click **Copy to...** to copy the parameters to other alarm output channels.
4. Click **Save**.

Manual Alarm

You can trigger an alarm output manually.

Steps

1. Set the manual alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Custom a name for the alarm output.

Delay

Select **Manual**.

2. Click **Manual Alarm** to enable manual alarm output.
3. **Optional:** Click **Clear Alarm** to disable manual alarm output.

9.2.2 FTP/NAS/Memory Card Uploading

If you have enabled and configured the FTP/NAS/memory card uploading, the device sends the alarm information to the FTP server, network attached storage and memory card when an alarm is triggered.

Refer to **Set FTP** to set the FTP server.

Refer to **Set NAS** for NAS configuration.

Refer to **Set New or Unencrypted Memory Card** for memory card storage configuration.

9.2.3 Send Email

Check **Send Email**, and the device sends an email to the designated addresses with alarm information when an alarm event is detected.

For email settings, refer to **Set Email**.


Set Email

When the email is configured and **Send Email** is enabled as a linkage method, the device sends an email notification to all designated receivers if an alarm event is detected.

Before You Start

Set the DNS server before using the Email function. Go to **Configuration → Network → Basic Settings → TCP/IP** for DNS settings.

Steps

1. Go to email settings page: **Configuration → Network → Advanced Settings → Email**.
 2. Set email parameters.
 - 1) Input the sender's email information, including the **Sender's Address**, **SMTP Server**, and **SMTP Port**.
 - 2) **Optional**: If your email server requires authentication, check **Authentication** and input your user name and password to log in to the server.
 - 3) Set the **E-mail Encryption**.
 - When you select **TLS**, and disable **STARTTLS**, emails are sent after encrypted by TLS. The SMTP port should be set as 465.
 - When you select **TLS** and **Enable STARTTLS**, emails are sent after encrypted by STARTTLS, and the SMTP port should be set as 25.
-
-  **Note**
- If you want to use STARTTLS, make sure that the protocol is supported by your email server. If you check the **Enable STARTTLS** while the protocol is not supported by your email sever, your email is sent with no encryption.
-
- 4) **Optional**: If you want to receive notification with alarm pictures, check **Attached Image**. The notification email has 3 attached alarm pictures about the event with configurable image capturing interval.
 - 5) Input the receiver's information, including the receiver's name and address.
 - 6) Click **Test** to see if the function is well configured.
3. Click **Save**.

9.2.4 Notify Surveillance Center

Check **Notify Surveillance Center**, the alarm information is uploaded to the surveillance center when an alarm event is detected.

9.2.5 Trigger Recording

Check **Trigger Recording**, and the device records the video about the detected alarm event. For device with more than one camera channels, you can set one or more channels to take recordings if needed.

For recording settings, refer to [Video Recording and Picture Capture](#)

9.2.6 Flashing Light

After enabling **Flashing Light** and setting the **Flashing Light Alarm Output**, the light flashes when an alarm event is detected.

Set Flashing Alarm Light Output

When events occur, the flashing light on the device can be triggered as an alarm.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Flashing Alarm Light Output** .
2. Set **Flashing Duration**, **Flashing Frequency** and **Brightness**.

Flashing Duration

The time that the flashing lasts when one alarm happens.

Flashing Frequency

The rate at which the light flashes. High frequency, medium frequency, low frequency, and normally on are selectable.

Brightness

The brightness of the light.

3. Set the arming schedule. See [Set Arming Schedule](#) for details.
4. Click **Save**.



Note

Only certain device models support the function.

9.2.7 Audible Warning

After enabling **Audible Warning** and setting **Audible Alarm Output**, the built-in speaker of the device or connected external speaker plays warning sounds when an alarm happens.

For audible alarm output settings, refer to ***Set Audible Alarm Output*** .



The function is only supported by certain camera models.

Set Audible Alarm Output

When the device detects targets in the detection area, audible alarm can be triggered as a warning.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Audible Alarm Output** .
2. Select **Sound Type** and set related parameters.
 - Select **Prompt** and set the alarm times you need.
 - Select **Warning** and its contents. Set the alarm times you need.
 - Select **Custom Audio**. You can select a custom audio file from the drop-down list. If no file is available, you can click **Add** to upload an audio file that meets the requirement. Up to three audio files can be uploaded.
3. **Optional**: Click **Test** to play the selected audio file on the device.
4. Set arming schedule for audible alarm. See ***Set Arming Schedule*** for details.
5. Click **Save**.



The function is only supported by certain device models.

Chapter 10 Network Settings

10.1 TCP/IP

TCP/IP settings must be properly configured before you operate the device over network. IPv4 and IPv6 are both supported. Both versions can be configured simultaneously without conflicting to each other.

Go to **Configuration** → **Network** → **Basic Settings** → **TCP/IP** for parameter settings.

NIC Type

Select a NIC (Network Interface Card) type according to your network condition.

IPv4

Two IPv4 modes are available.

DHCP

The device automatically gets the IPv4 parameters from the network if you check **DHCP**. The device IP address is changed after enabling the function. You can use SADP to get the device IP address.



The network that the device is connected to should support DHCP (Dynamic Host Configuration Protocol).

Manual

You can set the device IPv4 parameters manually. Input **IPv4 Address**, **IPv4 Subnet Mask**, and **IPv4 Default Gateway**, and click **Test** to see if the IP address is available.

IPv6

Three IPv6 modes are available.

Route Advertisement

The IPv6 address is generated by combining the route advertisement and the device Mac address.



Route advertisement mode requires the support from the router that the device is connected to.

DHCP

The IPv6 address is assigned by the server, router, or gateway.

Manual

Input **IPv6 Address**, **IPv6 Subnet**, **IPv6 Default Gateway**. Consult the network administrator for required information.

MTU

It stands for maximum transmission unit. It is the size of the largest protocol data unit that can be communicated in a single network layer transaction.

The valid value range of MTU is 1280 to 1500.

DNS

It stands for domain name server. It is required if you need to visit the device with domain name. And it is also required for some applications (e.g., sending email). Set **Preferred DNS Server** and **Alternate DNS server** properly if needed.

Dynamic Domain Name

Check **Enable Dynamic Domain Name** and input **Register Domain Name**. The device is registered under the register domain name for easier management within the local area network.



Note

DHCP should be enabled for the dynamic domain name to take effect.

10.1.1 Multicast

Multicast is group communication where data transmission is addressed to a group of destination devices simultaneously.

Go to **Configuration** → **Network** → **Basic Settings** → **Multicast** for the multicast settings.

IP Address

It stands for the address of multicast host.

Stream Type

The stream type as the multicast source.

Video Port

The video port of the selected stream.

Audio Port

The audio port of the selected stream.

10.1.2 Multicast Discovery

Check the **Enable Multicast Discovery**, and then the online network camera can be automatically detected by client software via private multicast protocol in the LAN.

10.2 Port

The device port can be modified when the device cannot access the network due to port conflicts.



Caution

Do not modify the default port parameters at will, otherwise the device may be inaccessible.

Go to **Configuration** → **Network** → **Basic Settings** → **Port** for port settings.

HTTP Port

It refers to the port through which the browser accesses the device. For example, when the **HTTP Port** is modified to 81, you need to enter ***http://192.168.1.64:81*** in the browser for login.

HTTPS Port

It refers to the port through which the browser accesses the device with certificate. Certificate verification is required to ensure the secure access.

RTSP Port

It refers to the port of real-time streaming protocol.

SRTP Port

It refers to the port of secure real-time transport protocol.

Server Port

It refers to the port through which the client adds the device.

Enhanced SDK Service Port

It refers to the port through which the client adds the device. Certificate verification is required to ensure the secure access.

WebSocket Port

TCP-based full-duplex communication protocol port for plug-in free preview.

WebSockets Port

TCP-based full-duplex communication protocol port for plug-in free preview. Certificate verification is required to ensure the secure access.



Note

- Enhanced SDK Service Port, WebSocket Port, and WebSockets Port are only supported by certain models.
 - For device models that support that function, go to **Configuration** → **Network** → **Advanced Settings** → **Network Service** to enable it.
-

10.3 Port Mapping

By setting port mapping, you can access devices through the specified port.

Before You Start

When the ports in the device are the same as those of other devices in the network, refer to **Port** to modify the device ports.

Steps

1. Go to **Configuration → Network → Basic Settings → NAT**.
2. Select the port mapping mode.

Auto Port Mapping Refer to **Set Auto Port Mapping** for detailed information.

Manual Port Mapping Refer to **Set Manual Port Mapping** for detailed information.

3. Click **Save**.

10.3.1 Set Auto Port Mapping

Steps

1. Check **Enable UPnP™**, and choose a friendly name for the camera, or you can use the default name.
2. Select the port mapping mode to **Auto**.
3. Click **Save**.



Note

UPnP™ function on the router should be enabled at the same time.

10.3.2 Set Manual Port Mapping

Steps

1. Check **Enable UPnP™**, and choose a friendly name for the device, or you can use the default name.
2. Select the port mapping mode to **Manual**, and set the external port to be the same as the internal port.
3. Click **Save**.

What to do next

Go to the router port mapping settings interface and set the port number and IP address to be the same as those on the device. For more information, refer to the router user manual.

10.3.3 Set Port Mapping on Router

The following settings are for a certain router. The settings vary depending on different models of routers.

Steps

1. Select the **WAN Connection Type**.
2. Set the **IP Address**, **Subnet Mask** and other network parameters of the router.
3. Go to **Forwarding** → **Virtual Servers** , and input the **Port Number** and **IP Address**.
4. Click **Save**.

Example

When the cameras are connected to the same router, you can configure the ports of a camera as 80, 8000, and 554 with IP address 192.168.1.23, and the ports of another camera as 81, 8001, 555, 8201 with IP 192.168.1.24.

108M Wireless Router
Model No.: TL-WR641G / TL-WR642G

- Status
- Quick Setup
- Basic Settings ---
- + Network
- + Wireless
- Advanced Settings ---
- + DHCP
- Forwarding
 - Virtual Servers
 - Port Triggering
 - DMZ
 - UPnP
- + Security
 - Static Routing
 - Dynamic DNS
- Maintenance ---
- + System Tools

Virtual Servers

ID	Service Port	IP Address	Protocol	Enable
1	80	192.168.10.23	ALL	<input checked="" type="checkbox"/>
2	8000	192.168.10.23	ALL	<input checked="" type="checkbox"/>
3	554	192.168.10.23	ALL	<input checked="" type="checkbox"/>
4	8200	192.168.10.23	ALL	<input checked="" type="checkbox"/>
5	81	192.168.10.24	ALL	<input checked="" type="checkbox"/>
6	8001	192.168.10.24	ALL	<input checked="" type="checkbox"/>
7	555	192.168.10.24	ALL	<input checked="" type="checkbox"/>
8	8201	192.168.10.24	ALL	<input checked="" type="checkbox"/>

Common Service Port: DNS(53) Copy to ID 1

Previous Next Clear All Save

Figure 10-1 Port Mapping on Router

Note

The port of the network camera cannot conflict with other ports. For example, some web management port of the router is 80. Change the camera port if it is the same as the management port.

10.4 SNMP

You can set the SNMP network management protocol to get the alarm event and exception messages in network transmission.

Before You Start

Before setting the SNMP, you should download the SNMP software and manage to receive the device information via SNMP port.

Steps

1. Go to the settings page: **Configuration → Network → Advanced Settings → SNMP** .
2. Check **Enable SNMPv1**, **Enable SNMP v2c** or **Enable SNMPv3**.



Note

The SNMP version you select should be the same as that of the SNMP software.

And you also need to use the different version according to the security level required. SNMP v1 is not secure and SNMP v2 requires password for access. And SNMP v3 provides encryption and if you use the third version, HTTPS protocol must be enabled.

-
3. Configure the SNMP settings.
 4. Click **Save**.

10.5 Access to Device via Domain Name

You can use the Dynamic DNS (DDNS) for network access. The dynamic IP address of the device can be mapped to a domain name resolution server to realize the network access via domain name.

Before You Start

Registration on the DDNS server is required before configuring the DDNS settings of the device.

Steps

1. Refer to **TCP/IP** to set DNS parameters.
2. Go to the DDNS settings page: **Configuration → Network → Basic Settings → DDNS** .
3. Check **Enable DDNS** and select **DDNS type**.

DynDNS

Dynamic DNS server is used for domain name resolution.

NO-IP

NO-IP server is used for domain name resolution.

4. Input the domain name information, and click **Save**.
5. Check the device ports and complete port mapping. Refer to **Port** to check the device port , and refer to **Port Mapping** for port mapping settings.
6. Access the device.

By Browsers

Enter the domain name in the browser address bar to access the device.

By Client Software Add domain name to the client software. Refer to the client manual for specific adding methods.

10.6 Access to Device via PPPoE Dial Up Connection

This device supports the PPPoE auto dial-up function. The device gets a public IP address by ADSL dial-up after the device is connected to a modem. You need to configure the PPPoE parameters of the device.

Steps

1. Go to **Configuration** → **Network** → **Basic Settings** → **PPPoE** .
2. Check **Enable PPPoE**.
3. Set the PPPoE parameters.

Dynamic IP

After successful dial-up, the dynamic IP address of the WAN is displayed.

User Name

User name for dial-up network access.

Password

Password for dial-up network access.

Confirm

Input your dial-up password again.

4. Click **Save**.
5. Access the device.

By Browsers Enter the WAN dynamic IP address in the browser address bar to access the device.

By Client Software Add the WAN dynamic IP address to the client software. Refer to the client manual for details.



Note

The obtained IP address is dynamically assigned via PPPoE, so the IP address always changes after rebooting the camera. To solve the inconvenience of the dynamic IP, you need to get a domain name from the DDNS provider (e.g. DynDns.com). Refer to **[Access to Device via Domain Name](#)** for detail information.

10.7 Accessing via Mobile Client

Hik-Connect is an application for mobile devices. Using the App, you can view live image, receive alarm notification and so on.

Note

Hik-Connect service should be supported by the camera.

10.7.1 Enable Hik-Connect Service on Camera

Hik-Connect service should be enabled on your camera before using the service.

You can enable the service through SADP software or Web browser.

Enable Hik-Connect Service via Web Browser

Follow the following steps to enable Hik-Connect Service via Web Browser.

Before You Start

You need to activate the camera before enabling the service.

Steps

1. Access the camera via web browser.
 2. Enter platform access configuration interface. **Configuration → Network → Advanced Settings → Platform Access**
 3. Select Hik-Connect as the **Platform Access Mode**.
 4. Check **Enable**.
 5. Click and read "Terms of Service" and "Privacy Policy" in pop-up window.
 6. Create a verification code or change the old verification code for the camera.
-

Note

The verification code is required when you add the camera to Hik-Connect service.

7. Save the settings.

Enable Hik-Connect Service via SADP Software

This part introduce how to enable Hik-Connect service via SADP software of an activated camera.

Steps

1. Run SADP software.
 2. Select a camera and enter **Modify Network Parameters** page.
 3. Check **Enable Hik-Connect**.
 4. Create a verification code or change the old verification code.
-

Note

The verification code is required when you add the camera to Hik-Connect service.

5. Click and read "Terms of Service" and "Privacy Policy".
-

6. Confirm the settings.

10.7.2 Set Up Hik-Connect

Steps

1. Get and install Hik-Connect application by the following ways.
 - Visit <https://appstore.hikvision.com> to download the application according to your mobile phone system.
 - Visit the official site of our company. Then go to **Support** → **Tools** → **Hikvision App Store** .
 - Scan the QR code below to download the application.

Note

If errors like "Unknown app" occur during the installation, solve the problem in two ways.

- Visit <https://appstore.hikvision.com/static/help/index.html> to refer to the troubleshooting.
- Visit <https://appstore.hikvision.com/> , and click **Installation Help** at the upper right corner of the interface to refer to the troubleshooting.

-
2. Start the application and register for a Hik-Connect user account.
 3. Log in after registration.

10.7.3 Add Camera to Hik-Connect

Steps

1. Connect your mobile device to a Wi-Fi.
2. Log into the Hik-Connect app.
3. In the home page, tap "+" on the upper-right corner to add a camera.
4. Scan the QR code on camera body or on the *Quick Start Guide* cover.

Note

If the QR code is missing or too blur to be recognized, you can also add the camera by inputting the camera's serial number.

-
5. Input the verification code of your camera.

Note

- The required verification code is the code you create or change when you enable Hik-Connect service on the camera.
- If you forget the verification code, you can check the current verification code on **Platform Access** configuration page via web browser.

-
6. Tap **Connect to a Network** button in the popup interface.
 7. Choose **Wired Connection** or **Wireless Connection** according to your camera function.

Wireless Connection	Input the Wi-Fi password that your mobile phone has connected to, and tap Next to start the Wi-Fi connection process. (Locate the camera within 3 meters from the router when setting up the Wi-Fi.)
Wired Connection	Connect the camera to the router with a network cable and tap Connected in the result interface.



The router should be the same one which your mobile phone has connected to.

8. Tap **Add** in the next interface to finish adding.

For detailed information, refer to the user manual of the Hik-Connect app.

10.8 Set ISUP

When the device is registered on ISUP platform (formerly called Ehome), you can visit and manage the device, transmit data, and forward alarm information over public network.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Platform Access** .
2. Select **ISUP** as the platform access mode.
3. Select **Enable**.
4. Select a protocol version and input related parameters.
5. Click **Save**.

Register status turns to **Online** when the function is correctly set.

10.9 Set Open Network Video Interface

If you need to access the device through Open Network Video Interface protocol, you can configure the user settings to enhance the network security.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Integration Protocol** .
2. Check **Enable Open Network Video Interface**.
3. Click **Add** to configure the Open Network Video Interface user.

Delete Delete the selected Open Network Video Interface user.

Modify Modify the selected Open Network Video Interface user.

4. Click **Save**.
5. **Optional:** Repeat the steps above to add more Open Network Video Interface users.

10.10 Set Network Service

You can control the ON/OFF status of certain protocol as desired.

Steps



This function varies according to different models.

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Network Service** .
2. Set network service.

WebSocket & WebSockets

WebSocket or WebSockets protocol should be enabled if you use Google Chrome 57 and its above version or Mozilla Firefox 52 and its above version to visit the device. Otherwise, live view, image capture, digital zoom, etc. cannot be used.

If the device uses HTTP, enable WebSocket.

If the device uses HTTPS, enable WebSockets.

When you use WebSockets, select the **Server Certificate**.



Complete certificate management before selecting server certificate. Refer to **Certificate Management** for detailed information.

SDK Service & Enhanced SDK Service

Check **Enable SDK Service** to add the device to the client software with SDK protocol.

Check **Enable Enhanced SDK Service** to add the device to the client software with SDK over TLS protocol.

When you use Enhanced SDK Service, select the **Server Certificate**.



- Complete certificate management before selecting server certificate. Refer to **Certificate Management** for detailed information.
 - When set up connection between the device and the client software, it is recommended to use Enhanced SDK Service and set the communication in Arming Mode to encrypt the data transmission. See the user manual of the client software for the arming mode settings.
-

TLS (Transport Layer Security)

The device offers TLS1.1, TLS1.2 and TLS1.3. Enable one or more protocol versions according to your need.

Bonjour

Uncheck to disable the protocol.

3. Click **Save**.

10.11 Set Alarm Server

The device can send alarms to destination IP address or host name through HTTP, HTTPS, or ISUP protocol. The destination IP address or host name should support HTTP, HTTPS, or ISUP data transmission.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Alarm Server** .
2. Enter **Destination IP or Host Name**, **URL**, and **Port**.
3. Select **Protocol**.



Note

HTTP, HTTPS, and ISUP are selectable. It is recommended to use HTTPS, as it encrypts the data transmission during communication.

4. Click **Test** to check if the IP or host is available.
5. Click **Save**.

10.12 TCP Acceleration

TCP acceleration is used to improve latency and reduce packet loss caused by network congestion in poor network condition, and guarantee the fluency of live view.

10.13 Traffic Shaping

Traffic shaping is used to shape and smooth video data packet before transmission.

It helps to improve latency and reduce packet loss caused by network congestion and ensure the video quality as well. Shaping level is configurable.

10.14 Data Monitoring

You can view and manage the SIM card data or wired network data used by the device. SIM card data is the data service provided by network carriers; wired network data is usually provided through a 4G router.

Steps

1. Go to **Configuration** → **Network** → **Network Settings** → **Data Monitoring** .
2. Check **Enable**.
3. Set the following parameters according to your data plan.

Plan Type

Daily, **Monthly**, or **Annually** can be selected.

Data Plan

Enter the amount of usable data and select the unit.

Pre-Alarm Threshold

When the used data reaches the set percentage of data plan, the device sends an alarm message, and shows notification on the OSD or pop-up window.

4. Select **Normal Linkage**.

If **Send Email** or **Notify Surveillance Center** is selected, the device sends an alarm message by Email or to surveillance center when the used data reaches the threshold.

5. Click **Save**.



Note

The function varies with different device models.

10.15 Set SRTP

The Secure Real-time Transport Protocol (SRTP) is a Real-time Transport Protocol (RTP) internet protocol, intended to provide encryption, message authentication and integrity, and replay attack protection to the RTP data in both unicast and multicast applications.

Steps

1. Go to **Configuration → Network → Advanced Settings → SRTP** .
2. Select **Server Certificate**.
3. Select **Encrypted Algorithm**.
4. Click **Save**.



Note

- Only certain device models support this function.
 - If the function is abnormal, check if the selected certificate is abnormal in certificate management.
-

Chapter 11 System and Security

It introduces system maintenance, system settings and security management, and explains how to configure relevant parameters.

11.1 View Device Information

You can view device information, such as Device No., Model, Serial No. and Firmware Version.

Enter **Configuration** → **System** → **System Settings** → **Basic Information** to view the device information.

11.2 Restore and Default

Restore and Default helps restore the device parameters to the default settings.

Steps

1. Go to **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance** .
2. Click **Restore** or **Default** according to your needs.

Restore Reset device parameters, except user information, IP parameters and video format to the default settings.

Default Reset all the parameters to the factory default.



Be careful when using this function. After resetting to the factory default, all the parameters are reset to the default settings.

11.3 Search and Manage Log

Log helps locate and troubleshoot problems.

Steps

1. Go to **Configuration** → **System** → **Maintenance** → **Log** .
2. Set search conditions **Major Type**, **Minor Type**, **Start Time**, and **End Time**.
3. Click **Search**.

The matched log files will be displayed on the log list.

4. **Optional:** Click **Export** to save the log files in your computer.

11.4 Import and Export Configuration File

It helps speed up batch configuration on other devices with the same parameters.

Steps

1. Export configuration file.
 - 1) Go to **Configuration → System → Maintenance → Upgrade & Maintenance** .
 - 2) Click **Device Parameters** and input the encryption password to export the current configuration file.
 - 3) Set the saving path to save the configuration file in local computer.
2. Import configuration file.
 - 1) Access the device that needs to be configured via web browser.
 - 2) Click **Browse** to select the saved configuration file.
 - 3) Input the encryption password you have set when exporting the configuration file.
 - 4) Click **Import**.

11.5 Export Diagnose Information

Diagnose information includes running log, system information, hardware information.

Go to **Configuration → System → Maintenance → Upgrade & Maintenance** . Check desired diagnose information and click **Diagnose Information** to export corresponding diagnose information of the device.

11.6 Reboot

You can reboot the device via browser.

Go to **Configuration → System → Maintenance → Upgrade & Maintenance** , and click **Reboot**.

11.7 Upgrade

Before You Start

You need to obtain the correct upgrade package.



Caution

DO NOT disconnect power during the process, and the device reboots automatically after upgrade.

Steps

1. Go to **Configuration → System → Maintenance → Upgrade & Maintenance** .
2. Choose one method to upgrade.

Firmware

Locate the exact path of the upgrade file.

Firmware Directory Locate the directory which the upgrade file belongs to.

3. Click **Browse** to select the upgrade file.
4. Click **Upgrade**.

11.8 Undervoltage Alarm

It is used to monitor the device voltage and warns you when the voltage is alarmingly low.

When the device voltage is too low, a sign ⚡ appears in live view image. Then, you are recommended to optimize the power supply, so as to avoid device abnormal.

The function is on by default.

11.9 View Open Source Software License

Go to **Configuration** → **System** → **System Settings** → **About Device** , and click **View Licenses**.

11.10 Set Live View Connection

It controls the remote live view connection amount.

Live view connection controls the maximum live view that can be streamed at the same time.

Enter **Configuration** → **System** → **Maintenance** → **System Service** to set the upper limit of the remote connection number.

11.11 Time and Date

You can configure time and date of the device by configuring time zone, time synchronization and Daylight Saving Time (DST).

11.11.1 Synchronize Time Manually

Steps

1. Go to **Configuration** → **System** → **System Settings** → **Time Settings** .
2. Select **Time Zone**.
3. Click **Manual Time Sync..**
4. Choose one time synchronization method.
 - Select **Set Time**, and manually input or select date and time from the pop-up calendar.
 - Check **Sync. with computer time** to synchronize the time of the device with that of the local PC.
5. Click **Save**.

11.11.2 Set NTP Server

You can use NTP server when accurate and reliable time source is required.

Before You Start

Set up a NTP server or obtain NTP server information.

Steps

1. Go to **Configuration → System → System Settings → Time Settings** .
2. Select **Time Zone**.
3. Click **NTP**.
4. Set **Server Address, NTP Port** and **Interval**.



Server Address is NTP server IP address.

5. Click **Test** to test server connection.
6. Click **Save**.

11.11.3 Set DST

If the region where the device is located adopts Daylight Saving Time (DST), you can set this function.

Steps

1. Go to **Configuration → System → System Settings → DST** .
2. Check **Enable DST**.
3. Select **Start Time, End Time** and **DST Bias**.
4. Click **Save**.

11.12 Set RS-485

RS-485 is used to connect the device to external device. You can use RS-485 to transmit the data between the device and the computer or terminal when the communication distance is too long.

Before You Start

Connect the device and computer or terminal with RS-485 cable.

Steps

1. Go to **Configuration → System → System Settings → RS-485** .
2. Set the RS-485 parameters.



You should keep the parameters of the device and the computer or terminal all the same.

3. Click **Save**.

11.13 Security

You can improve system security by setting security parameters.

11.13.1 Authentication

You can improve network access security by setting RTSP and WEB authentication.

Go to **Configuration → System → Security → Authentication** to choose authentication protocol and method according to your needs.

RTSP Authentication

Digest and digest/basic are supported, which means authentication information is needed when RTSP request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

RTSP Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in RTSP authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength is recommended.

WEB Authentication

Digest and digest/basic are supported, which means authentication information is needed when WEB request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

WEB Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in WEB authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength is recommended.

Note

Refer to the specific content of protocol to view authentication requirements.

11.13.2 Set IP Address Filter

IP address filter is a tool for access control. You can enable the IP address filter to allow or forbid the visits from the certain IP addresses.

IP address refers to IPv4.

Steps

1. Go to **Configuration → System → Security → IP Address Filter** .
2. Check **Enable IP Address Filter**.
3. Select the type of IP address filter.

Forbidden IP addresses in the list cannot access the device.

Allowed Only IP addresses in the list can access the device.

4. Edit the IP address filter list.

Add Add a new IP address or IP address range to the list.

Modify Modify the selected IP address or IP address range in the list.

Delete Delete the selected IP address or IP address range in the list.

5. Click **Save**.

11.13.3 Set MAC Address Filter

MAC address filter is a tool for access control. You can enable the MAC address filter to allow or forbid the visits from the certain MAC addresses.

Steps

1. Go to **Configuration → System → Security → MAC Address Filter** .
2. Check **Enable MAC Address Filter**.
3. Select the type of MAC address filter.

Forbidden MAC addresses in the list cannot access the device.

Allowed Only MAC addresses in the list can access the device.

4. Edit the MAC address filter list.

Add Add a new MAC address to the list.

Modify Modify the selected MAC address in the list.

Delete Delete the selected MAC address in the list.

5. Click **Save**.

11.13.4 Set HTTPS

HTTPS is a network protocol that enables encrypted transmission and identity authentication, which improves the security of remote access.

Steps

1. Go to **Configuration → Network → Advanced Settings → HTTPS** .
2. Check **Enable**.
3. **Optional:** Check **HTTPS Browsing** to access the device only via HTTPS protocol.
4. Select a server certificate.



- Complete certificate management before selecting server certificate. Refer to **Certificate Management** for detailed information.
- If the function is abnormal, check if the selected certificate is abnormal in **Certificate Management**.

5. Click **Save**.

11.13.5 Security Audit Log

The security audit logs refer to the security operation logs. You can search and analyze the security log files of the device so as to find out the illegal intrusion and troubleshoot the security events.

Security audit logs can be saved on device internal storage. The log will be saved every half hour after device booting. Due to limited storage space, you can also save the logs on a log server.

Search Security Audit Logs

You can search and analyze the security log files of the device so as to find out the illegal intrusion and troubleshoot the security events.

Steps



This function is only supported by certain camera models.

1. Go to **Configuration → System → Maintenance → Security Audit Log**.
2. Select log types, **Start Time**, and **End Time**.
3. Click **Search**.

The log files that match the search conditions will be displayed on the Log List.

4. **Optional:** Click **Export** to save the log files to your computer.

Set Log Server

The log server should support syslog (RFC 3164) over TLS.

Before You Start

- Install client and CA certificates before configuration. Refer to **Certificate Management** for detailed information.
- Select certificates according to the requirement of the log server. If two-way authentication is required, select the CA certificate and the client certificate. If one-way authentication is required, select the CA certificate only.

Steps

1. Check **Enable Log Upload Server**.
2. **Optional:** Check **Enable Encrypted Transmission** if you want the log data to be encrypted.
3. Input **Log Server IP** and **Log Server Port**.
4. **Optional:** Select client certificate.
5. Select CA certificate to the device.
6. Click **Test** to test the settings.
7. Click **Save**.

11.13.6 Set QoS

QoS (Quality of Service) can help improve the network delay and network congestion by setting the priority of data sending.

Note

QoS needs support from network device such as router and switch.

Steps

1. Go to **Configuration → Network → Advanced Configuration → QoS** .
2. Set **Video/Audio DSCP, Alarm DSCP** and **Management DSCP**.

Note

Network can identify the priority of data transmission. The bigger the DSCP value is, the higher the priority is. You need to set the same value in router while configuration.

3. Click **Save**.

11.13.7 Set IEEE 802.1X

You can authenticate user permission of the connected device by setting IEEE 802.1X.

Go to **Configuration → Network → Advanced Settings → 802.1X** , and enable the function.

Select protocol and version according to router information. User name and password of server are required.

Note

- If you set the **Protocol** to **EAP-TLS**, select the **Client Certificate** and **CA Certificate**.
 - If the function is abnormal, check if the selected certificate is abnormal in **Certificate Management**.
-

11.13.8 Certificate Management

It manages the server/client certificates and CA certificate of the device.

Server Certificate/Client Certificate



The device has default self-signed server/client certificate installed. The certificate ID is **default**.

Create and Install Self-signed Certificate

Steps

1. Go to **Configuration → System → Security → Certificate Management** .
2. Click **Create Self-signed Certificate**.
3. Input certificate information.



The input certificate ID cannot be the same as the existing ones.

4. Click **OK** to save and install the certificate.

The created certificate is displayed in the **Server/Client Certificate** list.

If the certificate is used by certain functions, the function name is shown in the column **Functions**.

5. **Optional**: Click **Certificate Property** to see the certificate details.

Install Self-signed Request Certificate

You can send the self-signed certificate to a trusted third-party for the signature, and install the certificate to the device.

Before You Start

Create a self-signed certificate first. See **Create and Install Self-signed Certificate** for instructions.

Steps

1. Go to **Configuration → System → Security → Certificate Management** .
2. Select a self-signed certificate from the Server/Client Certificate list.
3. Click **Create Certificate Request**.
4. Input request information.
5. Click **OK**.

The certificate request details are displayed in a pop-up window.

6. Copy the request content and save it as a request file.

7. Send the file to a trusted-third party for signature.
8. After receiving the certificated sent back from the third-party, install it to the device.
 - 1) Click **Import**.
 - 2) Input **Certificate ID**.

 **Note**

The input certificate ID cannot be the same as the existed ones.

- 3) Click **Browse** to select the certificate file.
- 4) Select **Self-signed Request Certificate**.
- 5) Click **OK**.

The imported certificate is displayed in the **Server/Client Certificate** list.

If the certificate is used by certain function, the function name is shown in the column **Functions**.

9. **Optional:** Click **Certificate Property** see the certificate details.

Install Other Authorized Certificate

If you already has an authorized certificate (not created by the device), you can import it to the device directly.

Steps

1. Go to **Configuration → System → Security → Certificate Management** .
2. Click **Import**.
3. Input **Certificate ID**.

 **Note**

The input certificate ID cannot be the same as the existed ones.

4. Click **Browse** to select the certificate file.
5. Select **Certificate and Key** and select a **Key Type** according to your certificate.

Independent Key If your certificate has a independent key, select this option.

Browse to select the private key and input the private-key password.

PKCS#12 If your certificate has the key in the same certificate file, select this option and input the password.

6. Click **OK**.

The imported certificate is displayed in the **Server/Client Certificate** list.

If the certificate is used by certain function, the function name is shown in the column **Functions**.

Install CA Certificate

Before You Start

Prepare a CA certificate in advance.

Steps

1. Go to **Configuration → System → Security → Certificate Management** .
2. Input **Certificate ID**.



Note

The input certificate ID cannot be the same as the existing ones.

3. Click **Browse** to select the certificate file.
4. Click **OK**.

The imported certificate is displayed in the **CA Certificate** list.

If the certificate is used by certain functions, the function name is shown in the **Functions** column.

11.13.9 Control Timeout Settings

If this function is enabled, you will be logged out when you make no operation (not including viewing live image) to the device via web browser within the set timeout period.

Go to **Configuration → System → Security → Advanced Security** to complete settings.

11.13.10 SSH

Secure Shell (SSH) is a cryptographic network protocol for operating network services over an unsecured network.

Go to **Configuration → System → Security → Security Service** , and check **Enable SSH**.

The SSH function is disabled by default.



Caution

Use the function with caution. The security risk of device internal information leakage exists when the function is enabled.

11.13.11 User and Account

Set User Account and Permission

The administrator can add, modify, or delete other accounts, and grant different permission to different user levels.



Caution

To increase security of using the device on the network, please change the password of your account regularly. Changing the password every 3 months is recommended. If the device is used in high-risk environment, it is recommended that the password should be changed every month or week.

Steps

1. Go to **Configuration → System → User Management → User Management** .
2. Click **Add**. Enter **User Name**, select **Level**, and enter **Password**. Assign remote permission to users based on needs.

Administrator

The administrator has the authority to all operations and can add users and operators and assign permission.

User

Users can be assigned permission of viewing live video, setting PTZ parameters, and changing their own passwords, but no permission for other operations.

Operator

Operators can be assigned all permission except for operations on the administrator and creating accounts.

Modify Select a user and click **Modify** to change the password and permission.

Delete Select a user and click **Delete**.



Note

The administrator can add up to 31 user accounts.

3. Click **OK**.

Simultaneous Login

The administrator can set the maximum number of users logging into the system through web browser simultaneously.

Go to **Configuration → System → User Management** , click **General** and set **Simultaneous Login**.

Online Users

The information of users logging into the device is shown.


Go to **Configuration** → **System** → **User Management** → **Online Users** to view the list of online users.

Appendix A. FAQ

Scan the following QR code to find the frequently asked questions of the device.

Note that some frequently asked questions only apply to certain models.



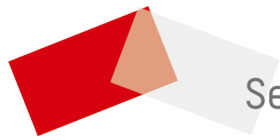

See Far, Go Further