

Cloud Registration

After activating Focsign Player on the Digital Signage (hereafter referred as “the device”), you can select **Cloud Registration** to register with HikMedio App or Portal.

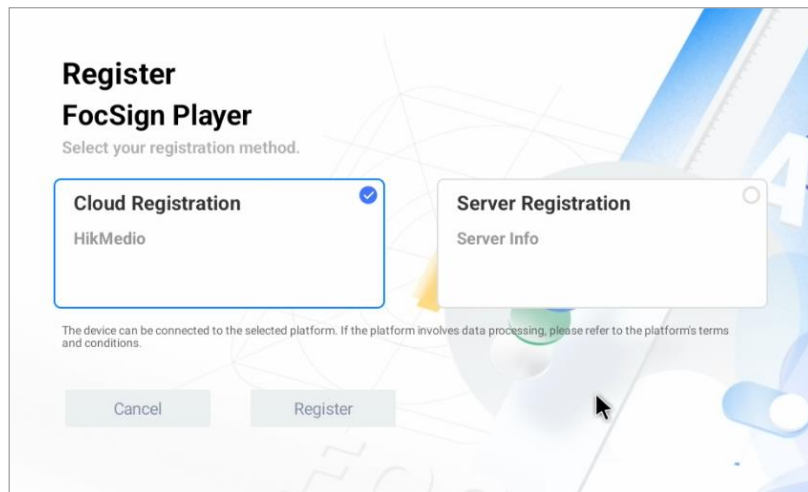


Figure 1-1 Select Cloud Registration

Steps

Step 1 Click **Cloud Registration** → **Register**, and enter the main page.

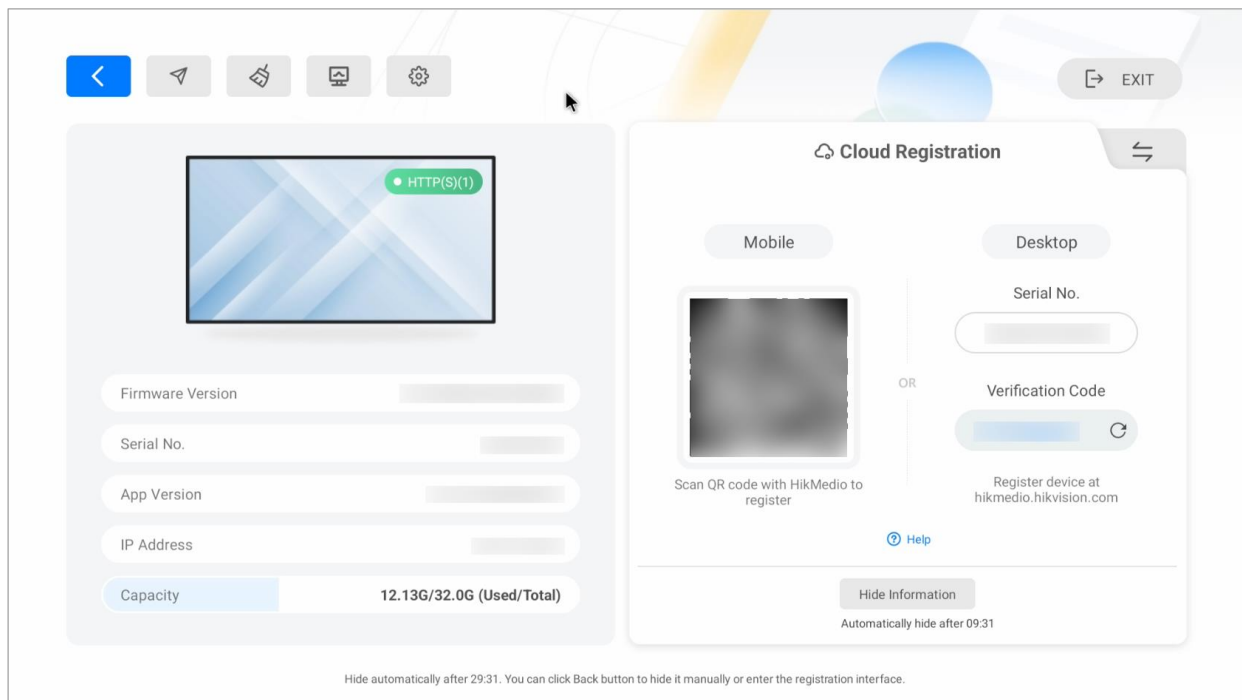


Figure 1-2 Cloud Registration Main Page

Step 2 Bind your device to the cloud portal via mobile or desktop.

- Mobile: Scan the QR code with HikMedio app to register.
- Desktop:
 - 1) Go to the HikMedio portal, and log in.
 - 2) Go to **Screen** → **Screen List**, and click **Add**.

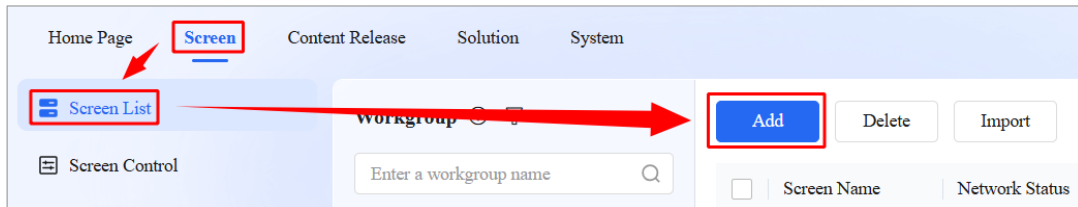


Figure 1-3 Add Devices

- 3) Enter device information. You can find the serial No. and verification code on the device main page.

A screenshot of the 'Add Screen' dialog box. It contains the following fields and options:

- Serial No.** (required, with a help icon): A text input field with 'Enter' as a placeholder and a character count of '0/13'.
- Verification Code** (required, with a help icon): A text input field with 'Enter' as a placeholder and a character count of '0/64'.
- Screen Name** (required): A text input field with 'Enter' as a placeholder and a character count of '0/64'.
- Workgroup** (required): A dropdown menu currently showing 'Platform Resource Workgroup'.
- Screen Time Zone:**
 - ☒ Get the time zone settings of the screen
 - ☐ Manually set the time zone (which will be automatically sent to the screen)
- A dropdown menu for the time zone, currently showing '(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Figure 1-4 Enter Device Information

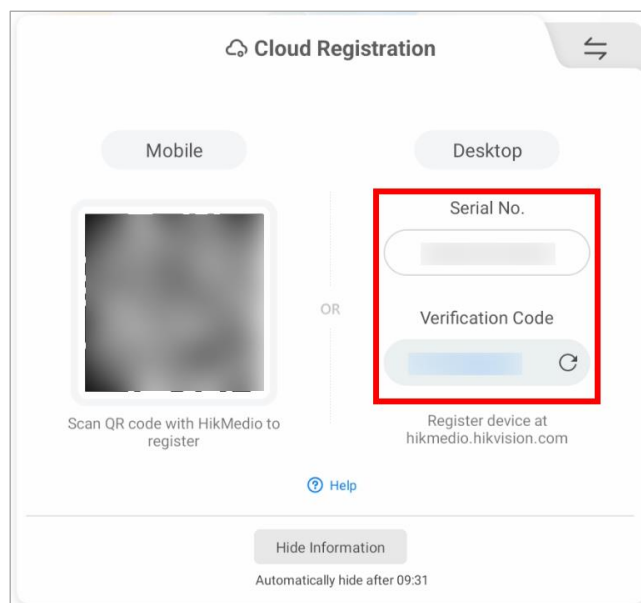


Figure 1-5 Serial No. and Verification Code

4) Click **OK**, and the device will be added to the cloud portal.

Step 3 Cloud registration finished. You can find “Bound” on the device.

Note

- You can get the HikMdideo App in HikMedio Portal or in the application store on your phone.
- For more operations on HikMedio app and portal, please scan the QR code below to find the user manual.



App



Portal

Figure 1-6 HikMedio User Manual